

Repair data package

Industrial enhanced-safety radio remote controls



UD Series - ***Level 2*** -

**Purpose of repair data package and
product intervention sheet**


Subfolder : DOSGEN R35 E00*



1

**Battery pack / Voltage adapter
UDB-UBC**


Subfolder: DOSGEN R25 E00*

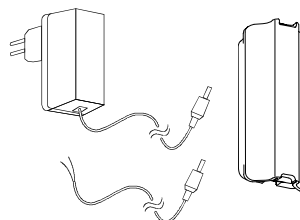

2

**Radio transmitter
UDE**


Subfolder: DOSGEN R26 E00*

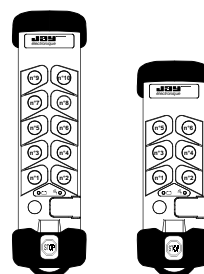

3

**Radio receiver
UDR**

 Subfolder: DOSGEN R27 E00*



4



**Acknowledgement
of receipt
of documentation**



UD repair data package v.3
Industrial enhanced-safety
radio remote control
UD series - level 2 -

Family name : _____ First name : _____ Company : _____

This will acknowledge receipt of the following document(s) :

CD-Rom with :

- Purpose of UD repair data package subfolder ref: DOSGENR35 E001 version
- UDB-UBC subfolder ref: DOSGENR25 E003
- UDE subfolder ref: DOSGEN R26 E003
- UDR subfolder ref: DOSGENR27 E003

Date : _____

Signature: _____



Please fill in and return (or fax) to :

JAY électronique, Eric DECHAME - service documentation

Address: 176, rue Lavoisier MONTBONNOT St MARTIN 38334 St ISMIER CEDEX - FRANCE

Tel: +33.(0)4.76.41.44.00

e.mail : doc@jay-electronique.fr

Fax: +33.(0)4.76.41.44.44

LE 23/07/2004 A 17:52:40 EDITION DE DOSSIER

DOS011

DOSSIER : DOSGEN R35 E 001
UD REPAIR DATA PACKAGE-GENERAL INF.+INTERV.SHEET

ARTICLE : DOSGEN R35

FOURNISSEUR : 38JA10

JAY ELECTRONIQUE S.A.

ETAT : VALIDE ET ACTIF

176 RUE LAVOISIER

38330 MONTBONNOT ST MARTIN

COMMENTAIRE :

DATE CREATION : 23.07.2004

DATE ENVOI FRS : 0.00.0000

DATE DE FIN : 0.00.0000

CONSULTAT. FRS : 0.00.0000

DATE ACC.RECEPT: 0.00.0000

DOSSIER SOURCE :

DOSSIER GENERAL DE PRODUCTION :

LIGNES ASSOCIEES

N°ORDRE	DOCUM/OUTIL	ETAT	DESIGNATION	
01	SN 350100 00	V	UD REPAIR DATA PACKAGE GENERAL INFORMATION	UD
02	SN 350110 00	V	HELP TO FILL IN UD INTERVENTION SHEET	UD
03	SN 350120 00	V	UD INTERVENTION SHEET	UD



Repair Data Package

UD Series

- level 2 -

CONTENTS

1- Purpose of repair data package	p. 2
2- Product maintenance process	p. 2
3- Product diagnostic sequence to be observed.....	p. 2
4- Content and breakdown of repair data package	p. 3
5- Safety precautions when intervening on equipment	p. 4
6- Tools required for repair	p. 5

Index	Modif. No.	Modification	Name	Date	Approved by:			
00	T 727	First issue	E.DECHAME	01.10.04	Tech:		Market:	
 BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: (0)4.76.41.44.00 Fax: (0)4.76.41.44.44	 UD repair data package general information		Format:	A4				
			Filename:	SN350100-00-EN.P65				
			DOC REF.:	SN350100.00	Page:	1 / 5		
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.								

1- Purpose of repair data package

You have just received a maintenance data package for a JAY électronique device.

This data package contains all the information you will need to efficiently intervene when performing maintenance on our product.

You will also find the necessary information to prepare a repair diagnostic and replace faulty sub-assemblies.

The repair data package is intended for:

- the JAY électronique maintenance department
- Service Stations certified by JAY électronique
- customers trained by JAY électronique.

The contents of this data package are detailed in section 4.




Do not forget to fill in and return the data package acknowledgment of receipt form in order to allow us to register, update and follow-up this data package.

2- Product maintenance process

PROCEDURE	DOCUMENTS	SPECIAL TOOLS
Fault isolation	Diagnostic sheets	YES
Product upgrade	Upgrade sheets	NO
Cost estimate preparation	Intervention sheets (to be filled in)	NO
Customer approval	Approved estimate	NO
Replacement of sub-assemblies	Sub-assembly replacement procedure	YES
Repaired product inspection	Final inspection sheet	YES

3- Product diagnostic sequence to be observed

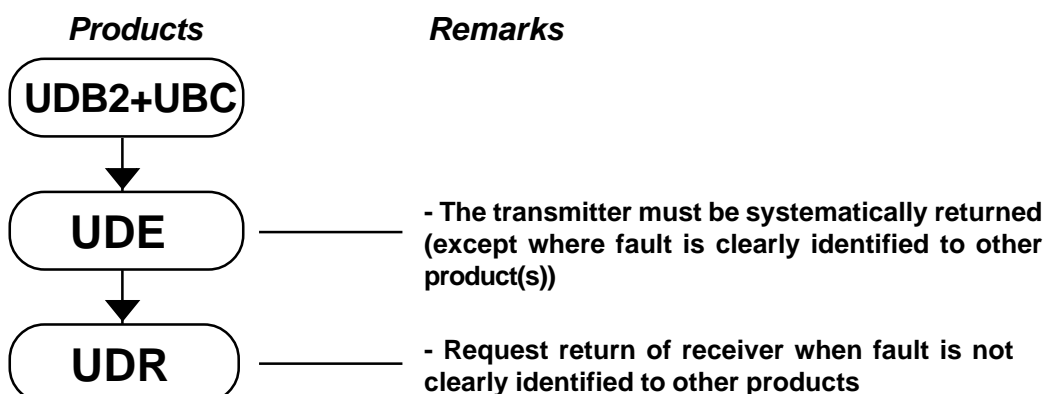

4- Content and breakdown of repair data package

- The repair data package is formed by sub-packages corresponding to each of the sub-assemblies of the product:
 - one sub-package for the General information, designated data package DOSGENR35
 - one sub-package for the UDB and UBC, designated data package DOSGENR25
 - one sub-package for the transmitter UDE, designated data package DOSGENR26
 - one sub-package for the receiver UDR, designated data package DOSGENR27
- Each of these sub-packages comprises:
 - a table of contents (indicating the general revision index for the sub-package and its content)
 - an exploded view of the product with the spare parts references (numbered SE....)
 - an upgrade document of product evolutions (numbered SN...)
 - a fast test, technical diagnostic and final test (numbered SJ ..., except for the UDB-UBC data package, there is only one technical diagnostic)
 - repair procedures, numbered SN....)

Repair data package - level 2 - UD series	1	- General information - Blank intervention sheets
	2	Repair data package for adapter/battery pack UDB-UBC
	3	Repair data package for transmitter UDE
	4	Repair data package for receiver UDR
	5	Installation and user technical manual (+ additive sheet(s) and corrective sheet(s))

Detail of contents of sub-packages:

		LE 19/10/1999 A 15:33:50 EDITION DE DOSSIER		DOS011
Data package designation	DOSSIER :	DOSGEN R01 F 002		Data package version (incremented on each modification, E001, E002, E003....)
		DOSSIER DE REPARATION EMETTEUR UFR/UPT		
	ARTICLE :	DOSGEN R01		
Additional remarks	FOURNISSEUR :	PRODUCE	PRODUCTION JAY SPECIAL POUR CALCUL DE BESOIN	
	ETAT :	VALIDE ET ACTIF		
	COMMENTAIRE :	NOTICE D'INSTALLATION UFR/UGR ET UPT/UGT FOURNIS		
Nbr of documents	DATE CREATION :	21.10.1998		
	DATE ENVOI FRS :	19.10.1999		
	DATE DE FIN :	0.00.0000		
	CONSULTAT. FRS :	0.00.0000		
	DATE ACC.RECEPT:	0.00.0000		
	DOSSIER SOURCE :	F 001		
	DOSSIER GENERAL DE PRODUCTION :			
An asterisk next to a document means that it has been modified or added with respect to the old version of the data package		LIGNES ASSOCIEES		
			Products family	
	N°ORDRE	DOCUM/OUTIL	ETAT	DESIGNATION
Document classification order	(*) 01	SN 010370 00	V	DEROULEMENT INTERVENTION SUR PRODUIT UF/UG(RT)/VUF
	02	SN 010200 01	V	FICHE D'INTERVENTION UF/UG(R-T)/VUF
	03	SN 010010 02	V	LISTE D'OUTILLAGE NECESSAIRE A LA MAINTENANCE UF*
	04	SE 010010 02	V	ECLATE DE L'UFR UFR

Data package update:

Technical documents are subject to change. Whenever applicable, we will systematically update you with the last versions and a new summary of the data packages.

This condition is subject to your returning the acknowledgement of receipt provided , duly filled in.

5- Safety precautions when intervening on equipment




Before intervening on equipment, be sure to observe the following precautions:


- A)** Shut down the receiver before you change any sub-assemblies.
- B)** Take all necessary precautions with respect to voltages present on control relay contacts.
- C)** Ensure that all voltages at terminal strips are at 0 V.
- D)** Use work stations equipped with protection systems against electrostatic discharges (conductors + bracelets) when handling electronic boards.
- E)** To maintain system tightness after reassembly, perform work on a clean, spacious workstation.
Ensure all seals and seal-bearing surfaces are clean when reassembling equipment.
- F)** Store disassembled parts and spare parts to avoid deterioration:
 - seals
 - seal bearing areas
 - electronic components
- G)** Ensure all personnel is protected when conducting tests.

6- Tools required for repair


6.1- Special test tools:

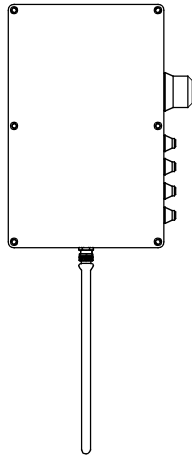


Test UDR receiver 3+6 relays
230 VAC
with IR and serial options
ref : UDR1AB11 011

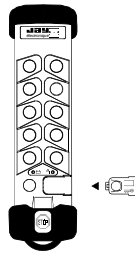

Test UDE
5 rows BPDV
(double speed pushbuttons)
with IR option
+ Grey electronic key
ref : UDE122222 010

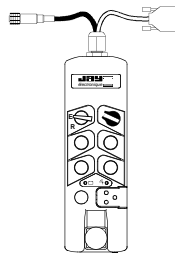


Test and programming tool
ref : PO1527

 


Equipped cover kit
for UDE v.D001 and higher
(6 pushbuttons)
ref : PR0209 6




Test transmitter radio
module
ref : PR0120 E

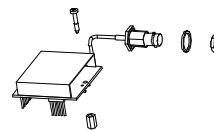

 Test receiver radio module
ref : PR0120 R (UDR v.A001 to B002 incl.)
and **PR0208 R** (UDR v.B003 and higher)



Test IR module
ref : UDF1

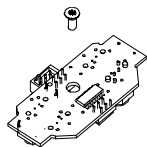


Set of button boards
ref : PR0117 1 to E




Test battery pack
réf : UDB2
+ test V.adapter
réf : UBC *




Screws + supply kit for UDE
ref : PR0141 (UDE v.A001 to C002 incl.)
and **PR0230** (UDE v.D001 and higher)
(see doc.SE260310)

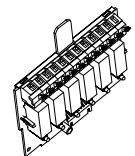

Test relay board
ref : PR0122

 

 Repair label
(roller of 1000 labels)
ref : PR0229



Spanners kit for
receiver UDR :
- Pg29
- serial option
ref : PR0142



 
**For UDE version from
A001 to C002 included :**
Tool for assembly /
disassembly the stop
palmswitch button
ref : PR0130



DialogUD software
(version 5.1 or +)
(with cable)
ref : UDWR36



Serial link accessory
ref : UDWR32



Connection kit
ref : PR0116
(see doc.SE260310)

+ PC micro-computer 486 DX4 100Mhz min.,
windows 95-98-Me-2000-XP
32MB RAM + serial port

6.2- Standard tools :

- Screwdriver, TORX No. 10
- Screwdriver, POSIDRIV No. 2
- Screwdriver, POSIDRIV No. 1
- 4mm tubular socket wrench
- 2.5mm hex head wrench
- 6mm flat tip screwdriver
- 16mm box wrench
- Electronics technician flat nose pliers
- Cutter
- Soldering iron

6.3- Measures :

- Digital multimeter
- Battery test tool ref:PO1572 (only on JAY Electronique plant)

6.4- Power supplies :

- Stabilised power supply 0-24VDC / 1 A min. with fine voltage adjustment (tenth of a volt).
- AC power supply 24-48 VAC / 1 A min.

Help to fill the UD intervention sheet

1- Terms used in maintenance interventions and invoicing

1.1- Type of intervention

Repair (REP) :

Return to serviceable condition following diagnostic, by replacement of sub-assembly(s).

Overhaul (REV) :

Upgrading of sub-assemblies to integrate product evolutions.

Ex: replacement of wiring to prevent disconnection...

Modification (TRA) :

Modification of a product function subsequent to a customer request.

Ex: Change of type of button...

Preventive maintenance (MPR) :

Proposal for replacement of sub-assembly(s) to prevent deterioration of a component, or a missing part.

Ex: oxydised connector, housing which is no longer watertight, etc.

1.2- Type of invoicing

Covered by warranty (SG) :

The cost of the repair is covered by the company for the product warranty period.

Covered by repair warranty (SGR) :

The cost of the repair is covered by the company for the warranty period related to a repair already performed on a product.

Not covered by warranty (HG) :



The cost of repair, overhaul, preventive maintenance or modification of the product are for the customer's account.

2- Fault codes list to be put back on the intervention sheet

Choose for each replaced parts the most significant default code among the following list:

Fault codes	Description
A00	Mechanical part cracked
A01	Internal mechanical part broken
A02	Mechanical part deformed
A03	external mechanical part broken
A05	Housing not tight
A07	Button broken or cracked
A09	Poor tightness
A10	Damaged strap
A11	Faulty stop palmswitch
A13	Mechanical part uncoupled
A15	IR window broken
A16	Button contact fault
A17	Mechanical part very dirty
A18	Mechanical part modified by third party
B00	Wiring oxydised
B01	Wiring broken
B02	Wiring disconnected
B04	Cable oxydised
B05	Cable cut
B07	Battery worn out
B08	Wiring stripped

Fault codes	Description
C01	Malfunction
C03	Microswitch failure
C04	Power supply fault
C05	Detection (voltage level) fault
C06	Electronic board oxydised
C07	Electronic board modified by third party
C08	Electronic component deteriorated
C10	Relay contact failure
C16	Microswitch damaged
D00	Connector oxydised
D01	Connector deformed
D02	Connector broken
D03	Bad connector connection
E02	Label not legible
F00	Oxydised screws
F02	Broken screws
F03	Seal cut
F04	Seal cracked
G00	Fuse failure
G02	Missing fuse

Index	Modif. No.	Modification	Name	Date	Approved by:		
00	T 727	First issue	E.DECHAME	07.06.04	Tech:		Market:
  BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: (0)4.76.41.44.00 Fax: (0)4.76.41.44.44			Format:		A4		
			Filename:		SN350110-00-EN.P65		
			DOC REF.:		SN350110.00		Page:
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.							

INTERVENTION SHEET - UDB2 - UDE - UDR Products



E-mail :
service.client@jay-electronique.fr
Web : Http://www.jay-electronique.fr

176 rue Lavoisier - MONTBONNOT ST MARTIN
38334 ST ISMIER CEDEX - FRANCE
Tel : +33.(0)4.76.41.44.00 - Fax: +33.(0)4.76.41.44.44

Intervention ref:

Diagnostic date :

Repair date :

USER

Company / contact :

Address:

Tel.:

Fax:

INTERVENTION

Jay: ☐

Agent : ☐

Name :

Tel.:

Fax:

Faults indicated by user:

Intervention and invoicing information:

Type of intervention: **REP**: Repair / **REV**: Overhaul / **MPR**: Preventive maintenance. / **TRA**: Modification.

Type of invoicing: **SG**: covered by warranty / **HG**: not covered by warranty / **SGR**: covered by warranty after repair.

Note: For a functional sub-assembly upgrade (REV) or a modification (TRA), enter code X99 in the fault code box for the part.

For a missing part, please tick the fault code X97 and fill in the information for the corresponding sub-assembly.

Return of complying product

In the event of a product returned alone, or a system (example: transmitter, receiver, etc.), verified as compliant, tick fault code X95 (line ZCONF1).

For a system (example: transmitter, receiver, ...) for which only one part is compliant (example: transmitter), tick fault code X95 (line ZCONF2).

Return of unrepairable product

For a product returned which cannot be repaired, tick fault code X96 (line ZNOREP).



Diagnostic result
UDE - UDB2 - UBCx

UDE _ _ _ _ _

Compl.ref : _ _ _

Date of manufacture :

Serial N° / OF :

Date last repair / reference :

Options list :

Identity code :

Radio channel nb :

Dead man duration :

Intervention ref :

date of diagnostic :

date of repair :

Reference (to be filled in)	Description of spare part	Fault code	Type of intervention				Type of invoice			Price (Tax-exc.)
			REP	REV	MP	TRA	SG	HG	SGR	
PR0057 BP	Mechanical kit for pushbutton and BPTR									
PR0057 COM	Mechanical kit for rotary switch									
PR0115	Stop palmswitch button for UDE version A001 to C002 included									
PR0116	Transmitter connection kit									
PR0117 _	Button board									
PR0117 _	Button board									
PR0117 _	Button board									
PR0117 _	Button board									
PR0120 E	Radio module									
PR0141	Screws + supply for UDE version A001 to C002 included									
PR0230	Screws + supply for UDE from version D001									
PR0143	Protective foams									
PR0148	Connector + cable for UBCU/UBCW									
PR0207 _	Transmitter Motherboard									
PR0212 _	Transmitter back housing									
PR0209 _	Equipped cover without IR option									
PR0210 _	Equipped cover with IR option									
PR0215 _	Equipped housing without IR option									
PR0217 _	Equipped housing with IR option									
UBC _	Adaptater (charging UDB2) / battery pack connector									
UDB2	Battery pack									
UDC1	Wall support									
UDP1	Shoulder strap									
UDWE22 _	Grey electronic key									
UWE102	Removable shoulder strap									
UWE202	Kit of 6 colored labels "movements" for pushbuttons									
UWE203	Kit of 18 b/w labels "special movements"									
UWE204	Kit of 30 b/w labels "special functions" n°1									
UWE205	Kit of 48 blank labels "custmization"									
UWE206	Kit of 30 b/w labels "special functions" n°2									
-----	Missing part	X97								
-----	Missing part	X97								
ZCONF1	Functional check OK (product alone)	X95								
ZCONF2	Functional check OK (product associated)	X95								
ZNOREP	Unrepairable product	X96								
Labour :										
Sub Total (TE.)										

	Diagnostic result UDR	UDR _ _ _ _ _	Compl.ref : _ _ _
--	--	----------------------	--------------------------

Date of manufacture :
 Serial nb / OF :
 Date of last repair / reference :
 Option list (if exist) :

Identity code :
 Radio channel nb :

intervention ref. :
 date of diagnostic :
 date of repair :

Reference (to be filled in)	Description of spare part	Fault code	Type of intervention				Type of invoice			Price (Tax-exc.)
			REP	REV	MP	TRA	SG	HG	SGR	
PR0122	6 relays board									
PR0123	Fuse kit									
PR0124 _	Receiver motherboard									
PR0125 _	Receiver housing									
PR0127	Rubber cable gland kit									
PR0133	IR window for UDF module									
PR0134	IR module electronic board									
PR0138	Serial option									
PR0120 R	Radio module for UDR version A001 to B002 included									
PR0208 R	Radio module for UDR from version B003									
UDF1	1 UDF IR module + 10m cable kit									
UDF2	2 UDF IR module + 10m cable kit									
UDWR _	16 or 24 pin male connector + cable									
UDWR10	10 m cable extension kit for UDF IR module									
UDWR11	Plastic cable gland kit									
UDWR12	Common wiring accessory									
UDWR32	Serial link accessory									
VUB084	1/4 wave antenna 400 MHz									
VUB08 _	Other 400 MHz Antenna									
VUB1 _ _	Receiver antenna extension 5m + support									
VUB100	Receiver antenna extension 2m + support									
_ _ _ _ _	Missing part	X97								
_ _ _ _ _	Missing part	X97								
ZCONF1	Functional check OK (product alone)	X95								
ZCONF2	Functional check OK (product associated)	X95								
ZNOREP	Unrepairable product	X96								
										Labour :
										Sub Total (TE.)

LE 25/11/2004 A 12:03:53 EDITION DE DOSSIER

DOS011

DOSSIER : DOSGEN R25 E 003
UD REPAIR DATA PACKAGE : UDB2-UBC PART

ARTICLE : DOSGEN R25

FOURNISSEUR : 38JA10

JAY ELECTRONIQUE S.A.

ETAT : VALIDE ET ACTIF

176 RUE LAVOISIER
38330 MONTBONNOT ST MARTIN

COMMENTAIRE :

DATE CREATION : 26.07.2004
DATE ENVOI FRS : 0.00.0000
DATE DE FIN : 0.00.0000
CONSULTAT. FRS : 0.00.0000
DATE ACC.RECEPT: 0.00.0000

DOSSIER SOURCE : E 002

DOSSIER GENERAL DE PRODUCTION :

LIGNES ASSOCIEES

N°ORDRE	DOCUM/OUTIL	ETAT	DESIGNATION	
* 01	SN 250040 02	V	LIST OF TOOLS	UDB2-UBC
* 02	SE 250020 02	V	PRODUCTS REFERENCES	UDB2-UBC
* 03	SN 250050 02	V	CHANGES AND UPGRADES	UDB2-UBC
* 04	SJ 250020 02	V	TECHNICAL DIAGNOSTIC	UDB2-UBC
05	SN 250060 01	V	BATTERY PACK TEST PROCEDURE	UDB2-UBC

Tools required for diagnostic on battery pack and adapter

○ Mechanical part:

- No special tools required



○ **Measurement and test part:**


- Multimeter equipped with test points
- Battery test tool ref : PO1572 (Only for JAY Electronique plant)

- UBCU - UBCW test adapter


or

- Stabilised power supply, 0-24VDC / 1 A min. + UBC1.

Index	Modif. No.	Modification	Name	Date	Approved by:			
02	T 727	PO1572 Battery test tool	E.DECHAME	01.10.04	Tech:		Market:	
01	T 727	Update for UDB2	E.DECHAME	05.09.01	Tech:		Market:	
00	T 727	First issue	E.DECHAME	24.01.01	Tech:	DPO	Market:	GR
  <p>BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</p>		<p>List of tools</p> <p>UBC - UDB2</p>	Format:	A4				
			Filename:	SN250040-02-EN.P65				
			DOC REF.:	SN 250040.02		Page:	1 / 1	
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.								

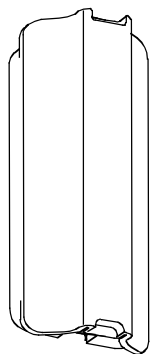


Battery
pack
UDB2

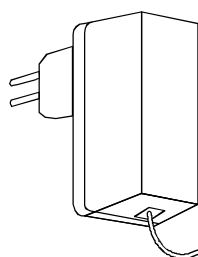

Adapter
230VAC (Euro. plug) / 12 VDC
UBCU

Connector + cable
for UBCU and UBCW
PR0148

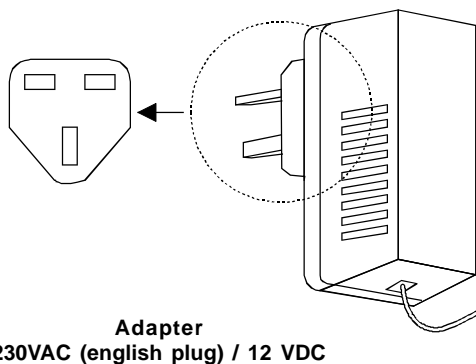


Adapter
230VAC (english plug) / 12 VDC
UBCW

10 - 30VDC




Battery connector (vehicle plug)
UBC1

Black/white wire = +

Index	Modif. No.	Modification	Name	Date	Approved by:			
02	T 727	PR0148 added	E.DECHAME	10.06.04	Tech:		Market:	
 BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44		Products references UBC - UDB2	Format:	A4				
			Filename:	SE250020-02-EN.P65				
			DOC REF.:	SE 250020.02	Page:	1 / 1		
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.								

Changes and upgrades - Battery pack UDB2

Table of changes :

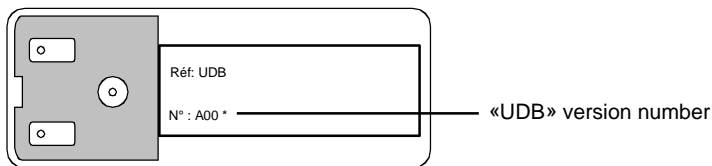


UDB

UDB Battery pack version number	Change description	Dates
A001	1st version	04/2000 - 09/2000
A002	Pack tightness improved	09/2000 - 10/2000
A003	Shock resistance improved	10/2000 - 11/2000
A004 or A005	Polyswitch on electronic circuit eliminated	11/2000 - 02/2001



Changing the product
reference
UDB -> UDB2

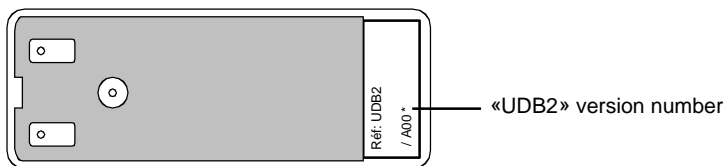




 
UDB2

UDB2 Battery pack version number	Change description	Dates
A001	Major change Increase autonomy by NiMH technology	02/2001 - 01/06/2001
A002	Connexion improved (Golden contacts) board re-routing	01/06/2001 - 15/06/2001
A003	Contact improved with transmitter housing contact-pins	15/06/2001 - 12/2002
A004	minor change	12/2002 - 01/2004
A005	minor change	since 01/2004

Obligatory upgrade :

Battery pack «**UDB**» must be systematically replaced by «**UDB2**» **A003 min.** version.

Index	Modif. No.	Modification	Name	Date	Approved by:			
02	T 727	Updates for UDB2	E.DECHAME	28.06.04	Tech:		Market:	
<div><p>BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</p></div>		Changes to battery packs UDB2	Format:	A4				
			Filename:	SN250050-02-EN.P65				
			DOC REF.:	SN 250050.02	Page:	1 / 1		
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.								



TECHNICAL DIAGNOSTIC: UBC-UDb2

- For preparation of estimate -

PRODUCT
INTERVENTION
SHEET
(TO BE COMPLETED)

Tools

Additional
information

sub-assy to be
replaced

START

Check of changes to battery packs

Check compliance of battery pack

See document
"Changes to
battery packs"
SN250050

Battery pack complies with respect
to technical changes table?

no

UDb2
Battery pack

yes

Visual inspection of adapter

Check condition of adapter, connector, jack and wires

Adapter in good condition ?

no

UBC•
adapter
or
PR0148
connector + cable
(P.M.)

yes

Functional check of adapter

UBCU - UBCW

UBC1

Connect the adapter to the
mains and measure the
output voltage

Check continuity of wiring

Multimeter in
voltmeter
mode

Multimeter in
ohmmeter
mode

Voltage output is
12 volts ?

no

Wiring continuity
OK?

no

UBC•
adapter
or
PR0148
connector + cable
(P.M.)

yes

yes

Visual inspection of battery pack

Check condition of seal, shell and strength of pack once inserted
in back of transmitter

Battery pack in good condition

no

UDb2
Battery pack
(P.M.)

yes

Functional check

Connect battery pack to adapter or
power supply using Jack cable

Check if battery pack red LED comes on

Battery pack red LED comes on ?



no

UDb2
Battery pack

yes Continued
on page 2


Symbols/abbreviations :

➡ : Continue Diagnostic
■ : Stop Diagnostic
P.M. : Preventive Maintenance

Index	Modif. No.	Modification	Name	Date	Approved by:		
02	T 727	PR0148 Added Specific tool : PO1572	E.DECHEME	04.10.04	Tech:		Market:
<div></div> <p>Technical diagnostic UBC - UDB2</p> <p>BPS - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</p>			Format:	A4			
			Filename:	SJ250020-02-EN.VSD			
			DOC REF.:	SJ 250020.02	Page:	1 / 2	
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.							

This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.

**PRODUCT
INTERVENTION
SHEET**
(TO BE COMPLETED)

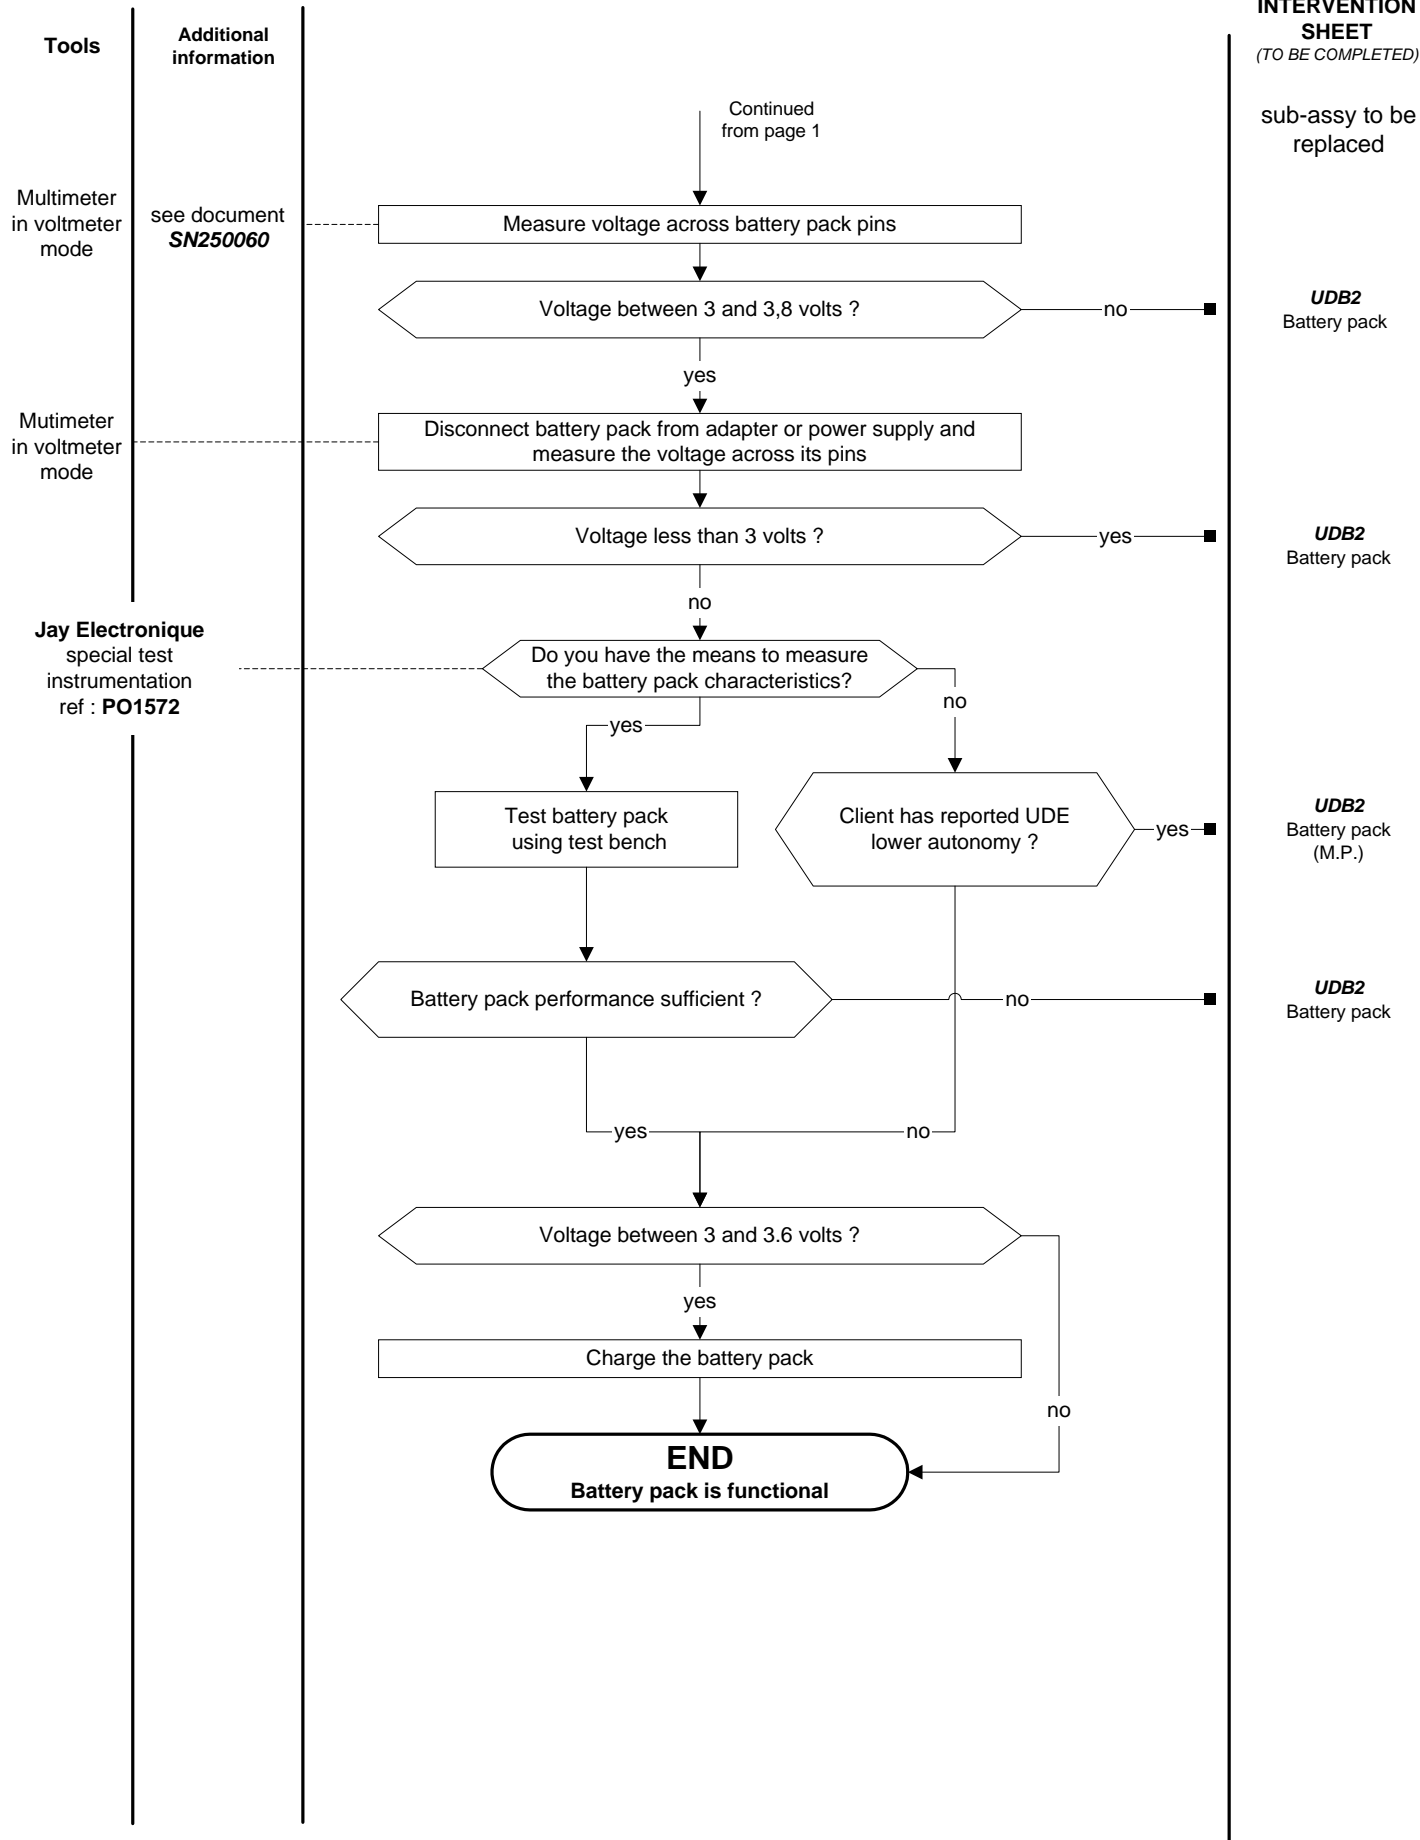

Symbols / abbreviations :

→: Continue Diagnostic
— ■ Stop Diagnostic



This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.

DOSSIER : DOSGEN R26 E 003
UD REPAIR DATA PACKAGE : UDE TRANSMITTER PART

ARTICLE : DOSGEN R26

FOURNISSEUR : 38JA10

JAY ELECTRONIQUE S.A.

ETAT : VALIDE ET ACTIF

176 RUE LAVOISIER

38330 MONTBONNOT ST MARTIN

COMMENTAIRE :

DATE CREATION : 26.07.2004
DATE ENVOI FRS : 0.00.0000
DATE DE FIN : 0.00.0000
CONSULTAT. FRS : 0.00.0000
DATE ACC.RECEPT: 0.00.0000

DOSSIER SOURCE : E 002

DOSSIER GENERAL DE PRODUCTION :

LIGNES ASSOCIEES

N°ORDRE	DOCUM/OUTIL	ETAT	DESIGNATION	
* 01	SN 260220 02	V	LIST OF TOOLS	UDE
* 02	SN 260225 00	V	DETERMINE VERSION OF UDE TRANSMITTER	UDE
* 03	SE 260201 00	V	EXPLODED VIEW / UDE VERSION A001 TO A005 INCL.	UDE
* 04	SE 260202 00	V	EXPLODED VIEW / UDE VERSION A006 TO A010 INCL.	UDE
* 05	SE 260203 00	V	EXPLODED VIEW / UDE VERSION B001 TO B004 INCL.	UDE
* 06	SE 260204 00	V	EXPLODED VIEW / UDE VERSION B005 TO B010 INCL.	UDE
* 07	SE 260205 00	V	EXPLODED VIEW / UDE VERSION C001 TO C002 INCL.	UDE
* 08	SE 260206 00	V	EXPLODED VIEW / UDE VERSION D001 TO D002 INCL.	UDE
* 09	SE 260207 00	V	EXPLODED VIEW / UDE VERSION D003	UDE
* 10	SE 260300 00	V	UDE LABEL KITS FOR VERSION A001 TO C002 INCL.	UDE
* 11	SE 260301 00	V	UDE LABEL KITS FOR VERSION D001 AND HIGHER	UDE
* 12	SE 260310 00	V	TRANSMITTER SCREW KIT AND ACCESSORIES	UDE
* 13	SN 260230 02	V	UPGRADING THE TRANSMITTER	UDE
* 14	SJ 260040 02	V	QUICK TEST BEFORE INTERVENTION	UDE
* 15	SJ 260050 02	V	TECHNICAL DIAGNOSIS	UDE
* 16	SJ 260060 02	V	FINAL TEST AFTER INTERVENTION	UDE
* 17	SN 260235 00	V	UPGRADING TRANSMITTER INTERNAL PROGRAMM	UDE
* 18	SN 260240 02	V	CONNECTING A POWER SUPPLY TO TRANSMITTER	UDE
* 19	SN 260250 02	V	TEST OF STOP PALMSWITCH BUTTON	UDE
* 20	SN 260260 02	V	CHANGING THE TRANSMITTER COVER AND HOUSING	UDE
* 21	SN 260265 01	V	CHANGING THE PROTECTIVE FOAMS	UDE
* 22	SN 260290 02	V	CHANGING THE PUSHBUTTON MECHANICAL KIT	UDE
* 23	SN 260300 02	V	CHANGING THE ROTARY SWITCH MECHANICAL KIT	UDE
* 24	SN 260310 02	V	CHANGING STOP PALM.BUT. ON UDE V.A001 TO C002	UDE
* 25	SN 260320 02	V	CHANGING A FUNCTION BUTTON BOARD	UDE
* 26	SN 260350 02	V	CHANGING THE MOTHERBOARD WITHOUT IR START-UP	UDE
* 27	SN 260355 00	V	CHANGING THE MOTHERBOARD WITH IR START-UP	UDE
* 28	SN 260360 02	V	CHANGING THE RADIO MODULE	UDE
* 29	SN 260380 02	V	MARKINGS ON REPAIRED TRANSMITTER	UDE

List of tools required for repair of transmitter UDE

○ Mechanical part:

All UDE versions :

- No. 10 Torx screwdriver (for housing screws)
- No. 1 Posidriv screwdriver (for button board and mechanical kit)
- 2.5mm Allen wrench (for motherboard / radio module mounting screws)
- Cutter (to unfasten function labels)
- Flat angled plier (for assembly/disassembly of IR Option)





UDE version A001 to C002 only :

- No. 2 Posidriv screwdriver (for housing screws)
- 4mm tubular socket wrench (for power supply connection pins and electronic key)
- Tool **PR0130** (for assembly/disassembly of stop palmswitch button)

○ Measurement and test part:

All UDE versions :

- 0-24VDC / 1 A min. stabilised power supply with fine adjustment to 1/10th of a Volt
- Digital multimeter
- PC micro-computer with serial port
- Serial link accessory, ref. **UDWR32**
- «Dialog UD» software (version 5.1 minimum), ref. **UDWR36**
- Programming tool, ref. **PO1527**
- Test battery pack, charged, ref. **UDB2**
- Test receiver, ref : **UDR1AB11 011**
- Test UDF ref : **UDF1**
- Screws + supply kit : **PR0230** (from D001) or **PR0141** (version A001 to C002 included)
- Test function button boards, ref : **PR0117 1 to E**
- Test blank grey electronic key, ref : **UDWE22 V**
- Test radio module, ref : **PR0120 E**


Index	Modif. No.	Modification	Name	Date	Approved by:			
02	T 727	New spare parts and accessories	E.DECHAME	10.06.04	Tech:		Market:	
<div></div> <p>BPS - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</p>		<div>List of tools</div> <div>UDE</div>	Format:	A4				
			Filename:	SN260220-02-EN.P65				
			DOC REF.:	SN 260220.02	Page:	1 / 1		
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.								

Determine version of UDE transmitter

The version number is indicated on the nameplate, fastened to the back of the transmitter where the battery pack is located.

The number identifies the UDE version and therefore its various technical changes.

The table of technical changes (doc. SN260230) indicates all the upgrades which you need to perform on the UDE transmitter in accordance with its version number.

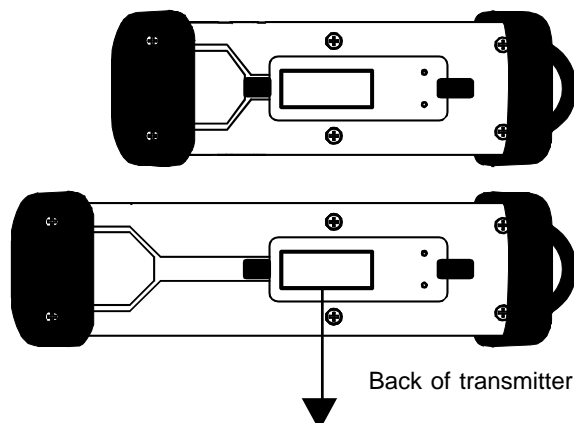




Labels for UDE vers. A001 to B010

JAY électronique		F 38330 Montbonnot-St-Martin
Ref : UDE	Code :	
Freq : 433.050 .. 434,790MHz		
Serie : .. / xxxx		
Date : .. / ..	IP65 CE 0165 !	


UDE Version
number
(i.e : C001)

Labels for UDE vers. from C001




JAY électronique		F 38330 Montbonnot
Ref : UDE		
Freq : 433.050 .. 434,790MHz		
Serie : .. / xxxx		
Date : .. / ..	IP65 CE	

Index	Modif. No.	Modification	Name	Date	Approved by:			
00	T 727	first issue	E.DECHAME	10.06.04	Tech:		Market:	
<div> BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</div>	Determine the version of transmitter UDE		Format:	A4				
			Filename:	SN260225-00-EN.P65				
			DOC REF.:	SN 260225.00	Page:	1 / 1		
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.								

 Note : The figure below shows a transmitter with 6 function buttons




X — Description
Y — Reference
doc. Z — assembly/disassembly procedure

Index	Modif. No.	Modification	Name	Date	Approved by:			
00	T 727	first issue	E.DECHAME	10.06.04	Tech:		Market:	
<div></div> <div>BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</div>		Exploded view	Format:	A4				
		UDE	Filename:	SE260201-00-EN.P65				
		version A001 to A005	DOC REF.:	SE260201.00	Page:	1 / 1		
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.								

UDE exploded view for version A006 to A010 included

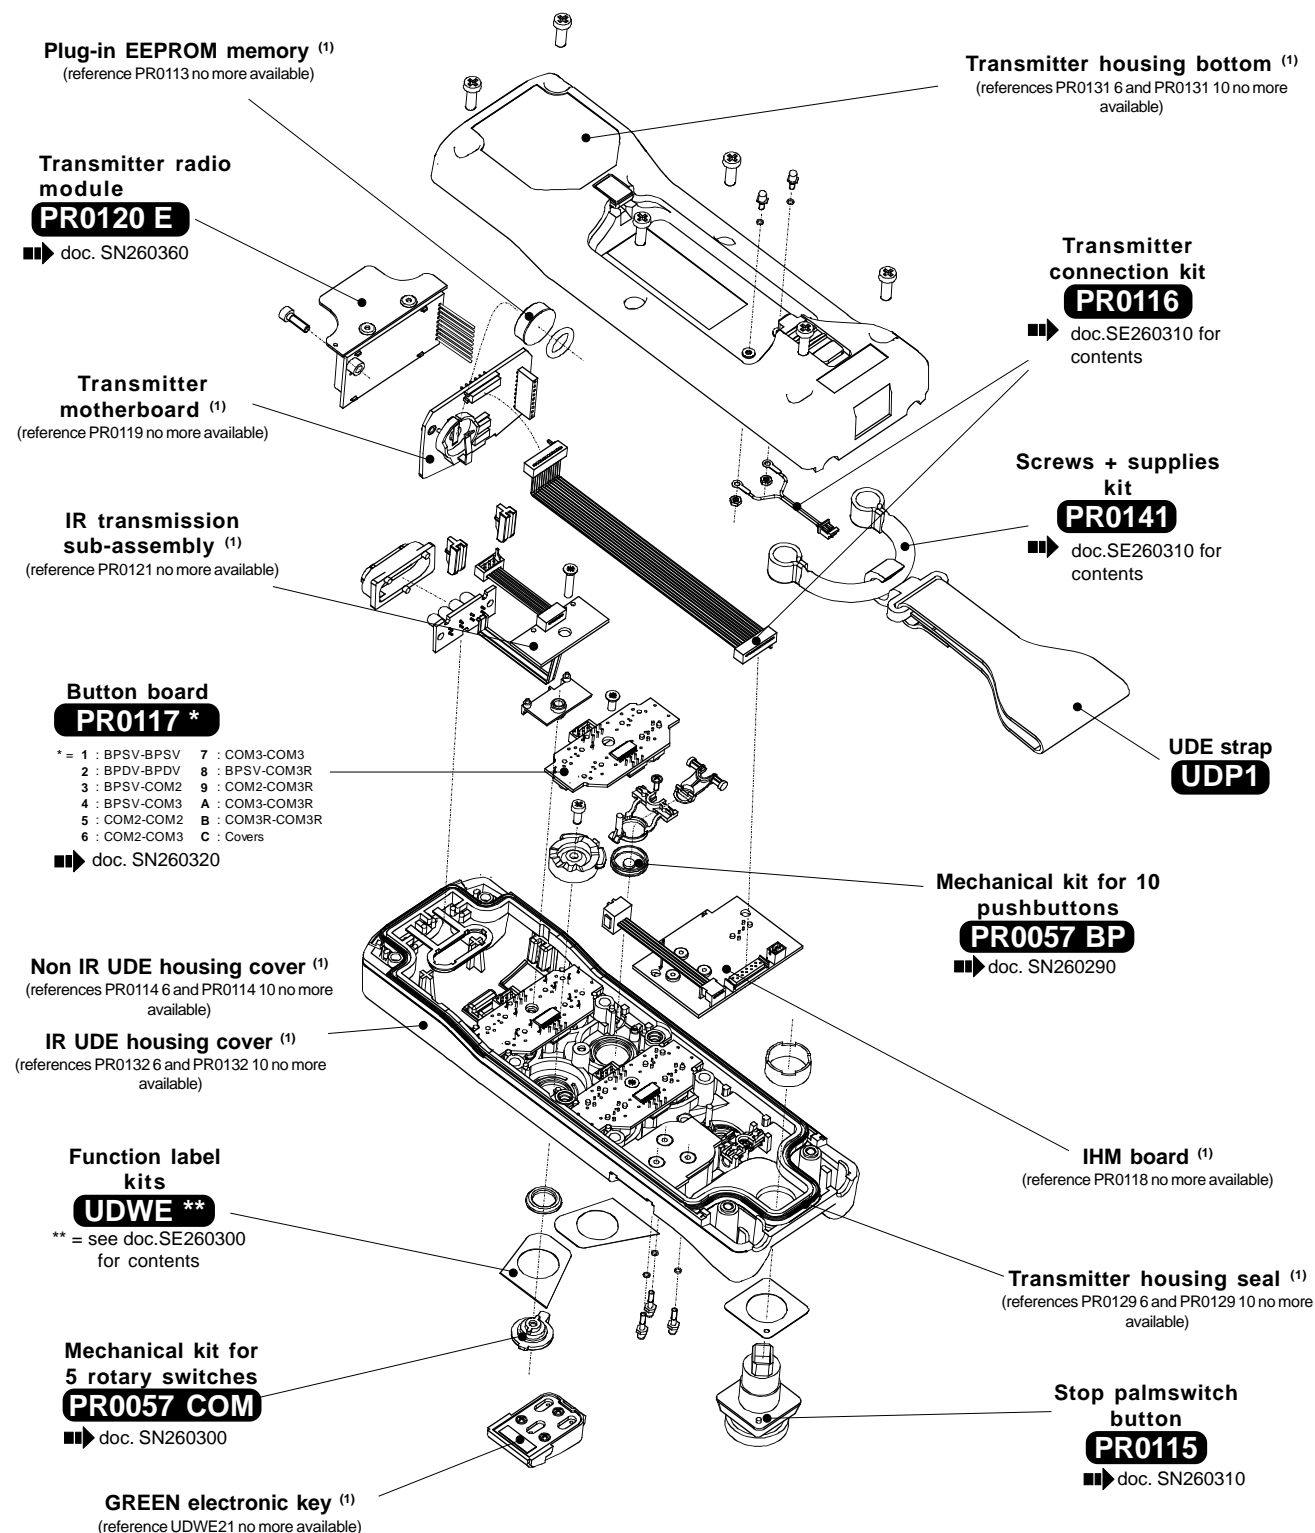

Note : The figure below shows a transmitter with 6 function buttons



(1) : This part has undergone major technical changes; the transmitter must therefore be upgraded accordingly. Refer to instructions in document **SN260230**

Legend :


X — Description
Y — Reference
doc. Z — assembly/disassembly procedure

Index	Modif. No.	Modification	Name	Date	Approved by:			
00	T 727	first issue	E.DECHAME	10.06.04	Tech:		Market:	
<div> BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</div>		Exploded view UDE version A006 to A010	Format:	A4				
			Filename:	SE260202-00-EN.P65				
			DOC REF.:	SE260202.00	Page:	1 / 1		
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.								

This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.

UDE exploded view for version B001 to B004 included

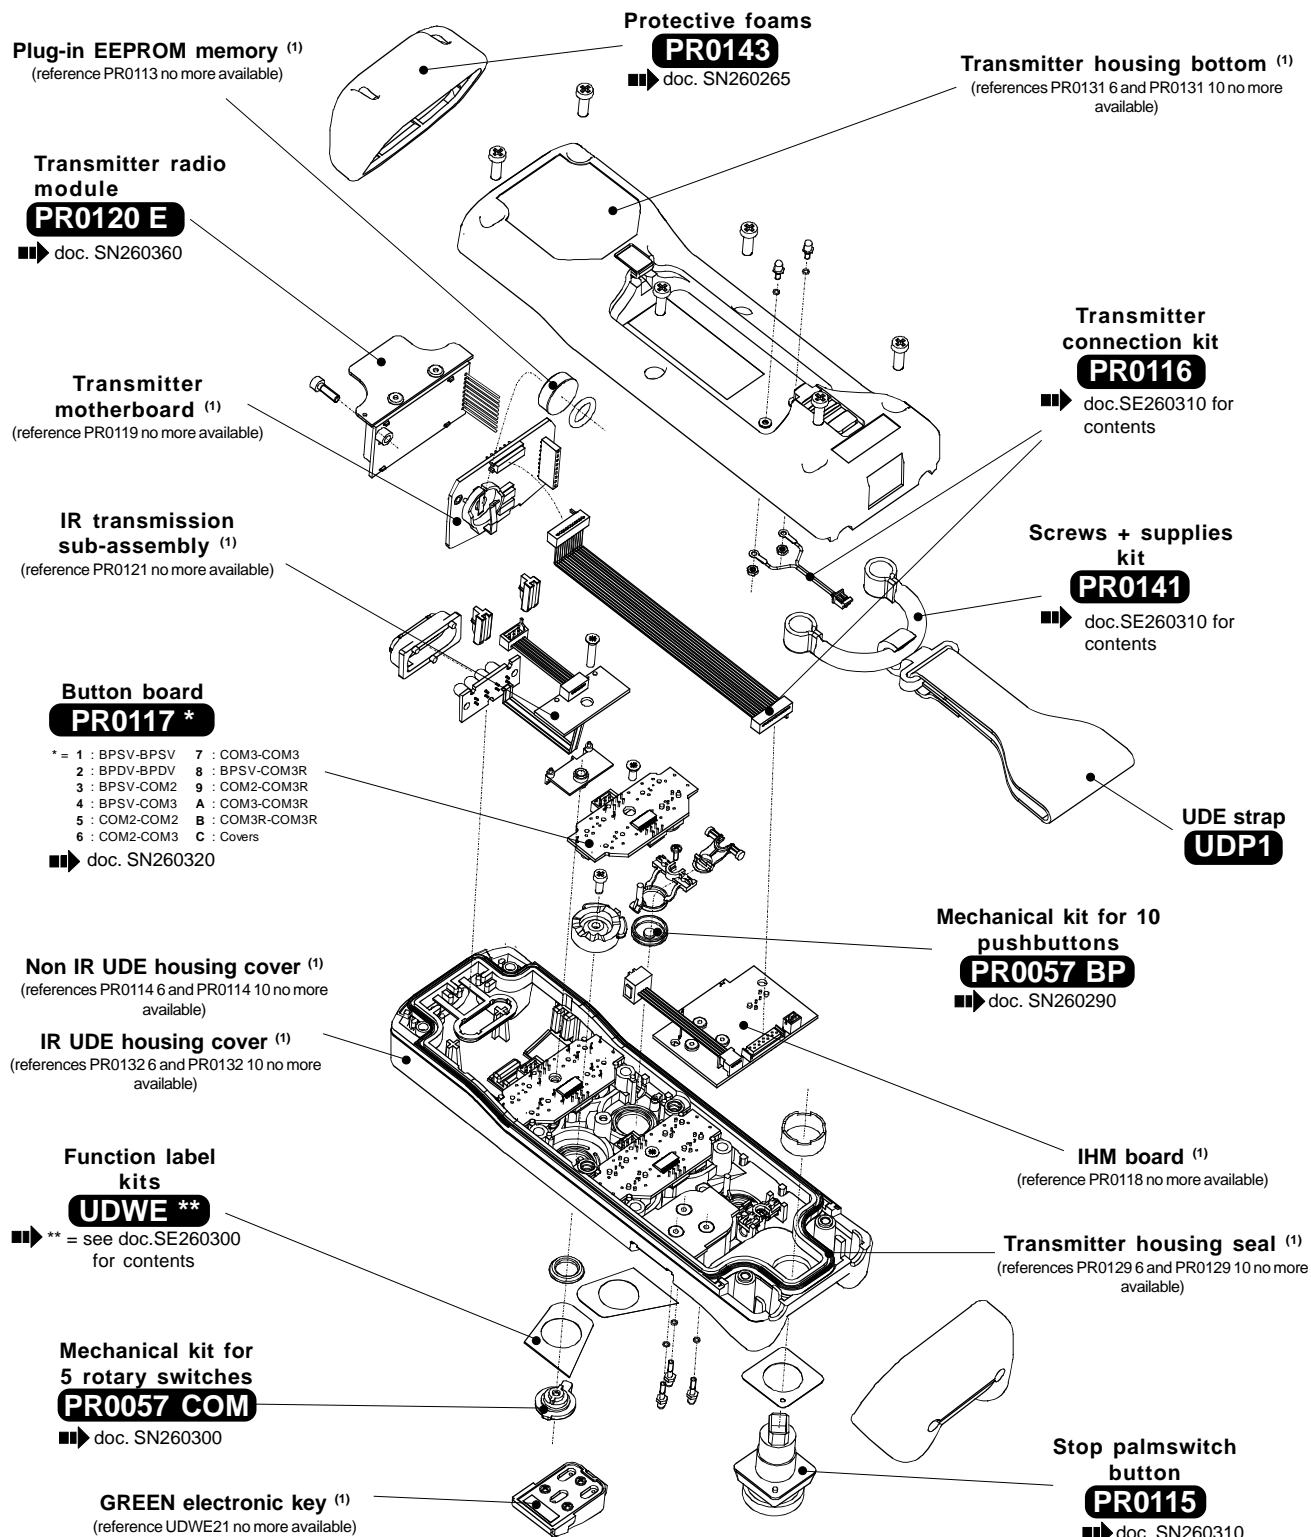

Note : The figure below shows a transmitter with 6 function buttons



(1) : This part has undergone major technical changes; the transmitter must therefore be upgraded accordingly. Refer to instructions in document **SN260230**


Legend :

X — Description
Y — Reference
doc. Z — assembly/disassembly procedure

Index	Modif. No.	Modification	Name	Date	Approved by:			
00	T 727	first issue	E.DECHAME	10.06.04	Tech:		Market:	
<div> BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</div>		Exploded view UDE version B001 to B004	Format:	A4				
			Filename:	SE260203-00-EN.P65				
			DOC REF.:	SE260203.00	Page:	1 / 1		
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.								

This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.

 Note : The figure below shows a transmitter with 6 function buttons




X — Description
Y — Reference
doc. Z — assembly/disassembly procedure

This document is the property of Jav Electronique. Reproduction or disclosure prohibited without written authorization.

UDE exploded view for version C001 to C002 included

Note : The figure below shows a transmitter with 6 function buttons

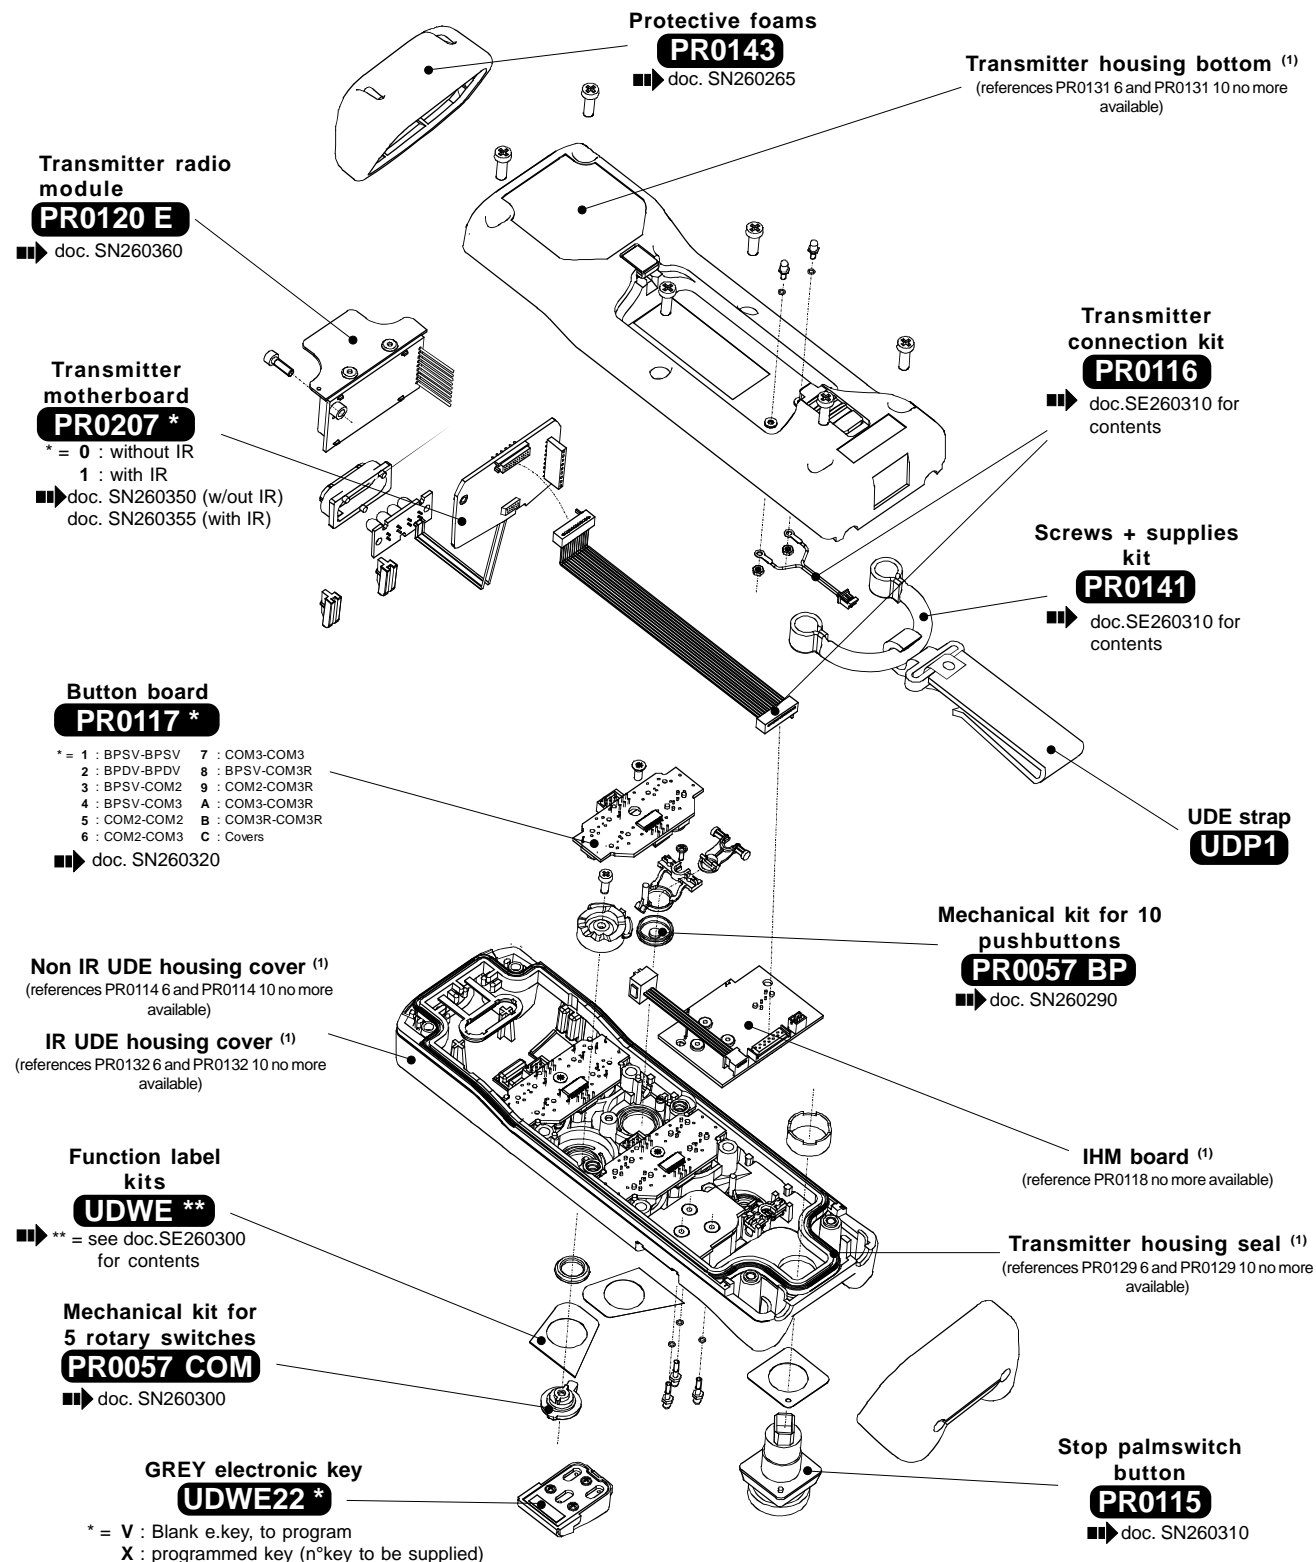

(1) : This part has undergone major technical changes; the transmitter must therefore be upgraded accordingly. Refer to instructions in document **SN260230**

Legend :


X	Description
Y	Reference
doc. Z	assembly/disassembly procedure

Index	Modif. No.	Modification	Name	Date	Approved by:		
00	T 727	first issue	E.DECHAME	16.11.04	Tech:	Market:	
JAY électronique BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44			Format:	A4			
			Filename:	SE260205-00-EN.P65			
			DOC REF.:	SE260205.00	Page:	1 / 1	

This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.

UDE exploded view for version D001 to D002 included

Note : The figure below shows a transmitter with 6 function buttons

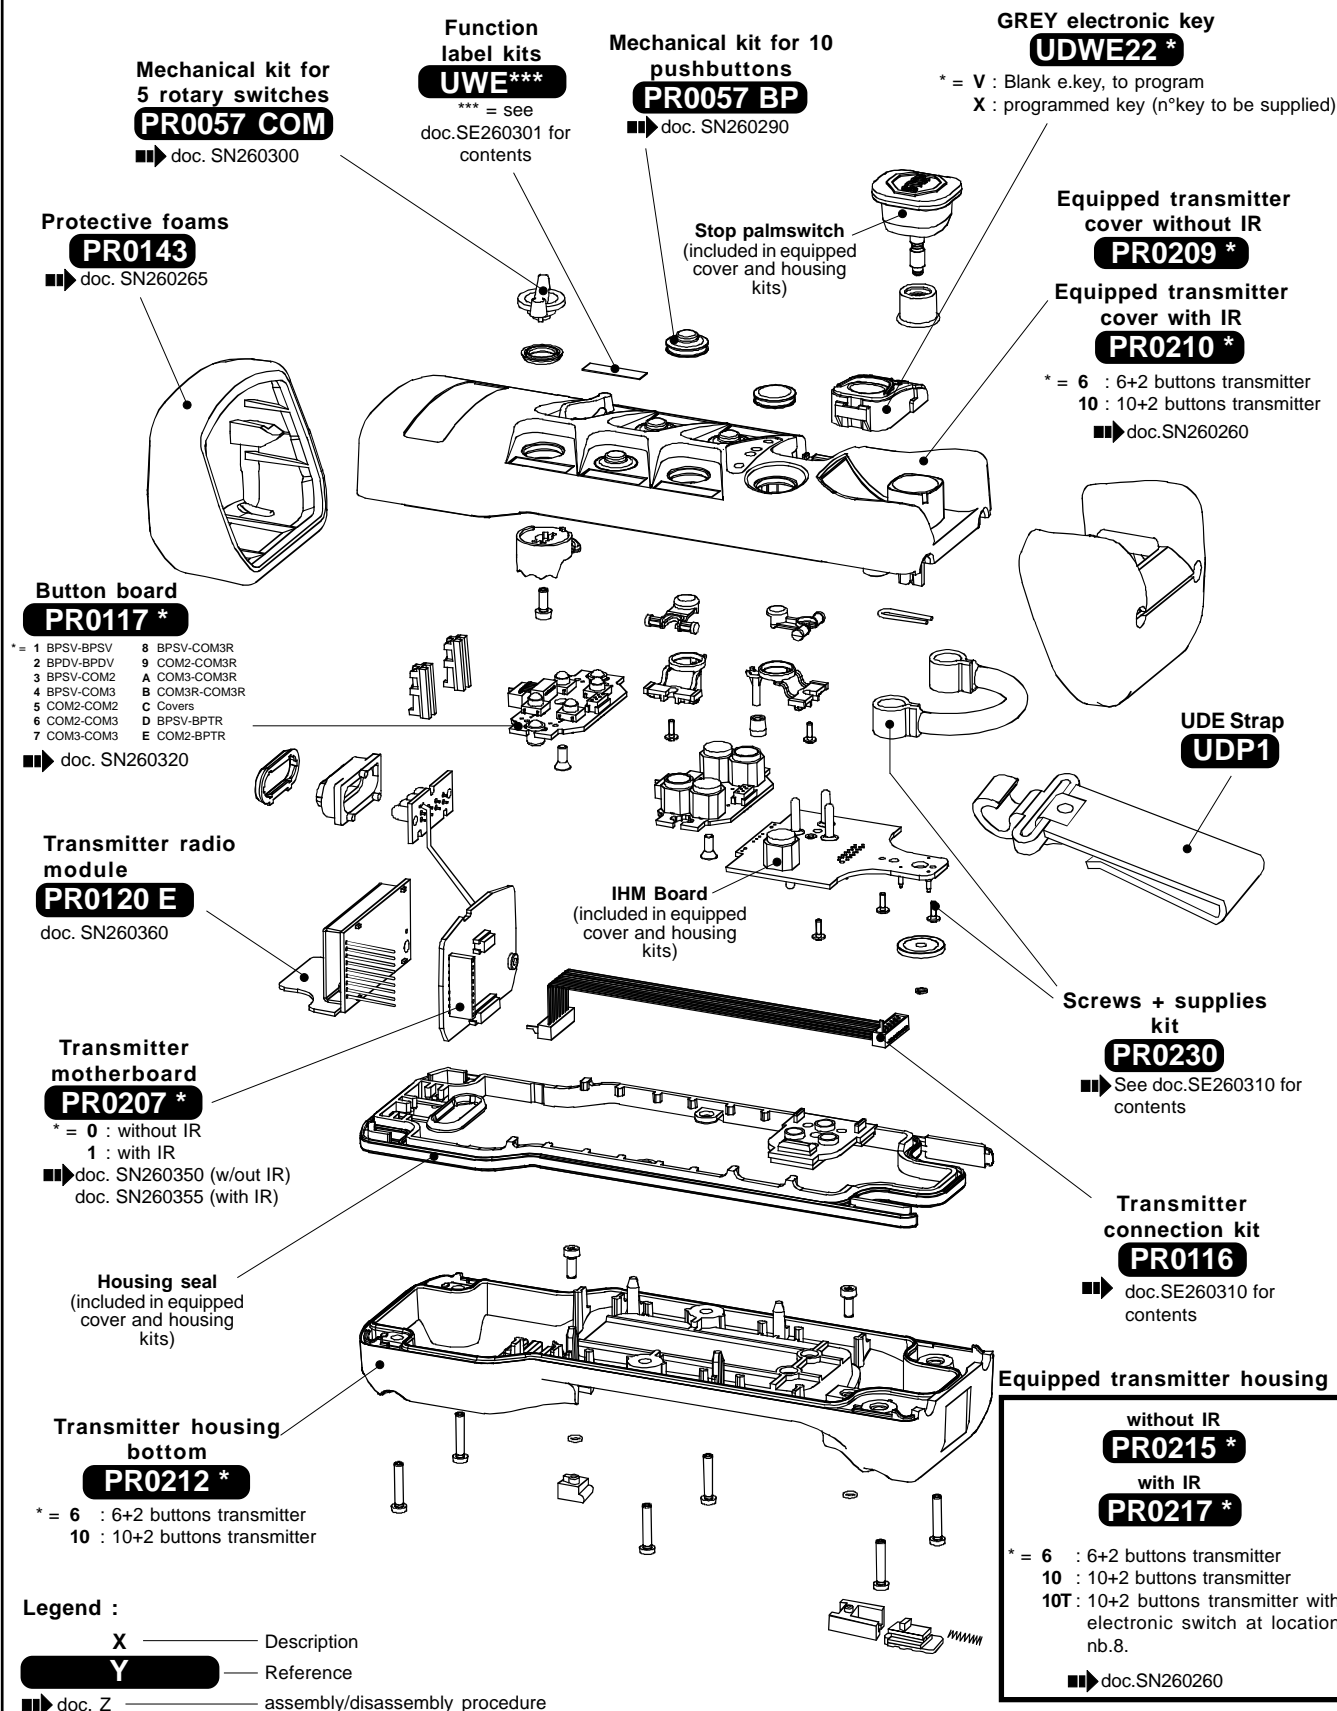


Index	Modif. No.	Modification	Name	Date	Approved by:		
00	T 727	first issue	E.DECHAME	16.11.04	Tech:	Market:	
JAY electronique BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44			Format:	A4			
			Filename:	SE260206-00-EN.P65			
			DOC REF.:	SE260206.00	Page:	1 / 1	

This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.

UDE exploded view for version D003

Note : The figure below shows a transmitter with 6 function buttons

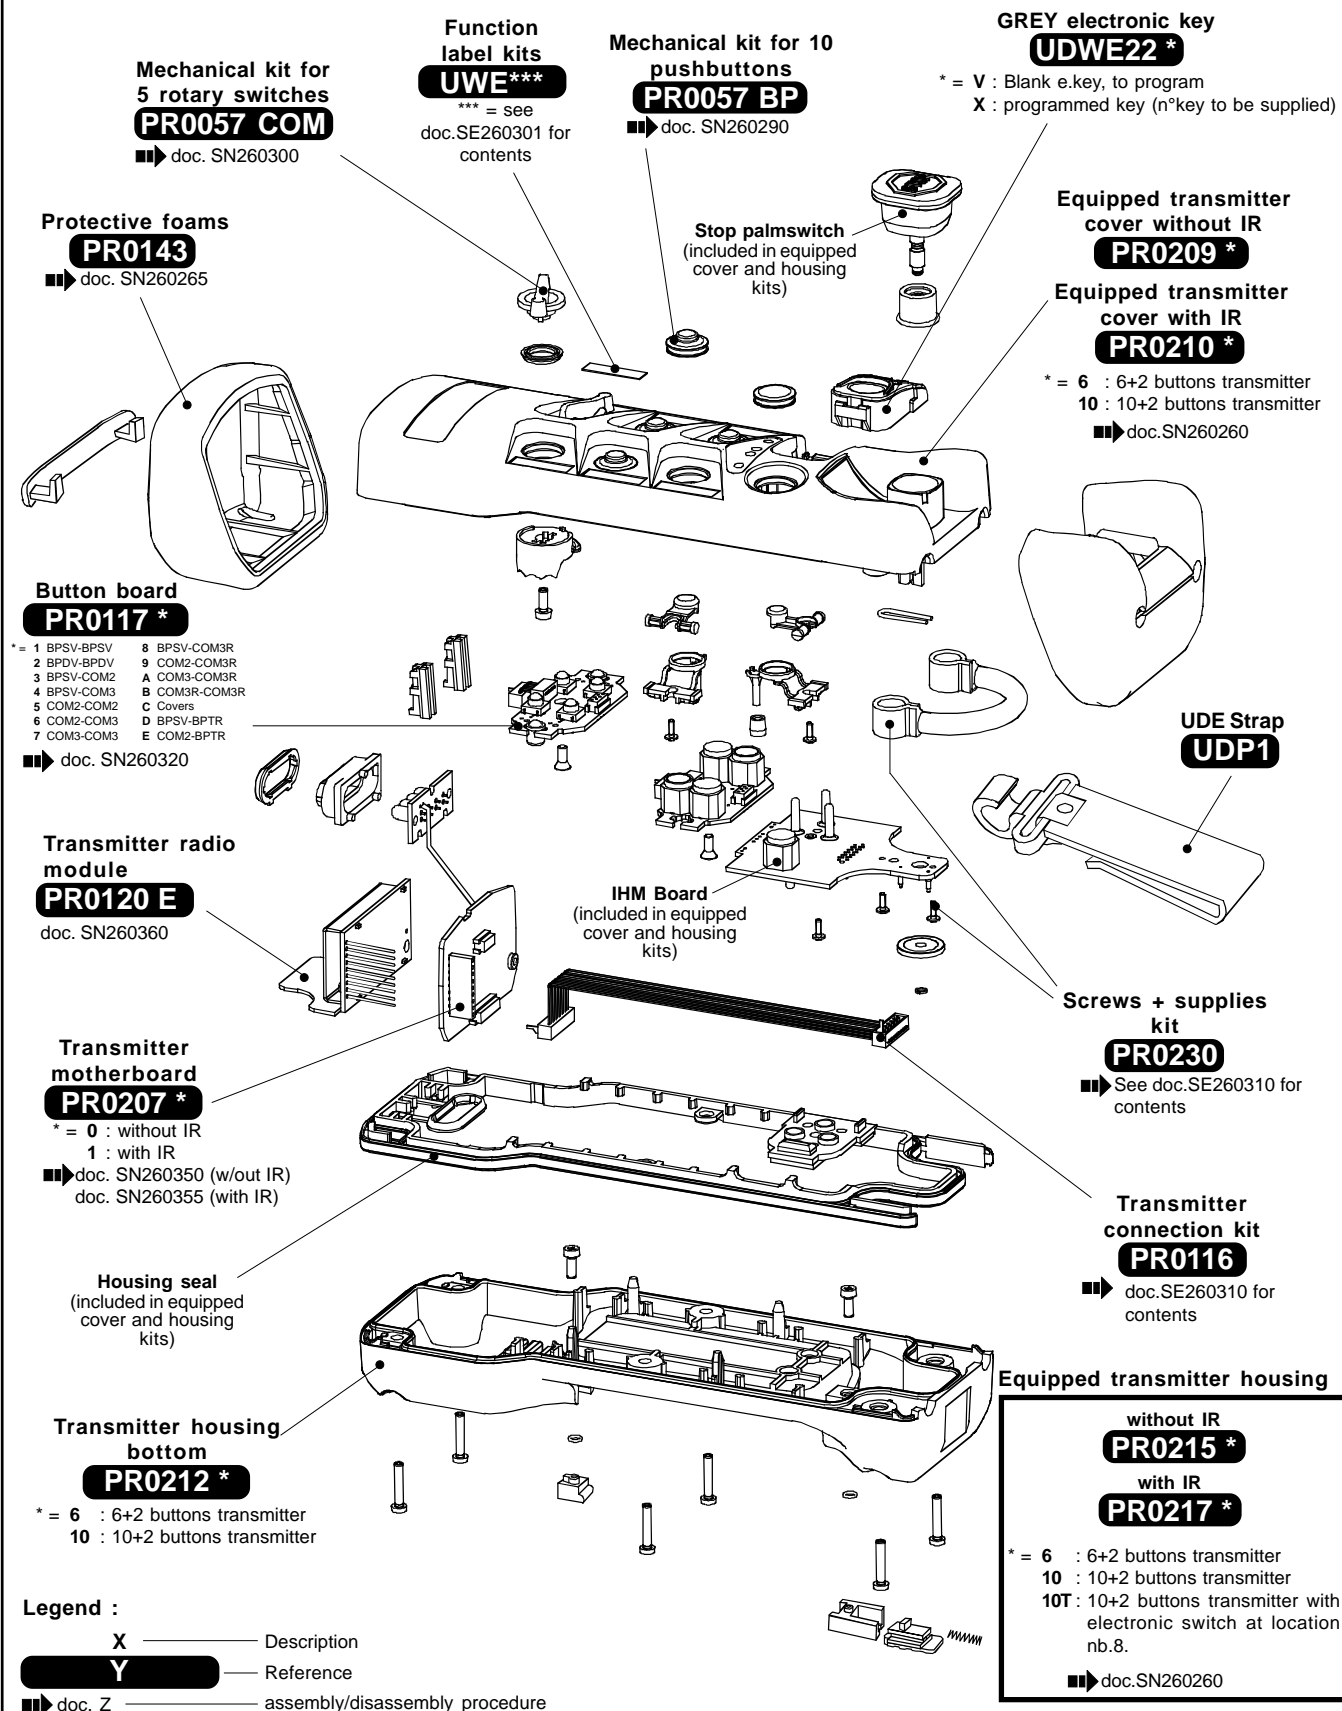

Index	Modif. No.	Modification	Name	Date	Approved by:		
00	T 727	first issue	E.DECHAME	16.11.04	Tech:	Market:	
JAY electronique BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44			Format:	A4			
			Filename:	SE260207-00-EN.P65			
			DOC REF.:	SE260207.00	Page:	1 / 1	


This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.

Label kits for UDE version A001 to C002 included

Caution, these label kits will become obsolescent in the near future and are only valid for transmitters UDE version A001 to C002 included; the housings for these versions have not yet been changed (transition to version D001 and higher)


Reference :

UDWE10 Kit comprising 10 colored labels for single speed movement pushbuttons

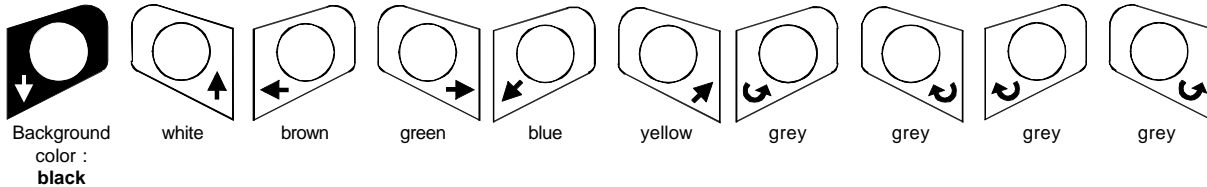


Reference :

UDWE11 Kit comprising 10 colored labels for double speed movement pushbuttons

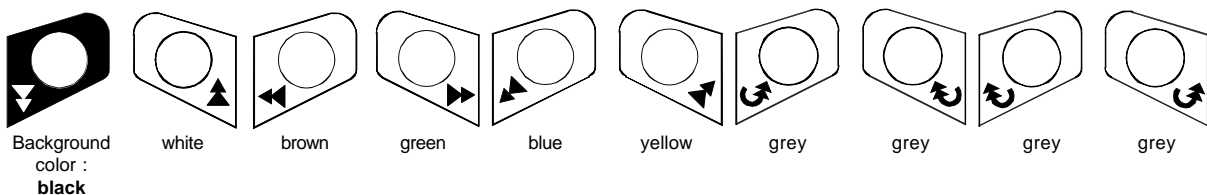


Reference :

UDWE12 Kit comprising 20 b/w labels for pushbuttons «numbering»

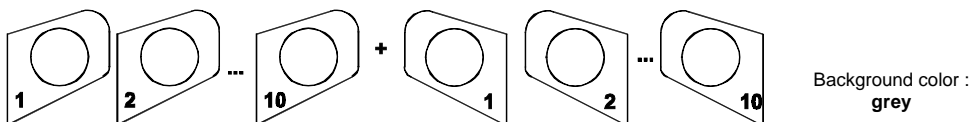


Reference :

UDWE13 Kit comprising 6 grey labels for pushbuttons «customization»

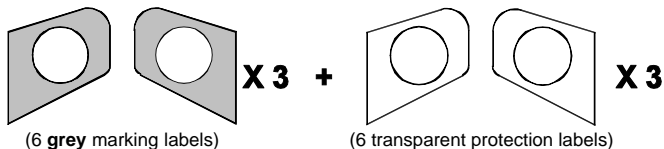


Reference :

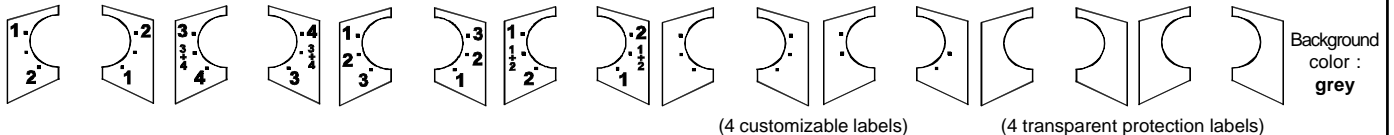

UDWE14 Kit comprising 12 b/w labels for rotary switches



Reference :

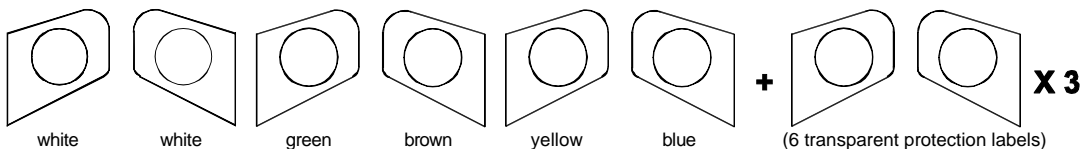UDWE15 Kit comprising 6 colored labels for pushbuttons «customization»




Index	Modif. No.	Modification	Name	Date	Approved by:			
00	T 727	first issue	E.DECHAME	10.06.04	Tech:		Market:	
<div></div> <div>BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</div>		Label kits	Format:	A4				
		UDE	Filename:	SE260300-00-EN.P65				
		version A001 to C002	DOC REF.:	SE260300.00				Page:

This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.

Label kits for UDE version D001 and higher

Representation scale : 70%

Reference : **6 colored labels «movements»**
UWE202 for double speed pushbuttons

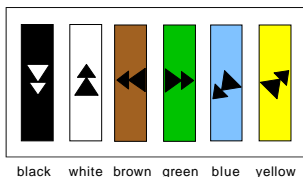

Reference :

UWE204

30 B/W labels «Special functions» *nb.1* for pushbuttons and rotary switches

Reference :




UWE206

30 B/W labels «Special functions» *nb.2* for pushbuttons and rotary switches


Reference :




UWE203

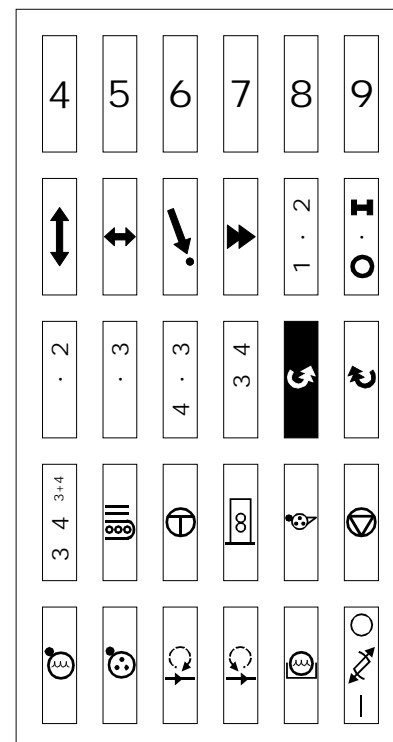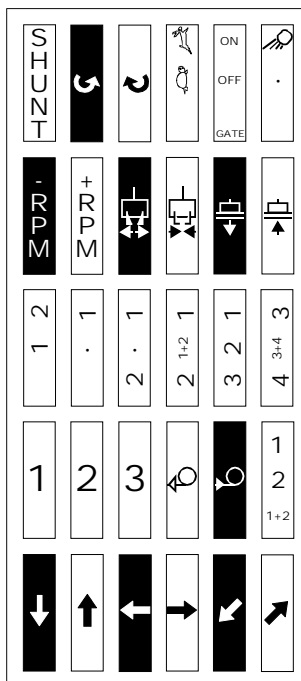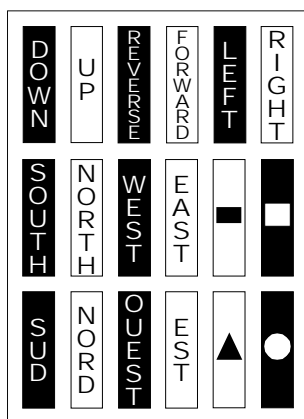18 B/W labels «Special movements» for pushbuttons

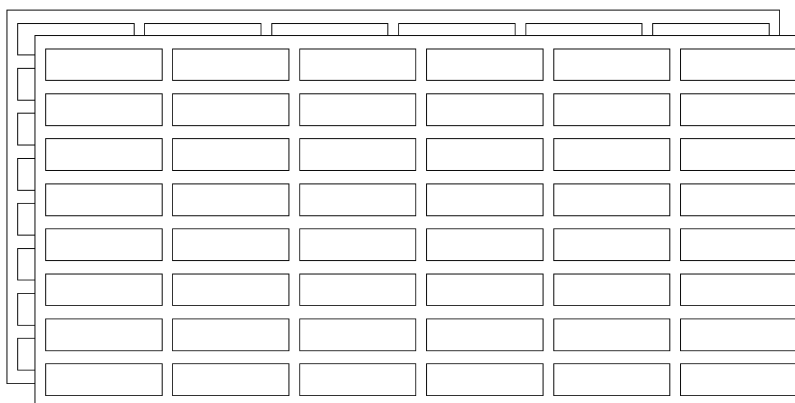


Reference : **48 white labels «Customization» + 48 transparent protecting labels, can be used with laser printer or marker.**



Index	Modif. No.	Modification	Name	Date	Approved by:			
00	T 727	first issue	E.DECHAME	04.10.04	Tech:		Market:	
<div><p>JAY électronique</p><p>BPS - 176, rue Lavoisier MONTBONNOT - ST MARTIN - 38334 ST ISMIER CEDEX</p><p>Tél : +33.(0)4.76.41.44.00 Fax : +33.(0)4.76.41.44.44</p></div>		Label kits UDE version D001 and +	Format:	A4				
			Filename:	SE260301-00-EN.P65				
			DOC REF.:	SE260301.00		Page:	1 / 1	
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.								

Screws + supply kits and accessories for UDE transmitter

Reference :

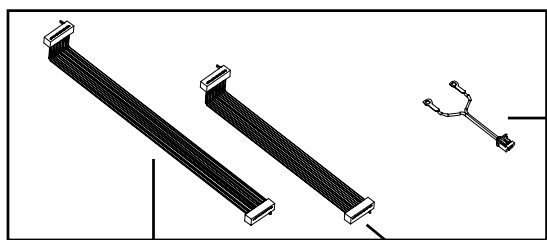PR0116 Transmitter connection kit


**Power supply
connection assembly
only for UDE version
number A001 to C002
included**

UDE 10+2 buttons
12-pin ribbon cable

UDE 6+2 buttons
12-pin ribbon cable

Reference :

PR0141 Screws + supply kit for UDE version number A001 to C002 included

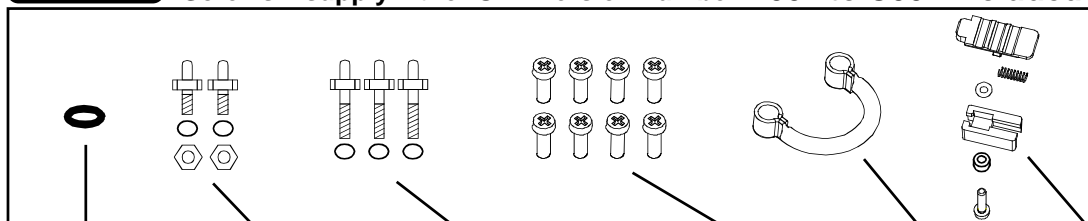

EEPROM
memory
suring band

Power supply
contact pins +
seals + nuts

Electronic key
contact pins + seals


**Transmitter
housing screws
(N.2 Pozidriv)**

Transmitter
fastening

**Battery pack spring
(mounted on transmitter
housing back)**

Reference :

PR0230 Screws + supply kit for UDE version number D001 and higher

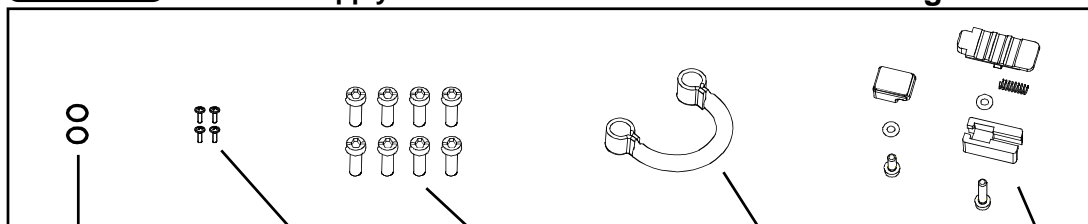

IHM board
power supply
pins seals

**Screws for button
boards and IHM
board**

**Transmitter
housing screws
(N.10 Torx)**

Transmitter fastening

**Battery pack spring
(mounted on transmitter
housing back)**


Reference :




UWE102 **Shoulder strap**



Reference :

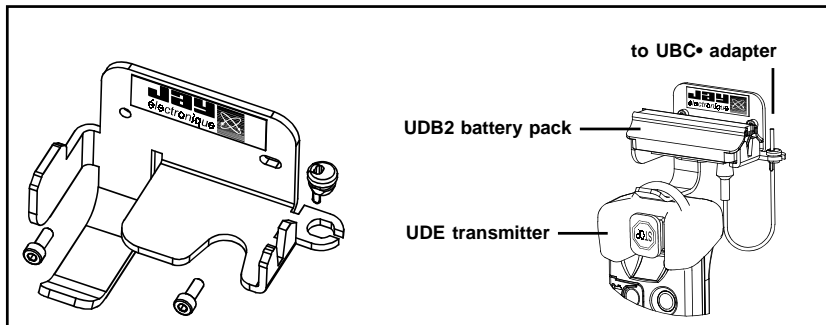UDC1 Waited support for binding the transmitter on foot and refilling the battery pack



Index	Modif. No.	Modification	Name	Date	Approved by:			
00	T 727	first issue	E.DECHAME	30.07.04	Tech:		Market:	
<div></div> <p>BPS - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</p>		<p>Screws + supply kit and accessories</p> <p>UDE</p>	Format:	A4				
			Filename:	SE260310-00-EN.P65				
			DOC REF.:	SE260310.00				Page:

This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.

Upgrading the transmitter according UDE version number

 Subsequent to major technical and mechanical changes starting with version No. D001, for any fault observed on a UDE transmitter having a version No. lower than D001, the transmitter must be upgraded.



The table below indicates the parts to be kept and those to be replaced in accordance with the version No., and the assembly procedures for upgrading the transmitter.

UDE version number	Part(s) to be kept	Part(s) to be used for the upgrade		
	Description	Description	Reference	Assembly / disassembly procedure
A001 to A010 included	<ul style="list-style-type: none"> - Radio module - BPDV function board - Protective foams (if present) 	Equipped housing kit	PR0215 * or PR0217 *	SN260260
		Motherboard	PR0207 0 (w/out IR) PR0207 1 (with IR)	SN260350 (w/out IR) SN260355 (with IR)
		GREY electronic key	UDWE22 *	/
		Mechanical pushbutton kit	PR0057 BP	SN260290
		Mechanical rotary switch kit	PR0057 COM	SN260300
		Screws + supply kit	PR0230	SE260310
		Button boards	PR0117 1,3,4,5,6,7,8,9,A,B	SN260320
		Protective foams (if missing)	PR0143	SN260265
		Labels kit	UWE ***	SE260301
B001 to B010 included	<ul style="list-style-type: none"> - Radio module - Button boards - Mechanical pushbutton kit - Mechanical rotary switch kit - Mother board/IHM board ribbon - Protective foams 	Equipped housing kit	PR0215 * or PR0217 *	SN260260
		Motherboard	PR0207 0 (w/out IR) PR0207 1 (with IR)	SN260350 (w/out IR) SN260355 (with IR)
		GREY electronic key	UDWE22 *	/
		Labels kit	UWE ***	SE260301
C001 to C002 included	<ul style="list-style-type: none"> - Motherboard - Grey electronic key - Radio module - Button boards - Mechanical pushbutton kit - Mechanical rotary switch kit - Mother board/IHM board ribbon - Protective foams 	Equipped housing kit	PR0215 * or PR0217 *	SN260260
		Labels kit	UWE ***	SE260301




Upgrade

D001	date : 01/2004 to 15/06/2004	Updates : New transmitter housing, new stop palmswitch button, new IHM board
D002	date : 15/06/2004 to 11/10/2004	Updates : Transmitter internal software update authorizing the use of an electronic key with a button configuration different from that physically present on the transmitter (The update D001 > D002 can be realized only in JAY électronique plant)
D003 Last version number	date : since 11/10/2004	Updates : New protective foams with insert to ensure a strengthened holding of the superior foam. These new protective foams are not nay more "pinched" between the cover and the bottom of the housing. New protective foams can be installed instead of the former protective foams version.

Index	Modif. No.	Modification	Name	Date	Approved by:			
02	T 727	Update UDE since v.D003	E.DECHAME	16.11.04	Tech:		Market:	
<div></div> <p>BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</p>		Upgrading the transmitter UDE	Format:	A4				
			Filename:	SN260230-02-EN.P65				
			DOC REF.:	SN260230.02	Page:	1 / 1		
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.								

This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.

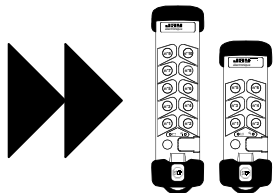

Additional information

If the two indicator lights on the transmitter flash regularly, refer to the probable faults table on page 2,3 and 4

Tools :


Test UDR
+
Programming tool
PO1527
+
"Dialog UD"
software
v5.1 minimum
ref.: **UDWR36**
+
Test blank
electronic key
UDWE22 V


Test UDF

See technical diagnostic
SJ260050
in section
"UDE visual inspection"

See document
SN260230

UDE quick test before intervention

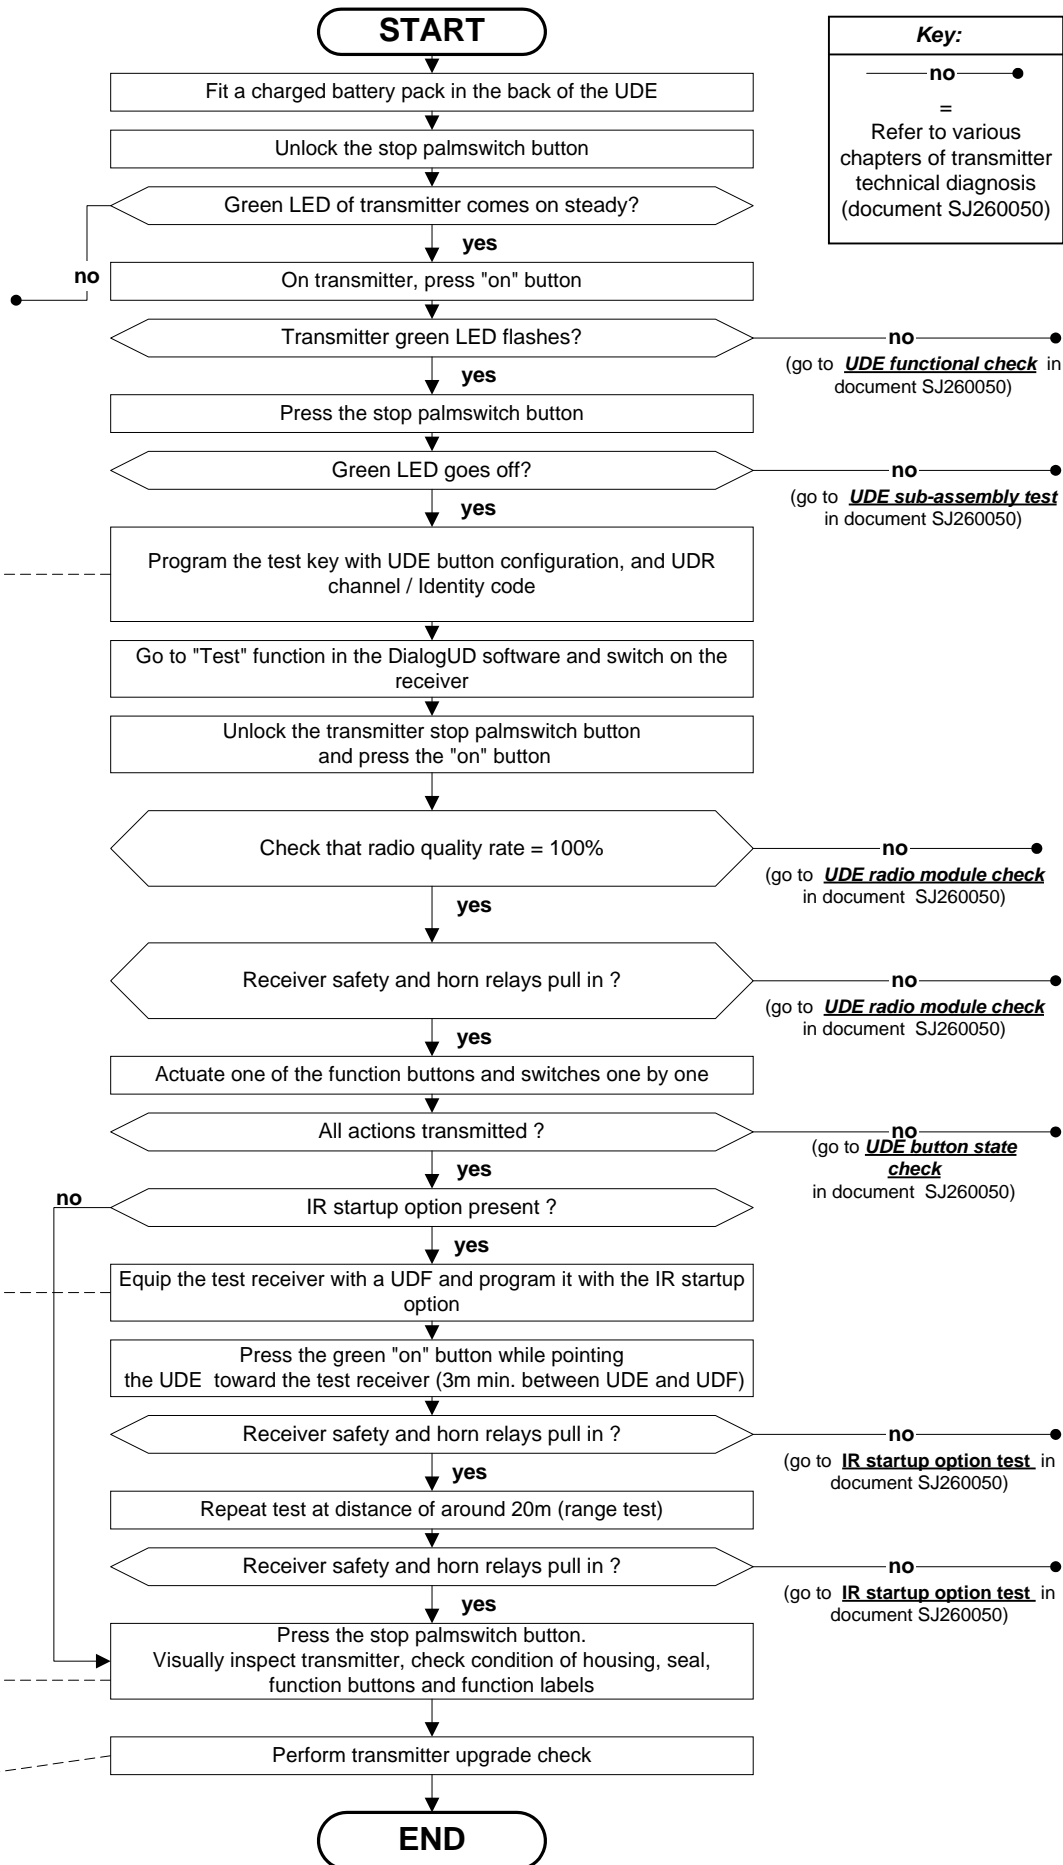

Index	Modif. No.	Modification	Name	Date	Approved by:			
02	T 727	Update since D002 version	E.DECHAME	29.06.04	Tech:		Market:	
 BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44			Transmitter quick test	Format:	A4			
			UDE	Filename:	SJ260040-02-EN.P65			
			DOC REF.:	SJ 260040.02	Page:	1 / 4		
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.								

Error messages

Transmitter state (trans. Stop plamswitch button is unlocked)	Red indicator light	Green indicator light	Possible causes of fault	Corrective actions
Before or after "ON" button pressed	OFF		<ul style="list-style-type: none"> - Ribbon cable connecting motherboard to IHM board and to stop palmswitch button is disconnected - Power supply wires disconnected - IHM board faulty - Stop palmswitch button faulty 	<ul style="list-style-type: none"> - Check connection of ribbon cable linking motherboard to IHM board and connection of power supply wires. - Replace stop palmswitch button - Proceed by test IHM board substitution > <i>proceed an upgrade to D001 version*</i>
Before or after "ON" button pressed	2 flashes		<ul style="list-style-type: none"> - Electronic key absent - Bad electronic key connection - Electronic key faulty 	<ul style="list-style-type: none"> - Check if transmitter needs a key to operate (read key No.). If so, replace key > <i>proceed an upgrade to D001 version*</i>
Before "ON" button pressed	3 flashes		<ul style="list-style-type: none"> - Error on electronic key number - Electronic key faulty 	<ul style="list-style-type: none"> - Read electronic key No. programmed in transmitter EEPROM memory
Before or after "ON" button pressed	4 flashes		<ul style="list-style-type: none"> - Transmitter locked (flashes during programming attempt) - Button board faulty - Ribbon cable linking last button board to motherboard is disconnected - Ribbon cables linking button boards are disconnected 	<ul style="list-style-type: none"> - Before any programming, start by checking that transmitter is unlocked (see installation manual) - Check connection of all ribbon cables in transmitter.
Before "ON" button pressed	5 flashes		<ul style="list-style-type: none"> - Momentary disconnection of battery pack - Power supply connector of IHM board is faulty - Stop palmswitch button faulty 	<ul style="list-style-type: none"> - Check that battery pack is securely mounted in UDE back. If necessary, replace contact pins. - Check connection of power supply connector to IHM board - Test stop palmswitch button
Before "ON" button pressed	6 flashes		<ul style="list-style-type: none"> - Stop palmswitch button faulty 	<ul style="list-style-type: none"> - Test stop palmswitch button
Before "ON" button pressed	7 flashes		<ul style="list-style-type: none"> - Disconnection of EEPROM memory - Bad contact on EEPROM receptacle - EEPROM memory is faulty 	<ul style="list-style-type: none"> - Check that EEPROM memory is properly placed in its housing and securing band is in place - Tighten EEPROM receptacle contacts
Before "ON" button pressed	8 flashes		<ul style="list-style-type: none"> - Motherboard faulty 	<ul style="list-style-type: none"> - Replace motherboard > <i>proceed an upgrade to D001 version*</i>

* = This part has undergone major technical changes; the transmitter must therefore be upgraded accordingly. Refer to instructions in document SN260230.

Programming modes

Transmitter state (trans. Stop plamswitch button is unlocked)	Red indicator light	Green indicator light	Function or message
Programming Mode: channel No., dead man time, key No.	Flashes according to number of tens of parameter configured	Flashes according to number of units of parameter configured	indicates tens and units
Procedure : locking - unlocking access to programming	ON Steady	OFF	Transmitter is locked
Procedure : locking - unlocking access to programming	ON Steady	ON Steady	Transmitter is unlocked

Battery pack charge states

Transmitter state (trans. Stop plamswitch button is unlocked)	Red indicator light	Green indicator light	Function or message
Before "ON" button pressed	OFF	ON Steady	Battery pack charge > 90%
Before "ON" button pressed	Flashes SLOW	ON Steady	90% > Battery pack charge > LOW BATT level
Before "ON" button pressed	Flashes FAST	ON Steady	Battery pack charge < or = LOW BATT level
After "ON" button pressed	OFF	Flashes	Radio transmission Battery pack charge > 90%
After "ON" button pressed	Flashes FAST	Flashes	Radio transmission Battery pack charge < or = LOW BATT level

LOW BATT level = battery level low (battery pack charge < 10%)

Error messages

Transmitter state (trans. Stop plamswitch button is unlocked)	Red indicator light	Green indicator light	Possible causes of fault	Corrective actions
Before or after "ON" button pressed	OFF		<ul style="list-style-type: none"> - Ribbon cable connecting motherboard to IHM board and to stop palmswitch button is disconnected - Power supply wires disconnected - IHM board faulty - Stop palmswitch button pins faulty 	<ul style="list-style-type: none"> - Check connection of ribbon cable linking motherboard to IHM board - Proceed by test motherboard substitution
Before or after "ON" button pressed	Both ON Steady		<ul style="list-style-type: none"> - Electronic key absent - Bad electronic key connection - Electronic key faulty - Motherboard faulty - IHM board faulty 	<ul style="list-style-type: none"> - Check connection of ribbon cable linking motherboard to IHM board - Proceed by test motherboard substitution - Proceed by test elec. key substitution
When programming radio channel No, Dead man duration, or ID code copy	Flash in alternation		<ul style="list-style-type: none"> - Transmitter is locked 	<ul style="list-style-type: none"> - Transmitter is locked', see UD installation manual to unlock the access to programming
Before "ON" button pressed	3 flashes		<ul style="list-style-type: none"> - Error on ID code - Electronic key faulty 	<ul style="list-style-type: none"> - Copy ID code in UDE (see procedure in installation manual) - Proceed by test elec. key substitution
Before or after "ON" button pressed	4 flashes		<ul style="list-style-type: none"> - Button configuration of the electronic key is different than transmitter button configuration - Button board faulty - Ribbon cable linking last button board to motherboard is disconnected - Ribbon cables linking button boards are disconnected 	<ul style="list-style-type: none"> - Check that configuration button is the same between electronic key and transmitter - Check connection of all ribbon cables in transmitter - Proceed by test button boards substitution
Before "ON" button pressed	5 flashes		<ul style="list-style-type: none"> - Momentary disconnection of battery pack - Stop palmswitch button pins faulty - Motherboard faulty 	<ul style="list-style-type: none"> - Check that battery pack is securely mounted in UDE back. If necessary, replace contact pins. - Check stop palmswitch button pins - Proceed by test motherboard substitution
Before "ON" button pressed	6 flashes		<ul style="list-style-type: none"> - Momentary disconnection of battery pack - Stop palmswitch button pins faulty - Motherboard faulty 	<ul style="list-style-type: none"> - Check stop palmswitch button pins - Proceed by test motherboard substitution
Before "ON" button pressed	7 flashes		<ul style="list-style-type: none"> - Electronic key faulty 	<ul style="list-style-type: none"> - Proceed by test elec. key substitution
Before "ON" button pressed	8 flashes		<ul style="list-style-type: none"> - Motherboard faulty 	<ul style="list-style-type: none"> - Proceed by test motherboard substitution

Programming modes

Transmitter state (trans. Stop plamswitch button is unlocked)	Red indicator light	Green indicator light	Function or message
Programming Mode: channel No., dead man time, key No.	Flashes according to number of tens of parameter configured	Flashes according to number of units of parameter configured	indicates tens and units
Procedure : locking - unlocking access to programming	ON Steady	OFF	Transmitter is locked
Procedure : locking - unlocking access to programming	ON Steady	ON Steady	Transmitter is unlocked

Battery pack charge states

Transmitter state (trans. Stop plamswitch button is unlocked)	Red indicator light	Green indicator light	Function or message
Before "ON" button pressed	OFF	ON Steady	Battery pack charge > 90%
Before "ON" button pressed	Flashes SLOW	ON Steady	90% > Battery pack charge > LOW BATT level
Before "ON" button pressed	Flashes FAST	ON Steady	Battery pack charge < or = LOW BATT level
After "ON" button pressed	OFF	Flashes	Radio transmission Battery pack charge > 90%
After "ON" button pressed	Flashes FAST	Flashes	Radio transmission Battery pack charge < or = LOW BATT level

LOW BATT level = battery level low (battery pack charge < 10%)

Error messages

Transmitter state (trans. Stop plamswitch button is unlocked)	Red indicator light	Green indicator light	Possible causes of fault	Corrective actions
Before or after "ON" button pressed	OFF		<ul style="list-style-type: none"> - Ribbon cable connecting motherboard to IHM board and to stop palmswitch button is disconnected - Power supply wires disconnected - IHM board faulty - Stop palmswitch button pins faulty 	<ul style="list-style-type: none"> - Check connection of ribbon cable linking motherboard to IHM board - Proceed by test motherboard substitution
Before or after "ON" button pressed	Both ON Steady		<ul style="list-style-type: none"> - Electronic key absent - Bad electronic key connection - Electronic key faulty - Motherboard faulty - IHM board faulty 	<ul style="list-style-type: none"> - Check connection of ribbon cable linking motherboard to IHM board - Proceed by test motherboard substitution - Proceed by test elec. key substitution
When programming radio channel No, Dead man duration, or ID code copy	Flash in alternation		<ul style="list-style-type: none"> - Transmitter is locked 	<ul style="list-style-type: none"> - Transmitter is locked', see UD installation manual to unlock the access to programming
Before "ON" button pressed	3 flashes		<ul style="list-style-type: none"> - Error on ID code - Electronic key faulty 	<ul style="list-style-type: none"> - Copy ID code in UDE (see procedure in installation manual) - Proceed by test elec. key substitution
Before or after "ON" button pressed	4 flashes		<ul style="list-style-type: none"> - Button board faulty - Ribbon cable linking last button board to motherboard is disconnected - Ribbon cables linking button boards are disconnected 	<ul style="list-style-type: none"> - Check connection of all ribbon cables in transmitter - Proceed by test button boards substitution
Before "ON" button pressed	5 flashes		<ul style="list-style-type: none"> - Momentary disconnection of battery pack - Stop palmswitch button pins faulty - Motherboard faulty 	<ul style="list-style-type: none"> - Check that battery pack is securely mounted in UDE back. If necessary, replace contact pins. - Check stop palmswitch button pins - Proceed by test motherboard substitution
Before "ON" button pressed	6 flashes		<ul style="list-style-type: none"> - Momentary disconnection of battery pack - Stop palmswitch button pins faulty - Motherboard faulty 	<ul style="list-style-type: none"> - Check stop palmswitch button pins - Proceed by test motherboard substitution
Before "ON" button pressed	7 flashes		<ul style="list-style-type: none"> - Electronic key faulty 	<ul style="list-style-type: none"> - Proceed by test elec. key substitution
Before "ON" button pressed	8 flashes		<ul style="list-style-type: none"> - Motherboard faulty 	<ul style="list-style-type: none"> - Proceed by test motherboard substitution


Programming modes

Transmitter state (trans. Stop plamswitch button is unlocked)	Red indicator light	Green indicator light	Function or message
Programming Mode: channel No., dead man time, key No.	Flashes according to number of tens of parameter configured	Flashes according to number of units of parameter configured	indicates tens and units
Procedure : locking - unlocking access to programming	ON Steady	OFF	Transmitter is locked
Procedure : locking - unlocking access to programming	ON Steady	ON Steady	Transmitter is unlocked

Battery pack charge states

Transmitter state (trans. Stop plamswitch button is unlocked)	Red indicator light	Green indicator light	Function or message
Before "ON" button pressed	OFF	ON Steady	Battery pack charge > 90%
Before "ON" button pressed	Flashes SLOW	ON Steady	90% > Battery pack charge > LOW BATT level
Before "ON" button pressed	Flashes FAST	ON Steady	Battery pack charge < or = LOW BATT level
After "ON" button pressed	OFF	Flashes	Radio transmission Battery pack charge > 90%
After "ON" button pressed	Flashes FAST	Flashes	Radio transmission Battery pack charge < or = LOW BATT level


LOW BATT level = battery level low (battery pack charge < 10%)

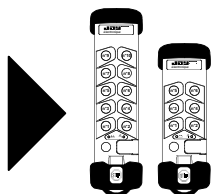

UDE Technical diagnosis




PRODUCT
INTERVENTION
SHEET TO BE
COMPLETED

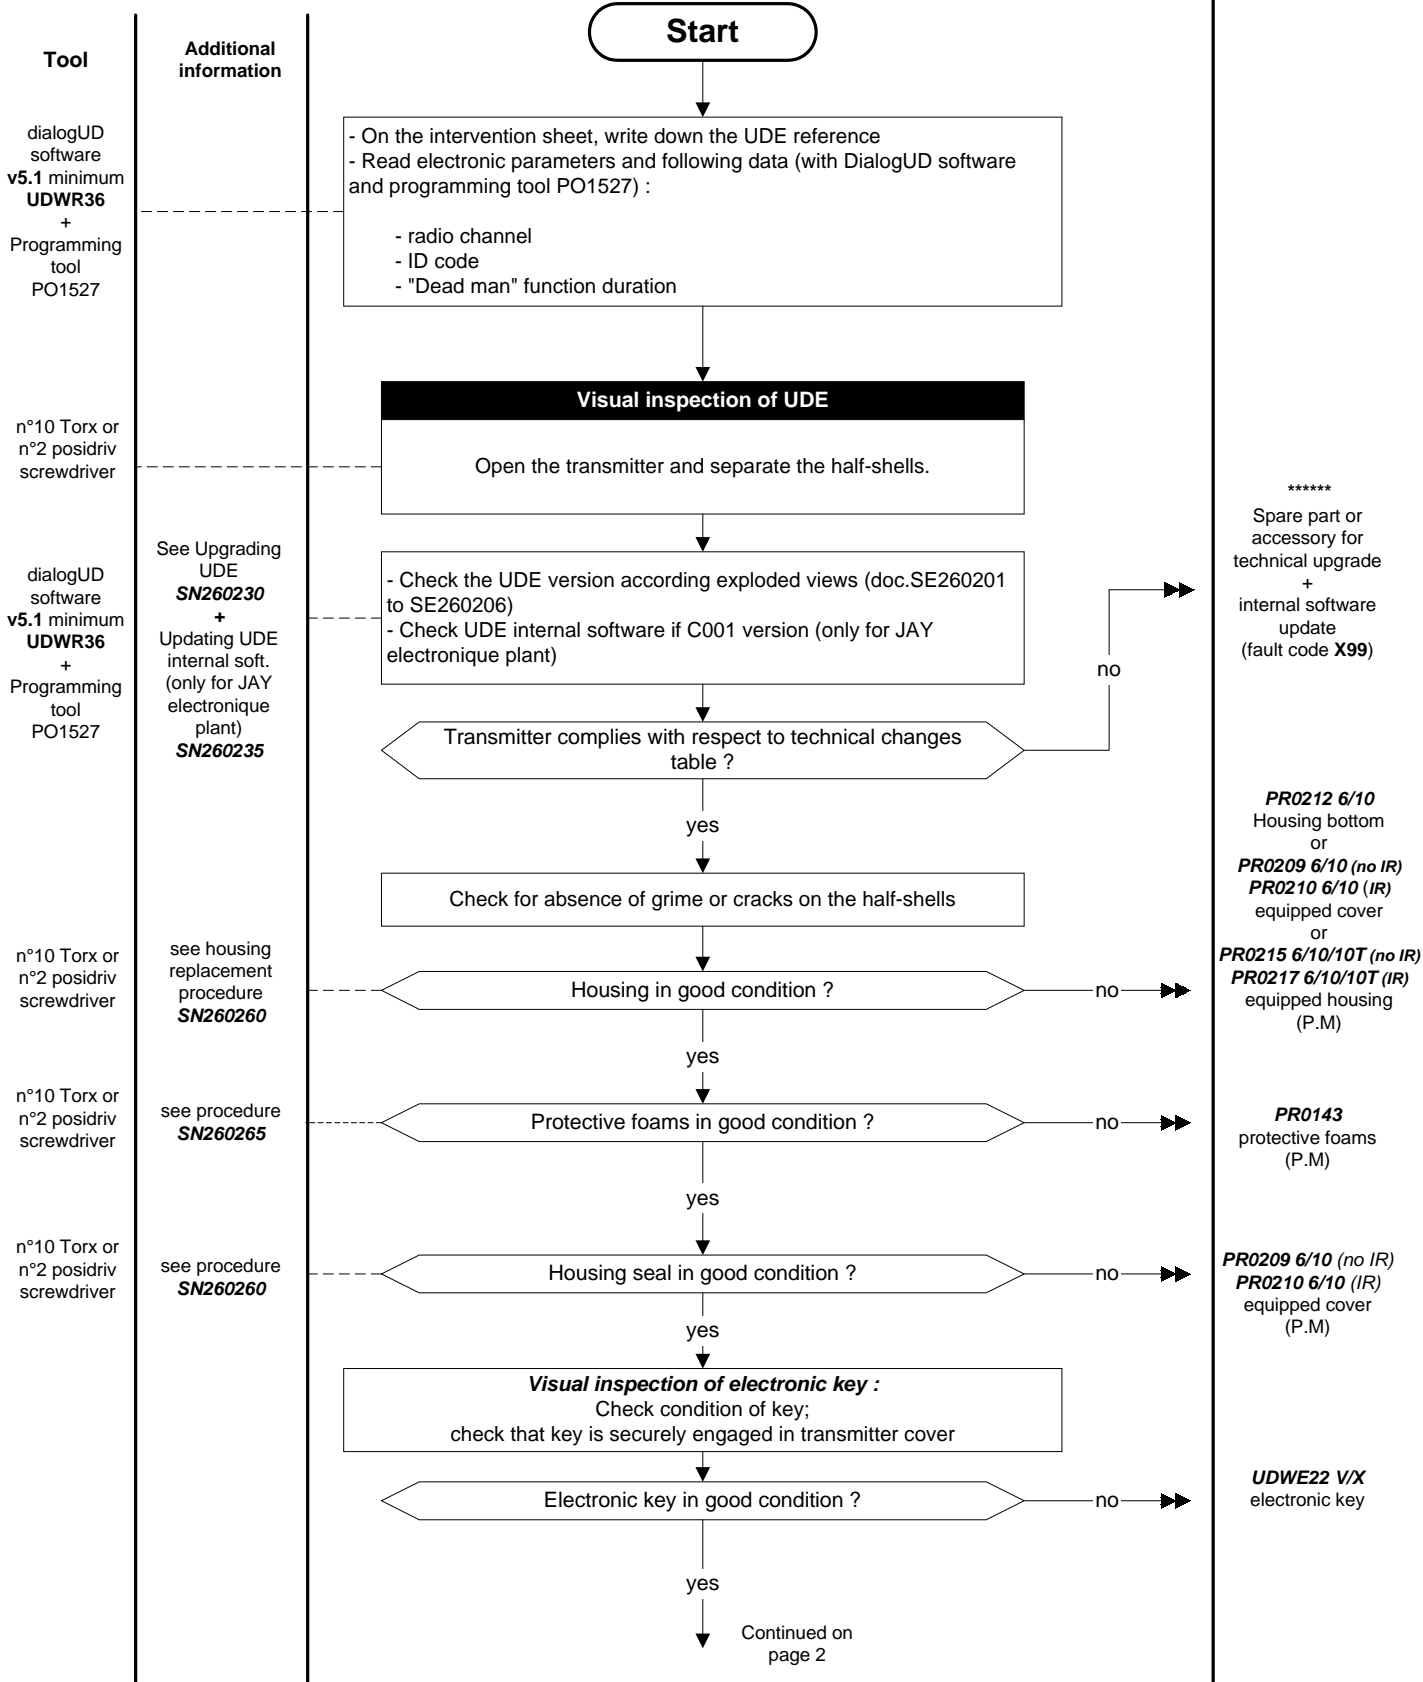sub-assy to be
replaced




Symbols :

➡➡ : Continue diagnosis
■ : Stop diagnosis
P.M. : Preventive maintenance

Index	Modif. No.	Modification	Name	Date	Approved by:		
02	T 727	Update since UDE vC001 and DialogUD v5.1	E.DECHAME	04.10.04	Tech:		Market:
<div></div> <p>BPS - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél : +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</p>		Transmitter technical	Format:	A4			
		diagnostic	Filename:	SJ260050-02-EN.P65			
		UDE	DOC REF.:	SJ 260050.02		Page:	1 / 8
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.							

This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.

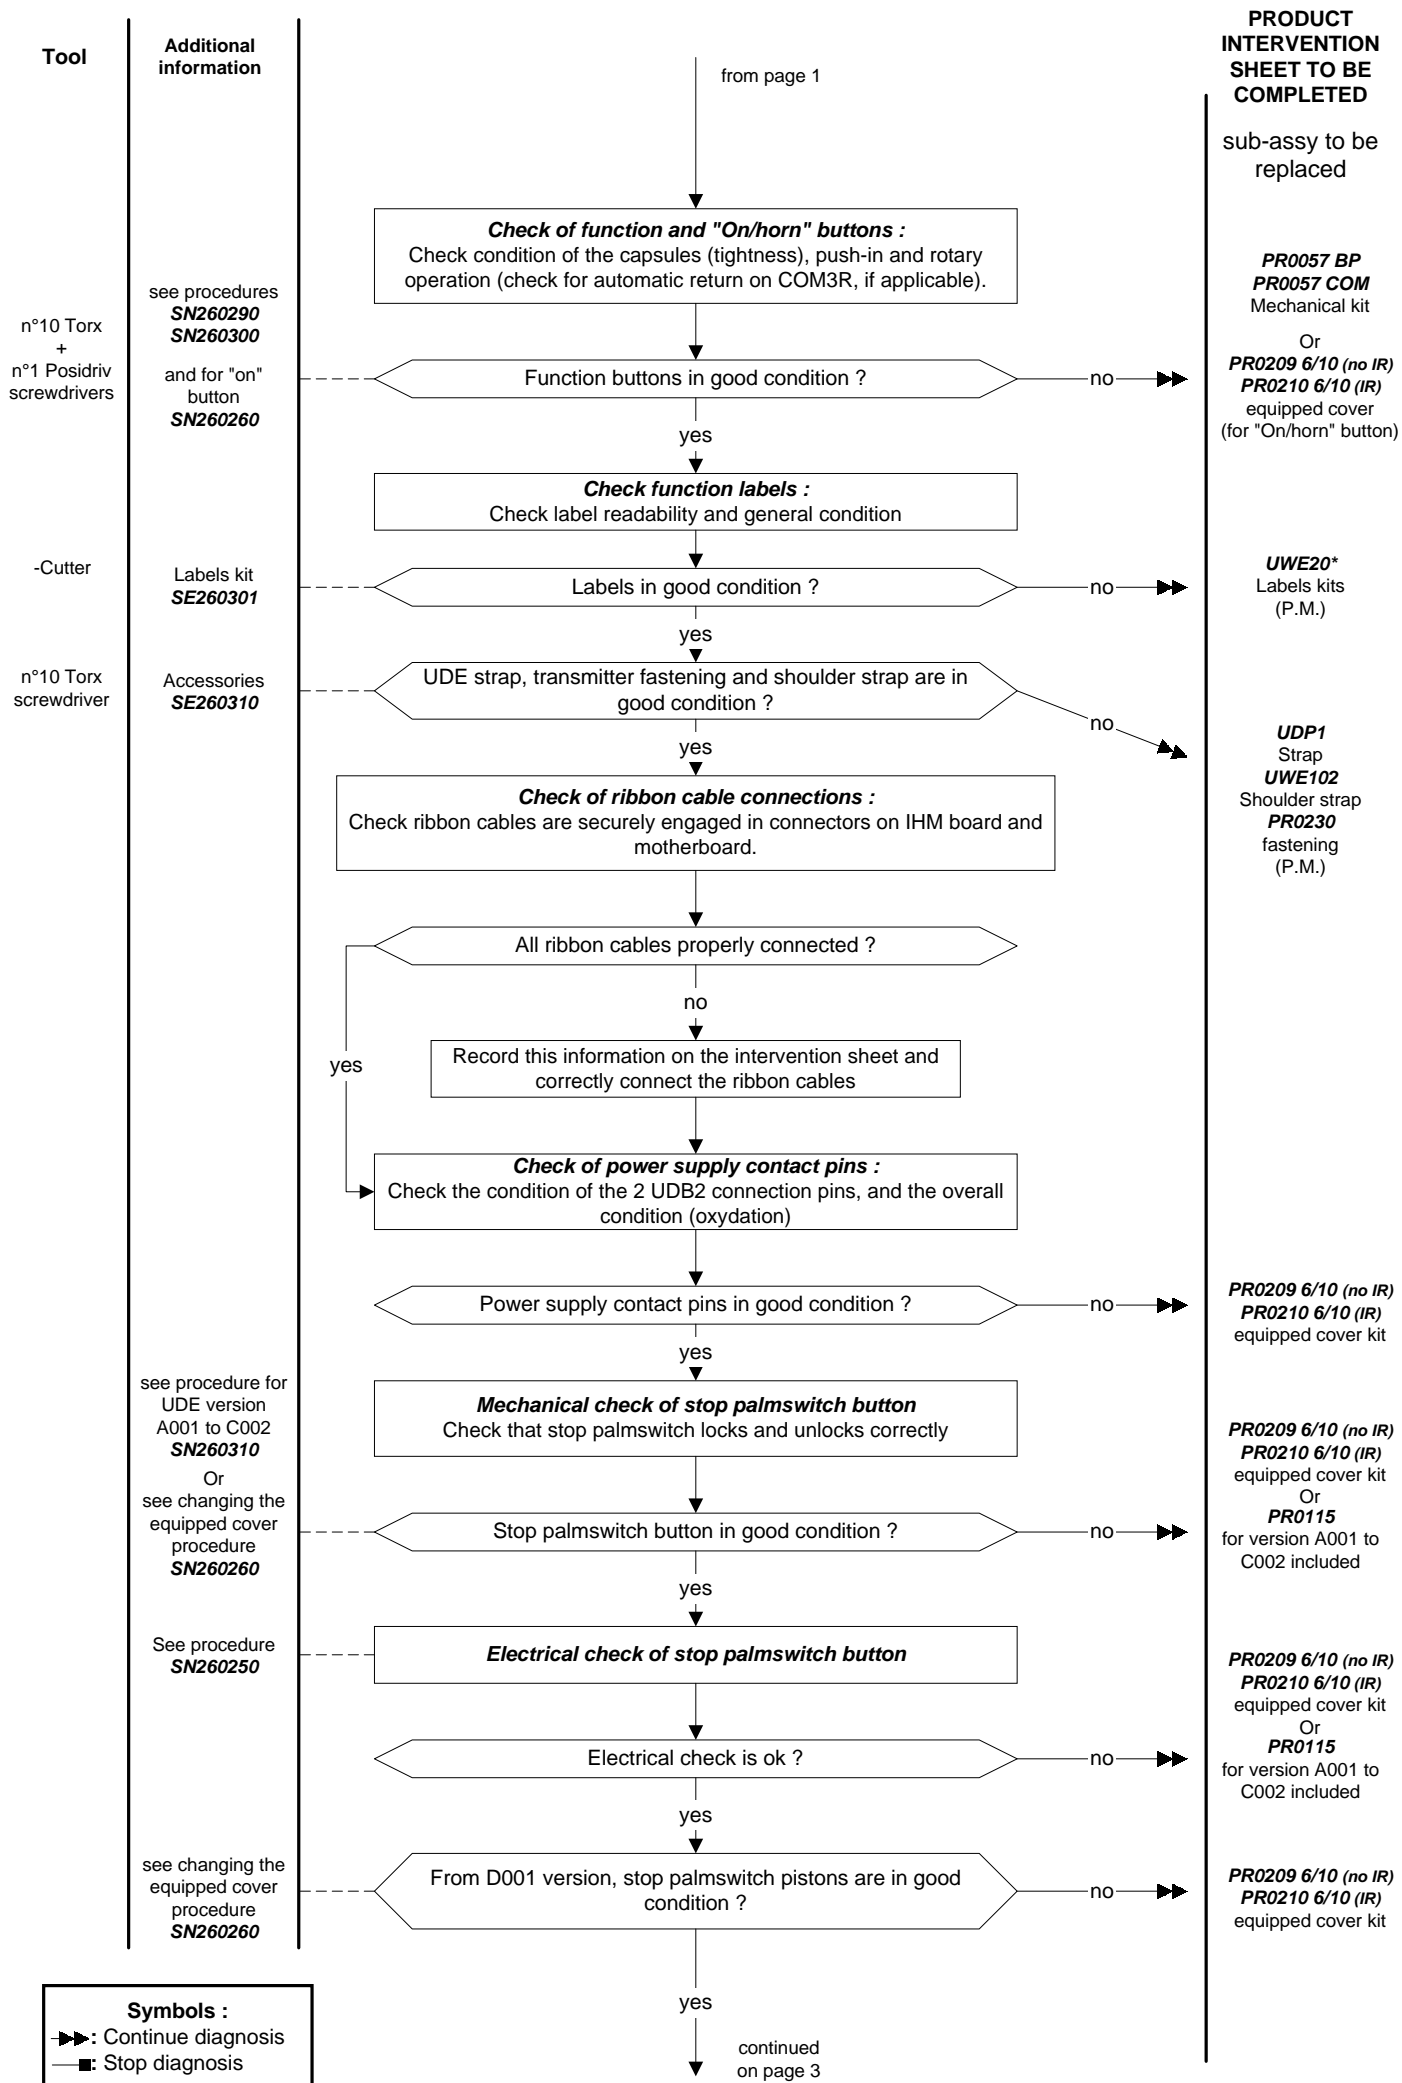

sub-assy to be
replaced

Tool

**Additional
information**

Stabilized
power supply


See procedure
for connection of
stabilized power
supply to UDE
SN260240

2,5mm Allen
wrench


see procedure to
change the
motherboard
**SN260350 or
SN260355 (IR)**


Symbols :

➡➡: Continue diagnosis
■: Stop diagnosis

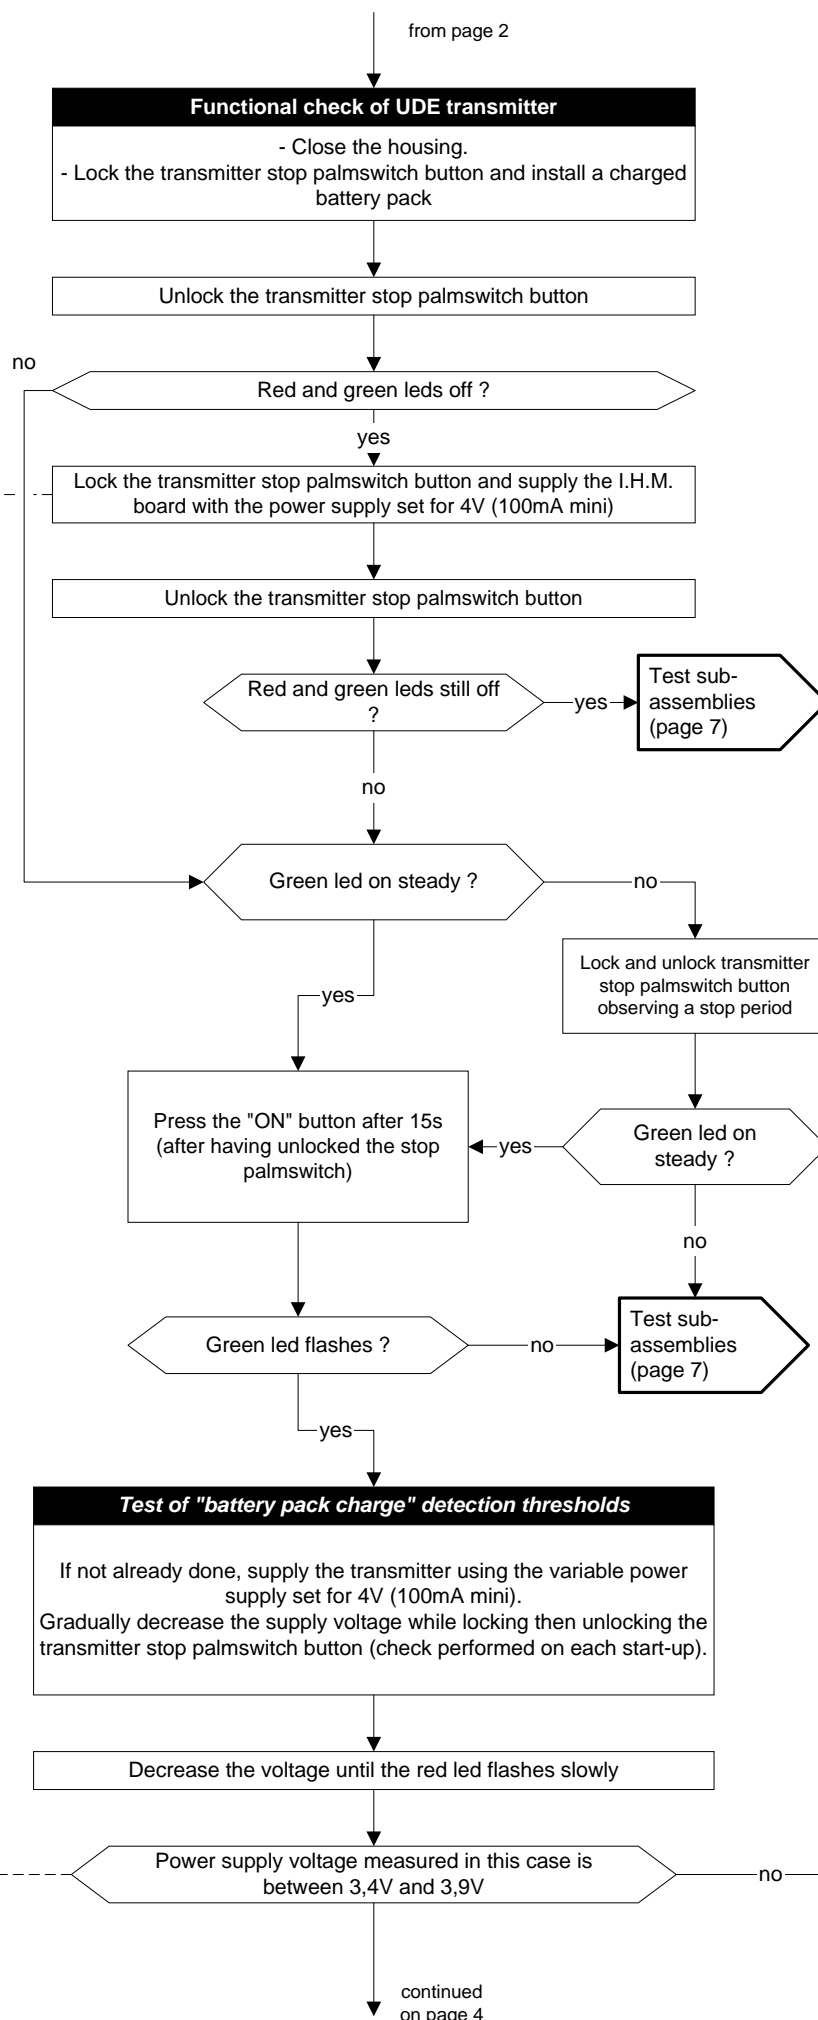

**PR0207 0 (w/out IR)
PR0207 1 (with IR)**
motherboard

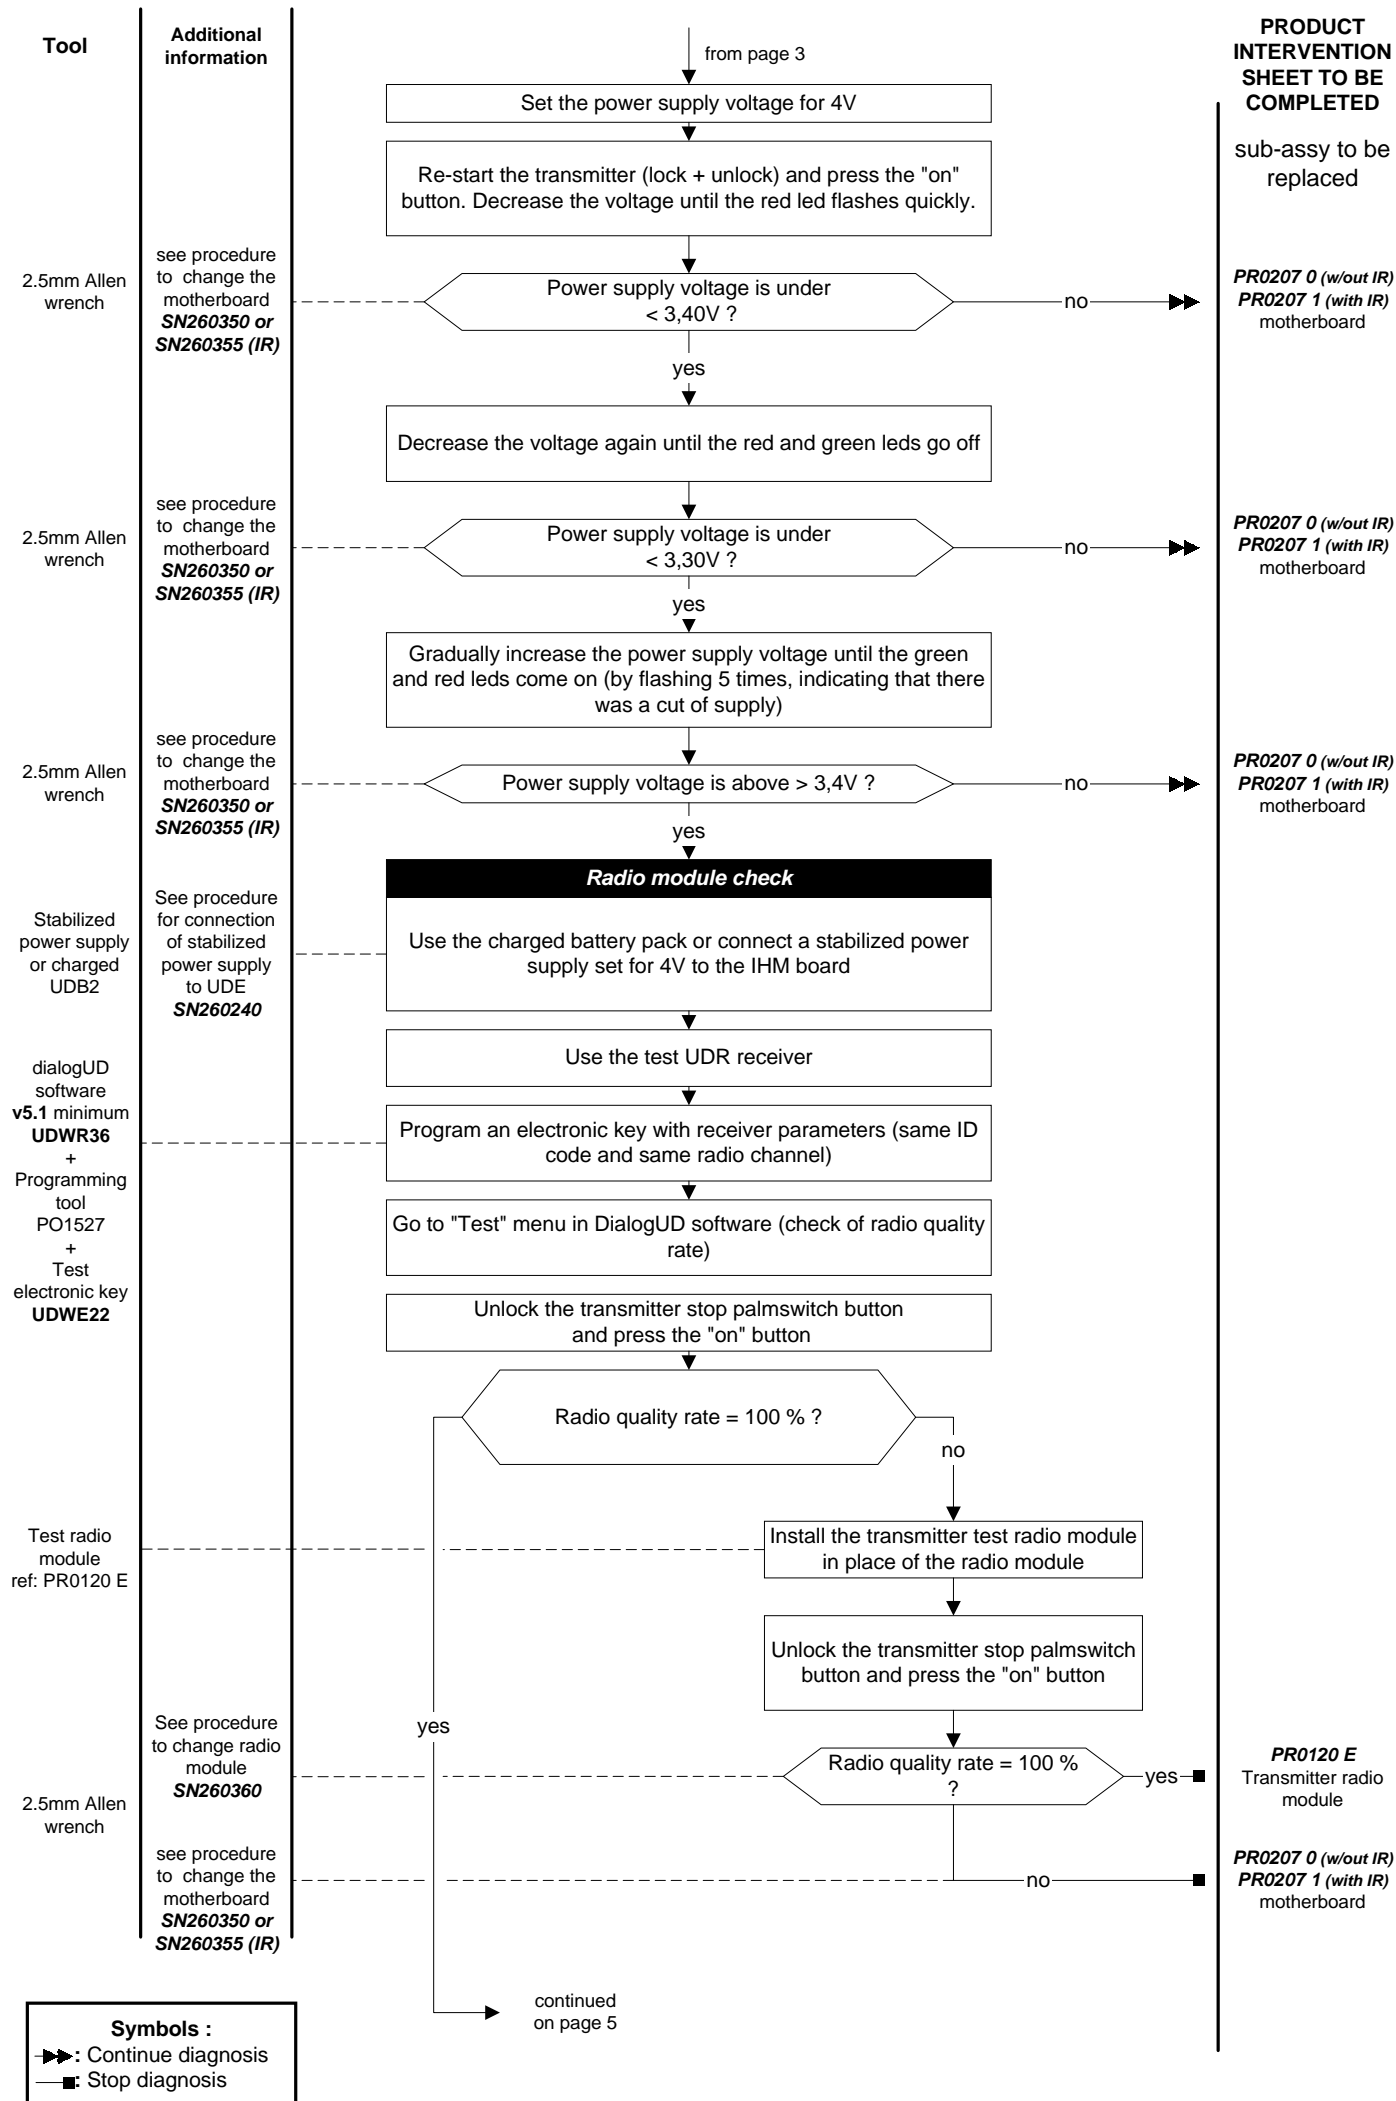

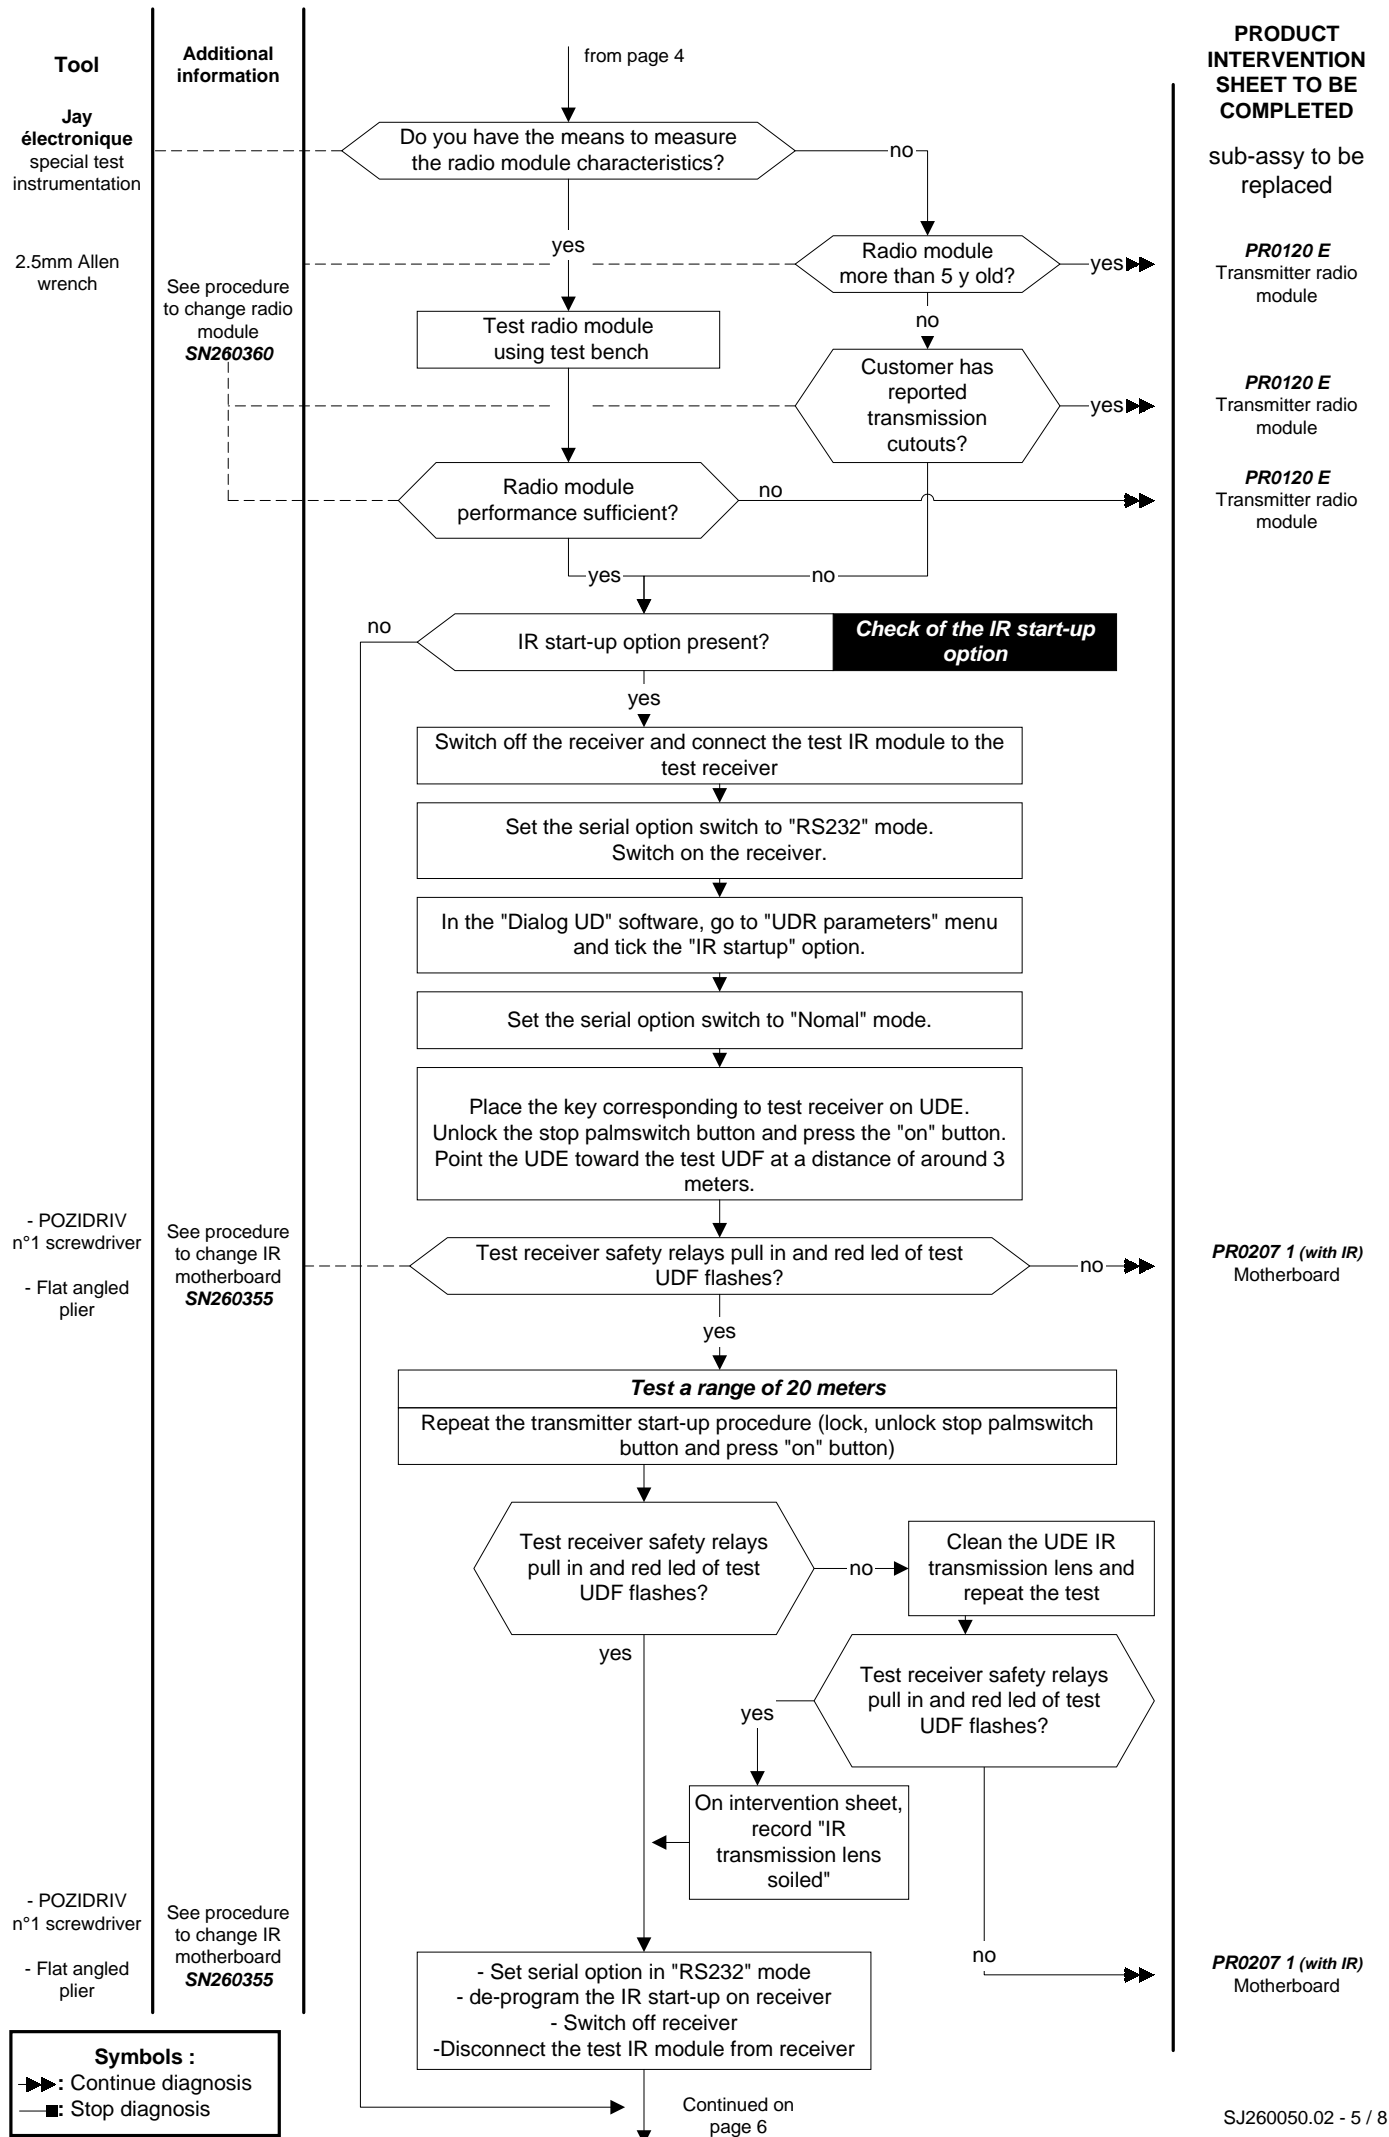



PRODUCT INTERVENTION SHEET TO BE COMPLETED

sub-assy to be replaced

PR0209 6/10 (w/out IR)
PR0210 6/10 (with IR)
Equipped transmitter housing cover

PR00116
Transmitter connection kit

PR0207 0 (w/out IR)
PR0207 1 (with IR)
Transmitter motherboard

PR0209 6/10 (w/out IR)
PR0210 6/10 (with IR)
Equipped transmitter housing cover

PR0212 6 / 10
Housing bottom or
PR0230
(bat.pack spring)

PR0209 6/10 (w/out IR)
PR0210 6/10 (with IR)
Equipped transmitter housing cover

PR00116
Transmitter connection kit

PR0209 6/10 (w/out IR)
PR0210 6/10 (with IR)
Equipped transmitter housing cover

PR0207 0 (w/out IR)
PR0207 1 (with IR)
Transmitter motherboard

UDWE22 V/X
Electronic key

Tool

Additional information

Sub-assemblies test

Functional test of UDE sub-assemblies

See procedure to change transmitter housing cover **SN260260**

see procedure to change the motherboard **SN260350 or SN260355 (IR)**


See procedure to change transmitter housing cover **SN260260**

2.5mm Allen wrench

Torx n°10 screwdriver

See procedure to change transmitter housing cover **SN260260**

See procedure to change transmitter housing cover **SN260260**

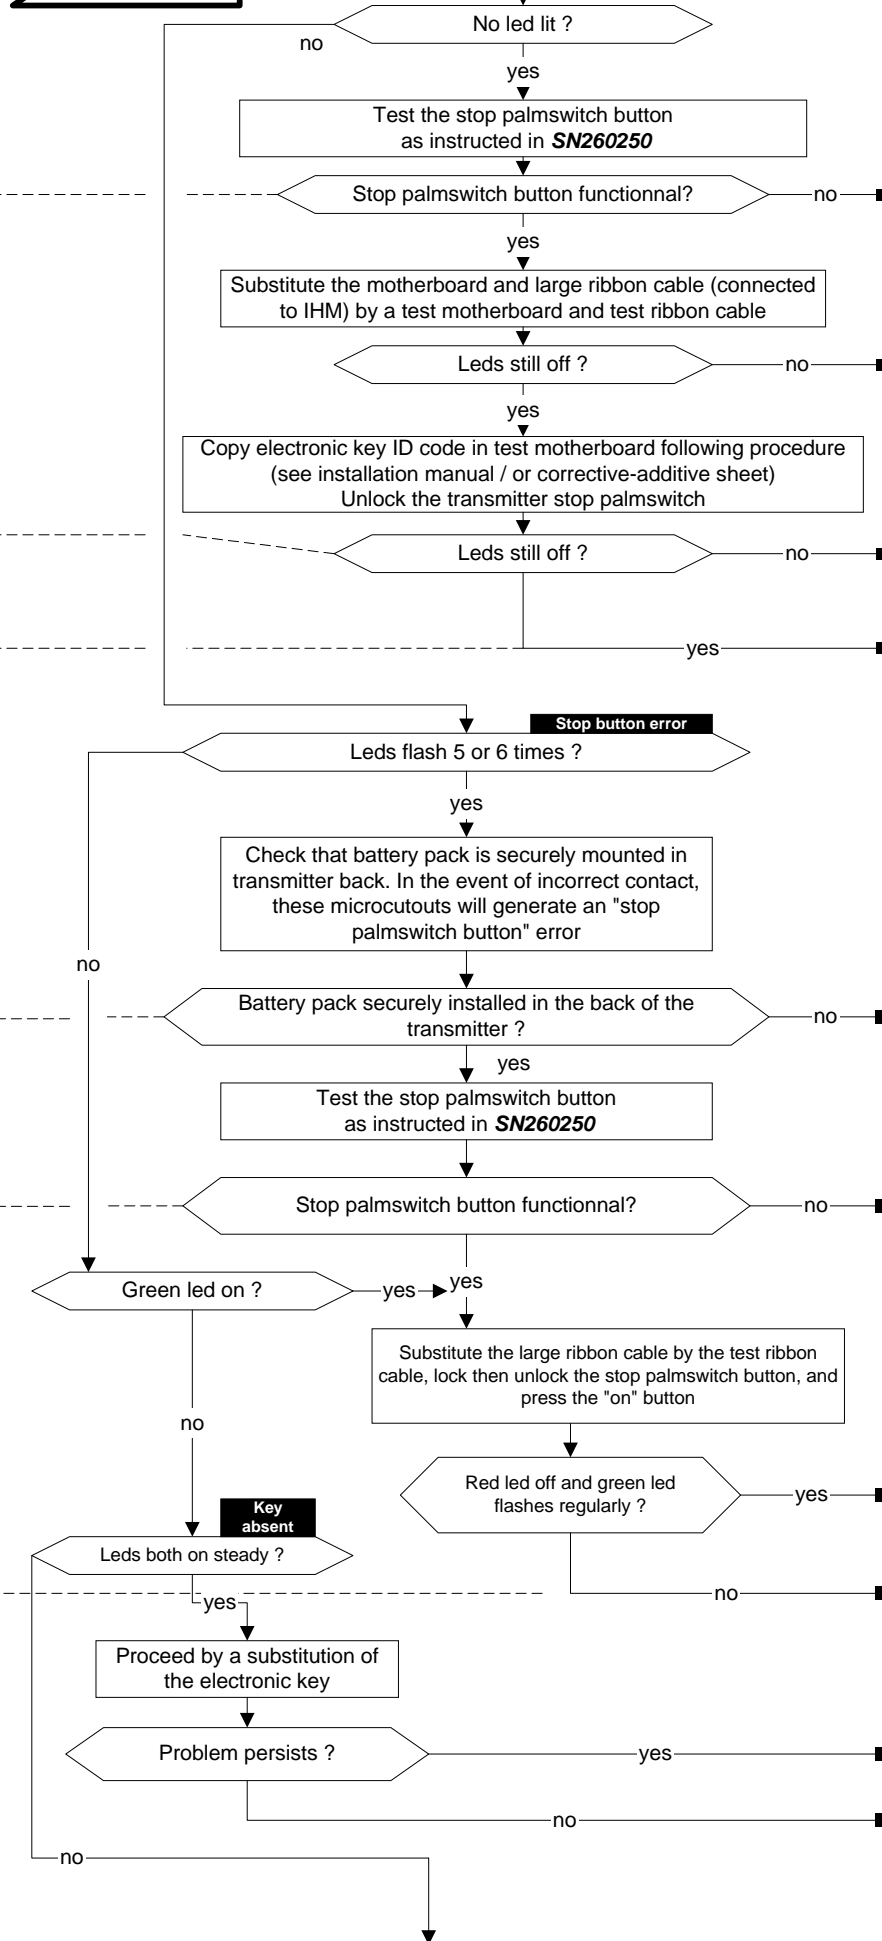

Symbols :

➡➡: Continue diagnosis
■: Stop diagnosis

PRODUCT INTERVENTION SHEET TO BE COMPLETED

sub-assy to be replaced

PR0117 x
Button board type x

UDWE22 V/X
Electronic key

PR0207 0 (w/out IR)
PR0207 1 (with IR)
Transmitter motherboard

PR0207 0 (w/out IR)
PR0207 1 (with IR)
Transmitter motherboard

Tool

Additional information

POZIDRIV
n°1
screwdriver

See procedure to change button board
SN260320

2.5mm
Allen
wrench

see procedure to change the motherboard
SN260350 or SN260355 (IR)

from page 7

Incorrect ID code

Both leds flash 3 times ?

yes

Copy the electronic key ID code in transmitter UDE (procedure described in manual / corrective or additive sheet)

Final test of sub-assemblies

no

Button board error

Both leds flash 4 times ?

yes

Proceed by a substitution replacing one by one button board by test button board

Problem persists ?

no

Final test of sub-assemblies

no

yes

EEPROM error

Both leds flash 7 times ?

yes

Change the electronic key by test electronic key with correct configuration

Problem persists ?

no

Final test of sub-assemblies

no

yes

µP error

Both leds flash 8 times ?

yes

Final test of sub-assemblies

no

Conclusion.
All sub-assemblies operate correctly ?


no

yes

END of diagnosis.
After repair, perform final test :
doc. SJ260060

Symbols :

→▶: Continue diagnosis
—■: Stop diagnosis

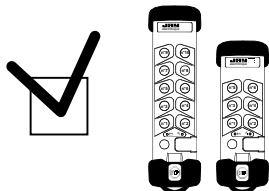

Additional
information

Tools:


test UDR receiver
+
test electronic key
(programmed with soft.
DialogUD and programming
tool PO1527)

Test IR module

(UDR must be programmed
with IR start-up option with soft.
DialogUD and programming tool
PO1527)

See document
SN260380

UDE final test after intervention

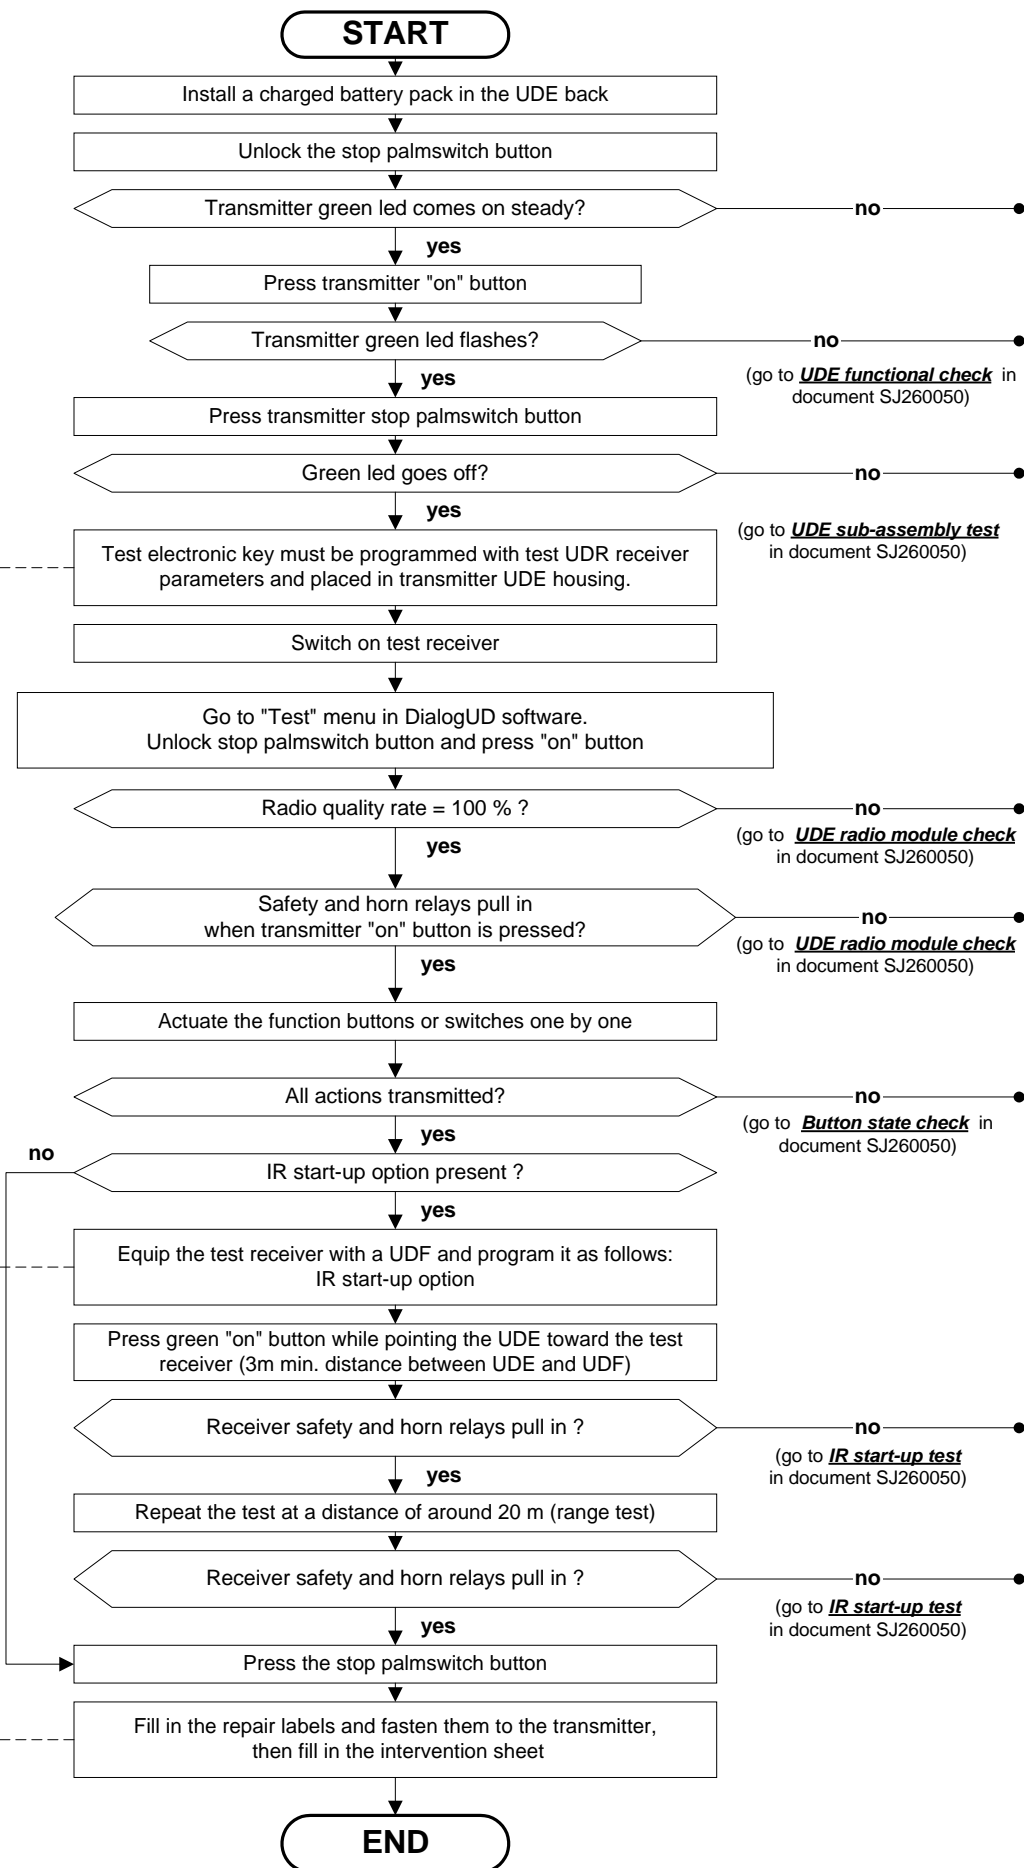


Key :

no

=

Test is negative, repeat
technical diagnosis on
product
(doc.: **SJ260050**)

Index	Modif. No.	Modification	Name	Date	Approved by:			
02	T 727	Update since UDE vC001 and DialogUD v5.1	E.DECHAME	29.06.04	Tech:		Market:	
 BPS - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33 (0)4.76.41.44.00 Fax: +33 (0)4.76.41.44.44		Transmitter final test UDE	Format:	A4				
			Filename:	SJ260060-02-EN.P65				
			DOC REF.:	SJ 260060.02	Page:	1 / 1		
			This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.					

This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.

Test of UDE stop palmswitch button

version A001 to C002 included :

- 1- Open the UDE housing using the No. 2 pozidriv screwdriver.
- 2- Disconnect the power supply wires.
- 3- Disconnect the ribbon cable linking the IHM board to the stop palmswitch button.
- 4- Lock the stop palmswitch button (down position).
- 5- Using a digital multimeter, measure the continuity across points 1 and 3, then 2 and 4: resistance should be infinite.
- 6- Unlock the stop palmswitch button (up position).
- 7- Using a digital multimeter, measure the continuity across points 1 and 3, then 2 and 4: the resistance should be null.
- 8- Reconnect the power supply wires.
- 9- Reconnect the ribbon cable linking the IHM board to the stop palmswitch button.

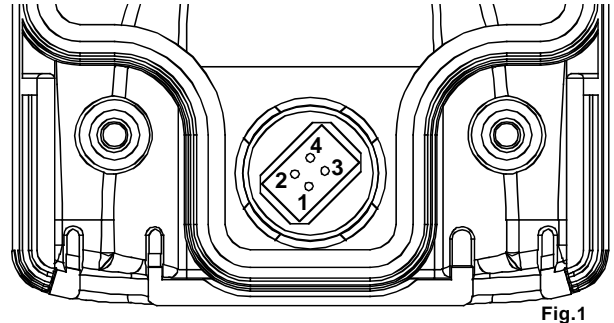


Fig.1

From version D001 :

- 1- Open the UDE housing using the No. 10 Torx screwdriver.
- 2- Disconnect the 12-pins ribbon cable linking the IHM board to motherboard.
- 3- Lock the stop palmswitch button (down position).
- 4- Check the condition of 3 pistons.
- 5- Using a digital multimeter, measure the continuity across points 12 and 11, then 12 and 10: resistance should be infinite.
- 6- Unlock the stop palmswitch button (up position).
- 7- Using a digital multimeter, measure the continuity across points 12 and 11, then 12 and 10: the resistance should be null.
- 8- Reconnect the 12-pins ribbon cable.

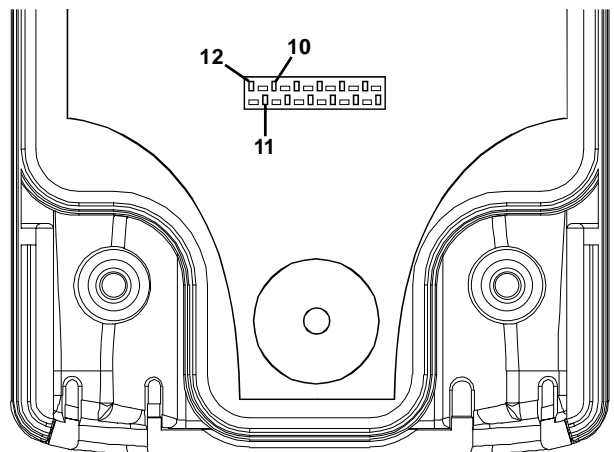




Fig.2

Index	Modif. No.	Modification	Name	Date	Approved by:			
01	T 727	Update, new IHM board from D001 vers.	E.DECHAME	15.06.04	Tech:		Market:	
  <p>BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</p>		Test of palmswitch button UDE	Format:	A4				
			Filename:	SN260250-02-EN.P65				
			DOC REF.:	SN 260250.02		Page:	1 / 1	
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.								

Changing UDE equipped cover and equipped housing

Tools : n°10 Torx screwdriver, n°1 Pozidriv screwdriver

Equipped housing cover :

Housing cover

- + 6 or 10 mounted BPxx (pushbuttons) with mechanical part
- + "On/Horn" button (mechanical part)
- + IHM board
- + Stop palmswitch button (mechanical part)
- + Housing seal
- + 2 pre-print descriptive labels
- + IR window for UDE with IR start-up option


References :

PR0209 6 UDE equipped cover 6+2 bt w/out IR

PR0209 10 ... UDE equipped cover UDE 10+2 bt w/out IR

PR0210 6 UDE equipped cover UDE 6+2 bt with IR

PR0210 10 ... UDE equipped cover UDE 6+2 bt with IR

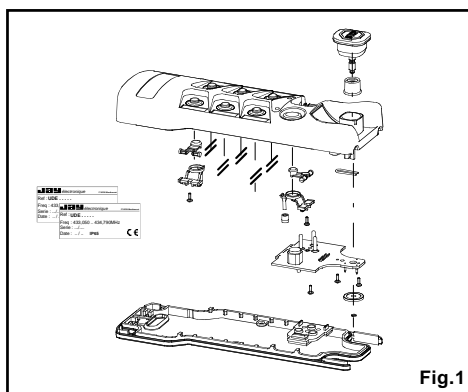

(This figure shows a 6+2bt transmitter equipped housing cover)

Equipped housing :

Housing cover

- + «6 mounted BP» or «10 mounted BP» or «9 mounted BP + 1 mounted BPTR (3 pos. elec. switch) at location nb.8 + label» (mechanical part)
- + «On/Horn» button (mechanical part)
- + IHM board
- + Stop palmswitch button (mechanical part)
- + Housing seal
- + 2 pre-print descriptive labels
- + IR window for UDE with IR start-up option
- + Housing bottom

References :

PR0215 6 UDE equipped housing 6+2 bt without IR


PR0215 10 UDE equipped housing 10+2 bt without IR

PR0215 10T UDE equipped housing+BPTR 10+2 bt without IR

PR0217 6 UDE equipped housing 6+2 bt with IR

PR0217 10 UDE equipped housing 10+2 bt with IR

PR0217 10T UDE equipped housing+BPTR 10+2 bt with IR

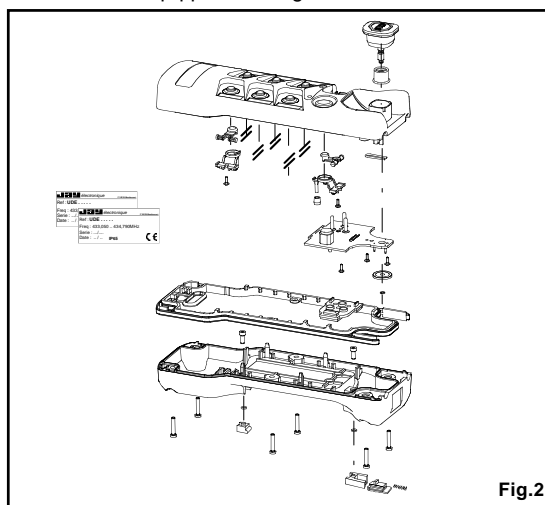

(This figure shows a 6+2bt transmitter equipped housing)

Disassembly :

If the transmitter version No. is lower than D001, perform the upgrade procedure given in document **SN260230**.

Remove the parts to be kept using a POZIDRIV No. 1 and No. 2 screwdriver..

or

For a transmitter version No. D001 or higher: use a Torx No. 10 and Pozidriv No. 1 screwdriver to remove and set aside the motherboard, the transmitter radio module, the button boards, the 12-contact ribbon cable (connecting motherboard and IHM board), the fastener, the battery pack and the electronic key..

Assembly :

- 1- If button configuration is incomplete or different from cover/housing kits, re-assembly original mechanical parts or install new mechanical kits (to upgrade the version for example), see assembly procedure from document **SN260290** and **SN260300**.

- 2- Replace and screw all original button boards in the housing.

- 3- **If the transmitter is equipped with the IR start-up option :**

3.1- Fill in pre-printed descriptive labels and fasten them to locations indicated in document **SN260380**.

3.2- Assemble IR start-up option as instructed in document **SN260355**.

3.3- Insert the electronic key if present.

3.4- Connect the battery pack.

If the transmitter is not equipped with the IR start-up option :

3.1- Fill in pre-printed descriptive labels and fasten them to locations indicated in document **SN260380**

3.2- Reconnect the ribbon cable linking the last button board to the motherboard (bottom connector).

3.3- Install the assembly formed by the motherboard/radio module in the elastic supports on the cover.


3.4- Connect 12-pins ribbon cables linking the motherboard to the IHM board.

3.5- Close the housing.

3.6- Install housing protective foams according to assembly procedure in document **SN260265**.

3.7- Insert the electronic key if present.

3.8- Connect the battery pack.

Index	Modif. No.	Modification	Name	Date	Approved by:			
02	T 727	Update, according to D001 version	E.DECHAME	29.07.2004	Tech:		Market:	
 BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44		Changing the equipped transmitter cover or equipped housing cover UDE	Format:	A4				
			Filename:	SN260260-02-EN.P65				
			DOC REF.:	SN 260260.02		Page:	1 / 1	
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.								

This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.

Changing rotary switch mechanical part (for COM2, COM3 and COM3R)

Rotary switch mechanical kit :

Reference : PR0057 COM

Tool : n°10 Torx and n°1 Pozidriv screwdriver,
cutter and flat angled plier

Parts list :

Item	Description	Quantity
A	Rotary switch	5
B	Mounting screw	5
C	Lip seal	5
D	Cam	5
E	Spring	10

PR0057 COM

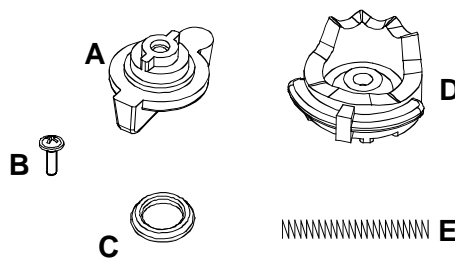


Fig.1

Disassembly :

- 1- Disconnect the battery pack.
- 2- Open the UDE housing using the No. 2 Pozidriv (V.A001 to C002) or n°10 Torx (from v.D001) screwdriver and remove protective foams.
- 3- Remove the button board corresponding to the mechanical kit to be replaced; perform the procedure for disassembly of the button boards detailed in document **SN260320**.
- 4- Remove the screw securing the kit using the No. 1 Pozidriv screwdriver and remove the rotary switch mechanical assembly (switch + seal, cam and spring if present).

Assembly :

- 1- If the switch to be installed is a 3-position rotary switch, else go to point n°2:
cut the pin on the cam (fig.2) using the cutter; no surplus thickness should remain.

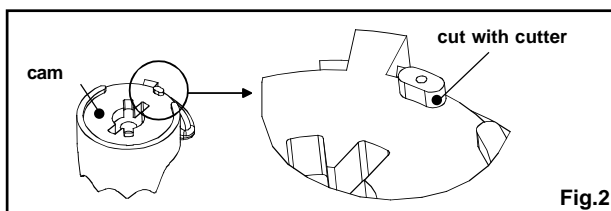


Fig.2

- 2- Fit the cam in the switch hole as shown in fig.3 with the pin toward the center of the housing.

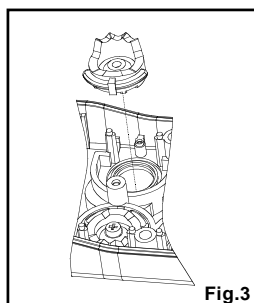


Fig.3

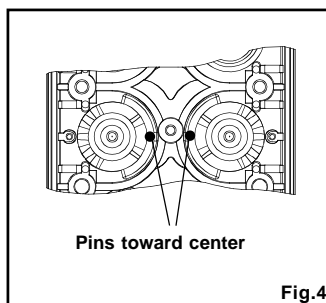


Fig.4

- 3- Fit the lip seal on the switch observing the correct mounting direction.

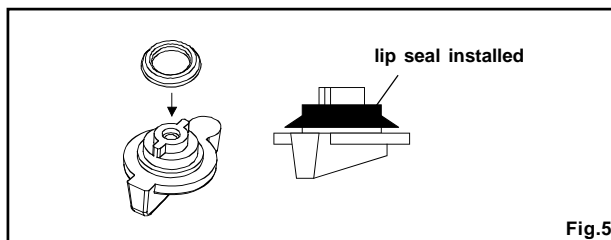


Fig.5

- 4- Holding the cam in position (pin toward center of housing), turnover the housing and place the seal/switch assembly in position in the cam housing. Fit the seal/switch assembly so that the long part of the switch is pointing toward the top of the housing (fig.6)

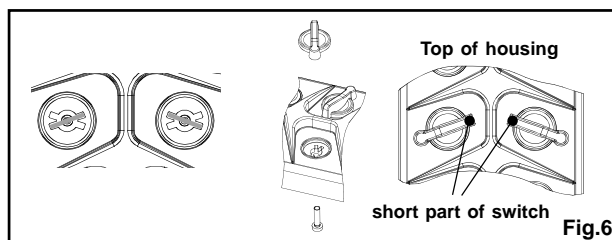


Fig.6

- 5- Install the mounting screw using the No. 1 Posidriv screwdriver.
- 6- If the switch is a COM3R switch (3 positions with automatic return), else go to point n°7 :
Insert 1st spring in rotary switch slot (see picture below), then turn the switch to the limit position in the other direction and install with a flat angled plier the other spring in the same way, compressing the first spring as much as possible.

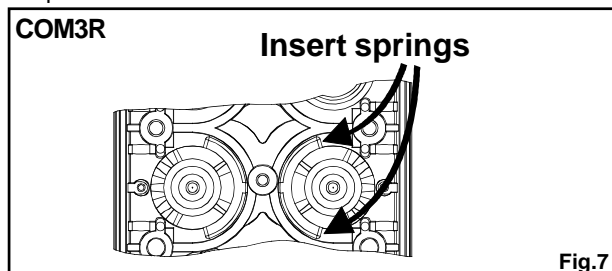




Fig.7

- 7- Install the button board as instructed in document **SN260320**.
- 8- Install protective foams (see doc. **SN260265**) and close the UDE housing.
- 9- Connect the battery pack.

Index	Modif. No.	Modification	Name	Date	Approved by:			
02	T 727	Pictures updated	E.DECHAME	15.06.04	Tech:		Market:	
 JAY électronique BPS - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44	 riv GEARING EN ISO 9001 Certified since 1992	Changing the rotary switch mechanical kit UDE	Format:	A4				
			Filename:	SN260300-02-EN.P65				
			DOC REF.:	SN 260300.02			Page:	1 / 1
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.								

Changing the motherboard (without IR start-up option)

Motherboard (without IR start-up option) kit :

Reference : PR0207 0

Tools : n°10 Torx, 2.5mm Allen wrench.

Parts list :

Item	Description	Quantity
A	UDE motherboard no IR	1
B	Allen screw	1
C	Washer	1
D	Spacer	1

PR0207 0

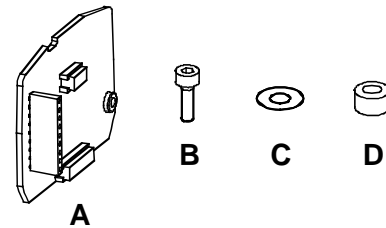


Fig.1

Disassembly :

- 1- Disconnect the battery pack.
- 2- Open the UDE housing using the No. 10 Torx screwdriver and remove protective foams.
- 3- Disconnect the ribbon cable linking the motherboard to the IHM board.
- 4- Grasp the assembly formed by the motherboard + radio module and gently disengage it from its resilient mountings.
- 5- Disconnect the ribbon cable linking the motherboard to the last button board.
- 6- Remove the Allen screw using the 2.5mm Allen wrench.
- 7- Separate the two parts: radio module and motherboard.

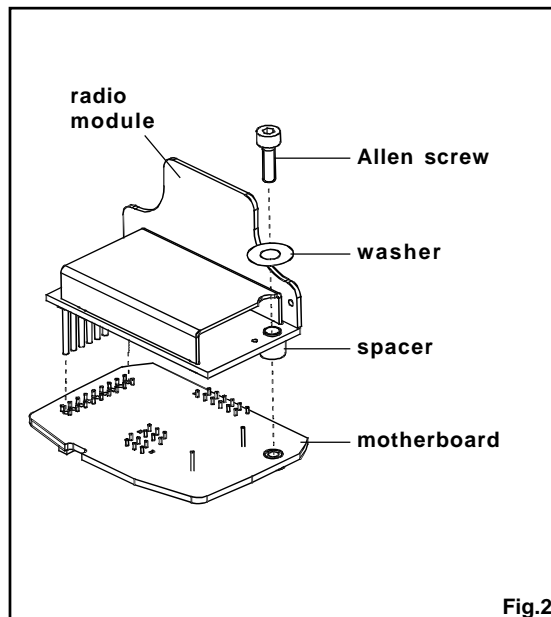


Fig.2

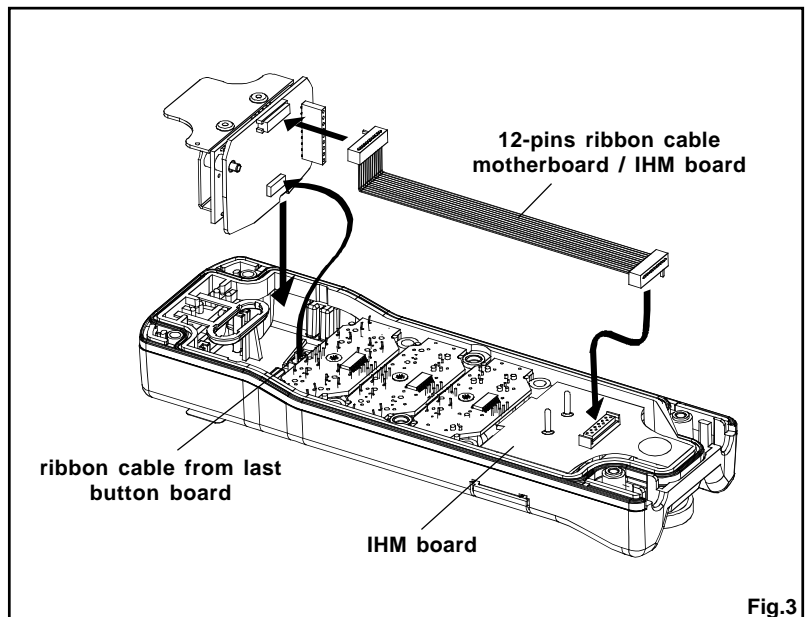





Fig.3

Assembly :

- 1- Connect the replaced motherboard to the radio module.
- 2- Install the spacer between the motherboard and the radio module (fig.2).
- 3- Install the washer and the Allen screw (fig.2).
- 4- Connect the ribbon cable from the last button board to the motherboard
- 5- Install the assembly formed by the motherboard / radio module in the resilient mountings of the cover.
- 6- Connect the ribbon cable linking the motherboard to the IHM board.
- 7- Install protective foams (see doc.SN260265) and close the housing.
- 8- Connect the battery pack.

Index	Modif. No.	Modification	Name	Date	Approved by:		
02	T 727	New Motherboard since vers. C001 Spacer added to PR0207 * Adhesive tape removed	E.DECHAME	29.06.04	Tech:	Market:	
<div></div> <p>BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</p>		Changing the motherboard (non IR) UDE	Format:	A4			
			Filename:	SN260350-02-EN.P65			
			DOC REF.:	SN 260350.02	Page:	1 / 1	

Changing the motherboard (with IR start-up option)

Motherboard with IR start-up option kit :

Reference : PR0207 1

Tools : n°10 Torx screwdriver, 2.5mm Allen wrench, flat angled plier

Parts list :

Item	Description	Quantity
A	Self-tapping screw 3x8	1
B	Allen screw	1
C	Spacer	1
D	Washer	1
E	IR window	1
F	Pins	2
G	Mother equipped with IR start-up option	1
H	Seal	1

PR0207 1

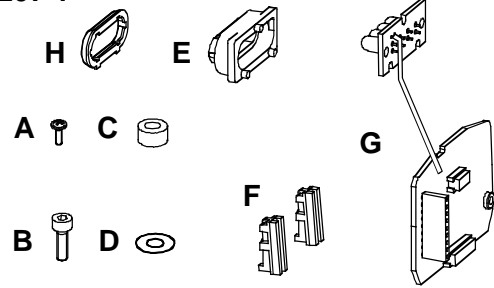


Fig.1

Disassembly :

- 1- Disconnect the battery pack.
- 2- Open the UDE housing using the No. 10 Torx screwdriver, and remove protective foams.
- 3- Disconnect ribbon cables linking the IHM board to the motherboard.
- 4- Grasp the motherboard + radio module assembly and carefully disengage it from its resilient mountings.
- 5- Disconnect the ribbon cable linking the motherboard to the last button board.
- 6- Apply pressure between the LED circuit and the housing to compress the seal.
- 7- While applying pressure using a flat angled plier, LED circuit and the IR window must be released from transmitter housing.
- 8- Remove the Allen screw using the 2.5mm Allen wrench.
- 9- Separate the two parts : radio module and motherboard.

Assembly :

- 1- Connect the replaced motherboard to the radio module.
- 2- Install the spacer between the motherboard and the radio module (fig.2).
- 3- Install the washer and the Allen screw (fig.2).
- 4- Insert the IR window on the LED circuit, observing the mounting direction given by the pins (see fig.3).
- 5- Place the seal on the IR window with the flat part against the lens (see fig.3).
- 6- Fit the assembly formed by the LED circuit/lens/IR window in the UDE housing (see fig.4).
- 7- While applying pressure using a flat angled plier, insert the two pins in the housing ribs observing the mounting direction (see fig.5); the pin locators should clip into the holes in the circuit (see fig.6).

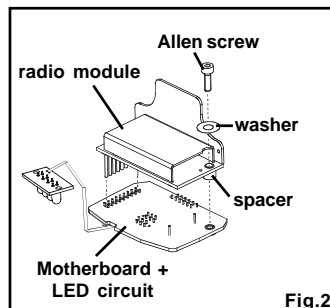


Fig.2

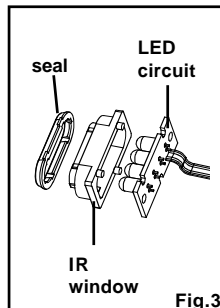


Fig.3

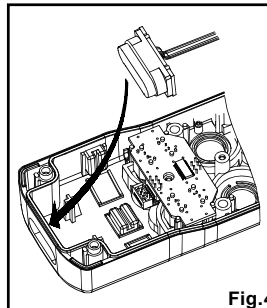


Fig.4

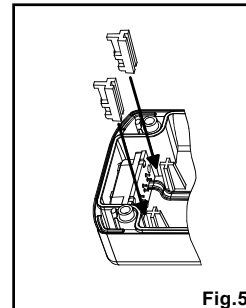


Fig.5

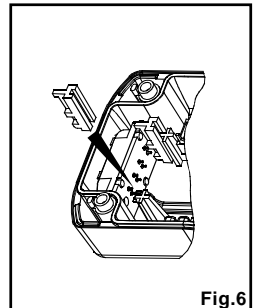


Fig.6

- 8- Install the assembly formed by the IR motherboard + radio module in the transmitter inserts and connect the last button to this assembly.
- 9- Connect the ribbon cable linking the motherboard to IHM board.
- 10- Install protective foam (see doc. 2600265) and close the transmitter housing.
- 11- Connect the battery pack.

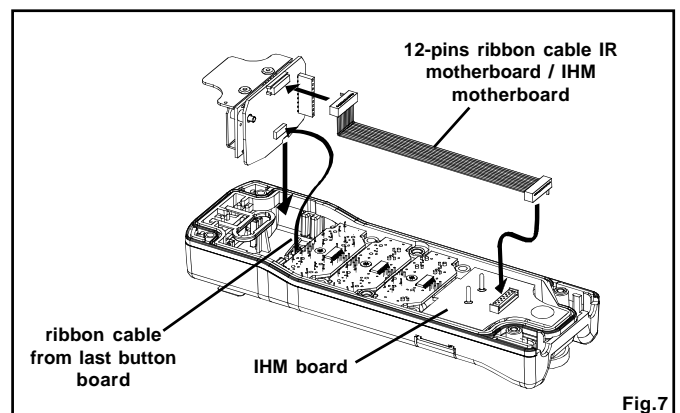




Fig.7

Index	Modif. No.	Modification	Name	Date	Approved by:			
00	T 727	First issue	E.DECHAME	17.11.04	Tech:		Market:	
<div> BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</div> <div></div> <div>Changing the motherboard (with IR) UDE</div>			Format:	A4				
			Filename:	SN260355-00-EN.P65				
			DOC REF.:	SN 260355.00		Page:	1 / 1	

This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.

UDE transmitter

Grey key identification sheet

KEEP THIS DOCUMENT

Read and keep this document in a safe location.

It contains important information concerning the key which you have just received

For operation of your radio remote control, refer to the UD installation and user manual.

An identification No. is engraved on the side of the electronic key.


This key contains all the parameters of your transmitter, ensuring correct communication with the associated receiver (Frequency channel, identification code, dead man time ...)

Please indicate this identification No. when ordering a new identical key.

Please identify your electronic key using the label supplied with the key.

Fill in the identification of the equipment controlled by this key.

UDE transmitter electronic key

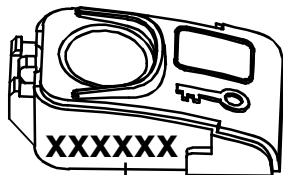

(6-digit number engraved on
electronic key)

Electronic key parameter label : (to be stuck by the repairman)

Equipment : (to be filled in by the customer)



LE 26/07/2004 A 18:33:53 EDITION DE DOSSIER

DOS011

DOSSIER : DOSGEN R27 E 003
UD REPAIR DATA PACKAGE : UDR RECEIVER PART

ARTICLE : DOSGEN R27

FOURNISSEUR : 38JA10

JAY ELECTRONIQUE S.A.

ETAT : VALIDE ET ACTIF

176 RUE LAVOISIER
38330 MONTBONNOT ST MARTIN

COMMENTAIRE :

DATE CREATION : 26.07.2004
DATE ENVOI FRS : 0.00.0000
DATE DE FIN : 0.00.0000
CONSULTAT. FRS : 0.00.0000
DATE ACC.RECEPT: 0.00.0000

DOSSIER SOURCE : E 002

DOSSIER GENERAL DE PRODUCTION :

LIGNES ASSOCIEES

N°ORDRE	DOCUM/OUTIL	ETAT	DESIGNATION	
* 01	SN 270070 02	V	LIST OF TOOLS REQUIRED FOR REPAIR	UDR
* 02	SN 270075 00	V	DETERMINE VERSION OF UDR RECEIVER	UDR
* 03	SE 270020 02	V	EXPLODED VIEW / UDR VERSION A001 TO B002 INCL.	UDR
* 04	SE 270021 00	V	EXPLODED VIEW / UDR VERSION B003 AND HIGHER	UDR
* 05	SE 270200 00	V	ACCESSORIES AND SPARE PARTS	UDR
* 06	SN 270080 02	V	CHANGES TO RECEIVERS	UDR
* 07	SJ 270040 02	V	QUICK TEST BEFORE INTERVENTION	UDR
* 08	SJ 270050 02	V	TECHNICAL DIAGNOSIS	UDR
* 09	SJ 270060 02	V	FINAL TEST AFTER INTERVENTION	UDR
* 10	SN 270090 02	V	CHANGING THE RECEIVER HOUSING	UDR
* 11	SN 270095 01	V	CHANGING THE UDF IF MODULE ELECTRONIC BOARD	UDF
* 12	SN 270100 02	V	CHANGING THE RECEIVER MOTHERBOARD	UDR
* 13	SN 270110 02	V	CHANGING THE RECEIVER RADIO MODULE	UDR
* 14	SN 270120 02	V	MARKINGS ON REPAIRED RECEIVER	UDR

List of tools required for repair of receiver UDR

○ Mechanical part :




- 6mm flat-tip screwdriver (for fuse-holder)
- No.1 POSIDRIV screwdriver (for radio module mounting screws)
- No.2 POSIDRIV screwdriver (for screws securing housing,motherboard and IR module)
- No.10 TORX screwdriver (for screws securing IR module electronic board)
- 16mm box spanner (for BNC connector)
- 2.5mm Allen wrench (for antenna unit screw)
- Electronics flat nose pliers (for plastic spacers of housing)
- Kit of 2 spanners, ref : **PR0142** comprising :
 - spanner for assembly / disassembly PG29 plastic cable gland
 - spanner for assembly / disassembly serial option
- Soldering iron (for UDF electronic board)

○ **Measurement and test part:**

- Stabilised power supply 12-24VDC / 1 A min
- AC power supply, 24-48VAC / 20 VA
- Digital multimeter
- Test transmitter UDE, ref. : **UDE122222 010**
- Test IR module, ref. : **UDF1**
- Serial link accessory, ref. : **UDWR32**
- «Dialog UD» software , **v5.1** minimum, ref. : **UDWR36**
- PC microcomputer equipped with a serial port COM
- Test receiver radio modules, ref. :
PR0120 R (for UDR version A001 to B002 included)
PR0208R (for UDR version B003 and higher)
- Test relay board, ref. : **PR0122**

Test products and test accessories

Test spare parts

Index	Modif. No.	Modification	Name	Date	Approved by:			
02	T 727	Test UDE : UDE122222 010 DialogUD v5.1 minimum PR0208 R for UDR v.>B002	E.DECHAME	01.07.04	Tech:		Market:	
   <p>BPS - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</p>		List of tools required for repair UDR	Format:	A4				
			Filename:	SN270070-02-EN.P65				
			DOC REF.:	SN 270070.02		Page:	1 / 1	
			This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.					


Determine version number of UDR receiver, receiver mother board and UDF IR module

These version numbers identify product versions and therefore their various technical changes.


The table of technical changes (doc.SN270080) indicates all the upgrades which you need to perform on the UDR receiver in accordance with its version number.

1- UDR receiver


The version number is indicated on the nameplate, fastened to the receiver housing and inside receiver housing.

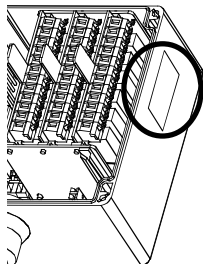


Nameplate for UDR version A001 to B003 included

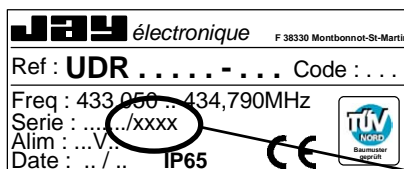

UDR version number
(example : C001)


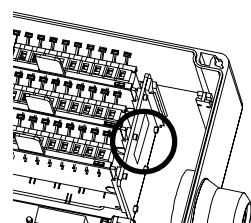


Nameplate for UDR version C001 and higher

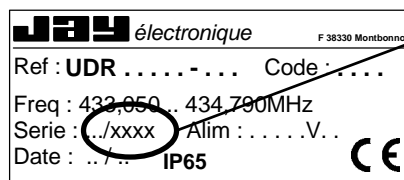

2- Receiver mother board

 

The version number is indicated on a label, fastened on PCB, close to power supply terminals strips.

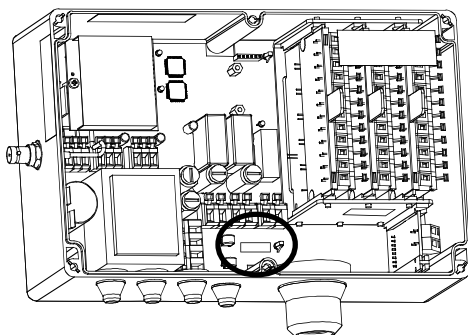




Receiver mother board version number
(example : E18980)

3- UDF IR module

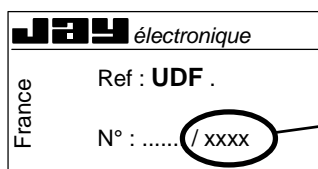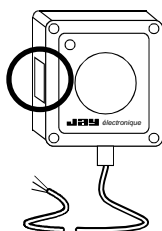The version number is indicated on the nameplate, fastened to the UDF housing.



UDF IR module version number
(example : A002)


Index	Modif. No.	Modification	Name	Date	Approved by:			
00	T 727	First issue	E.DECHAME	01.07.04	Tech:		Market:	
<div></div> <div>BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</div>		Determine product version number	Format:	A4				
		UDR	Filename:	SN270075-00-EN.P65				
		DOC REF.:	SN 270075.00	Page:	1 / 1			
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.								

Various accessories and spare parts for UDR receiver

Antenna and cable extension

10m cable gland kit for UDF
module

 UDWR10



1/4 wave antenna
for vehicle + 5m

VUB150

1/2 wave 400MHz staright/
offset antenna

VUB086




2m antenna extender
+ insulated bracket

VUB100

5m antenna extender
+ insulated bracket

 VUB120



2m antenna extender
+ non-insulated bracket

VUB105


5m antenna extender
+ non-insulated bracket

VUB125

Directional arrow


Set of 4
colored
directional arrows

UWE002

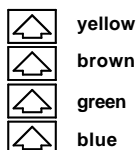

Set of 2
colored directional arrows

 UWE001




UDF IR module

Kit with 1 IR module + 10m cable

UDF1

Kit with 2 IR modules + 10m cable

 UDF2




IR module electronic board

PR0134

changing procedure **SN270095**

IR window for UDF module

PR0133

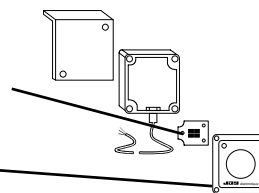

Monitoring and diagnostic accessories

«Dialog UD» level 2
+ RS232 cable


UDWR37

(version 5.1 minimum)



Serial link accessory

 
UDWR32



Various spare parts

Common wiring
accessory

UDWR12

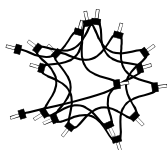


16-pin male connector + 2m cable

UDWR13


24-pin male connector + 2m cable

UDWR14

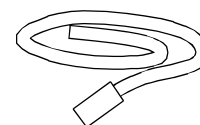

Plastic cable
gland kit

UDWR11

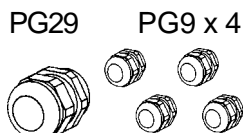




Spanners kit

PR0142

Spanner for assembly/disassembly PG29 cable gland

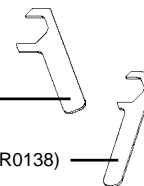Spanner for assembly/disassembly serial link option (PR0138)



Index	Modif. No.	Modification	Name	Date	Approved by:			
00	T 727	First issue	E.DECHAME	24.06.04	Tech:		Market:	
 BPS - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tél: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44		Various accessories and spare parts UDR	Format:	A4				
			Filename:	SE270200-00-EN.P65				
			DOC REF.:	SE 270200.00	Page:	1 / 1		
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.								

This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.

Upgrading UDR receivers according to version




1- Upgrading receivers :


UDR version number	Obligatory upgrade	Part(s) to be used for the upgrade		
		Description	Reference	Assembly / disassembly procedure
A001 to A003 included	Mother board have to be changed if its version nb is lower than E18982	UDR mother board	PR0124 A (24-48VAC) PR0124 B (115-230VAC) PR0124 4 (12-24VDC)	SN270095
	If modification for using the "Horn n°2" function : Mother board have to be changed if its version nb is lower than E18984			
	If modification for using "micro-speed", "coupling cranes" or "transfer crane" functions : Mother board have to be changed if its version nb is lower than E18986			
	If UDR with IR start-up option, check of UDF IR module version number : IF UDF version number is < than A002 , the UDF electronic board must be changed	UDF electronic board	PR0134	SN270100
B001	If modification for using "micro-speed", "coupling cranes" or "transfer crane" functions : Mother board have to be changed if its version nb is lower than E18986	UDR mother board	PR0124 A (24-48VAC) PR0124 B (115-230VAC) PR0124 4 (12-24VDC)	SN270100
Since B002	No obligatory upgrade (The last version on 07/2004 is C003)			

2- UDR mother board / UDR radio module pairing in case of repair / exchange :

UDR mother board with a version number **E18980 to E18984 included**, have to be paired with a **PR0120 R** radio module.

UDR mother board with a version number **E18985 and higher**, have to be paired with a **PR0208 R** radio module.

Index	Modif. No.	Modification	Name	Date	Approved by:			
02	T 727	Update according new versions Pairing the mobo and radio module	E.DECHAME	01.07.04	Tech:		Market:	
   <p>BP5 - 176, rue Lavoisier MONTBONNOT - ST MARTIN - 38334 St ISMIER CEDEX Tel: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</p>		<p>Changes to receivers</p> <p>UDR</p>	Format:	A4				
			Filename:	SN270080-02-EN.P65				
			DOC REF.:	SN 270080.02		Page:	1 / 1	
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.								

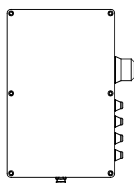


See table of probable faults
on page 3


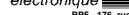
UDWR36
DialogUD
software
v5.1 minimum
+
programming
tool PO1527


Checked
customer
transmitter
or
test transmitter

Digital
multimeter

Digital
multimeter

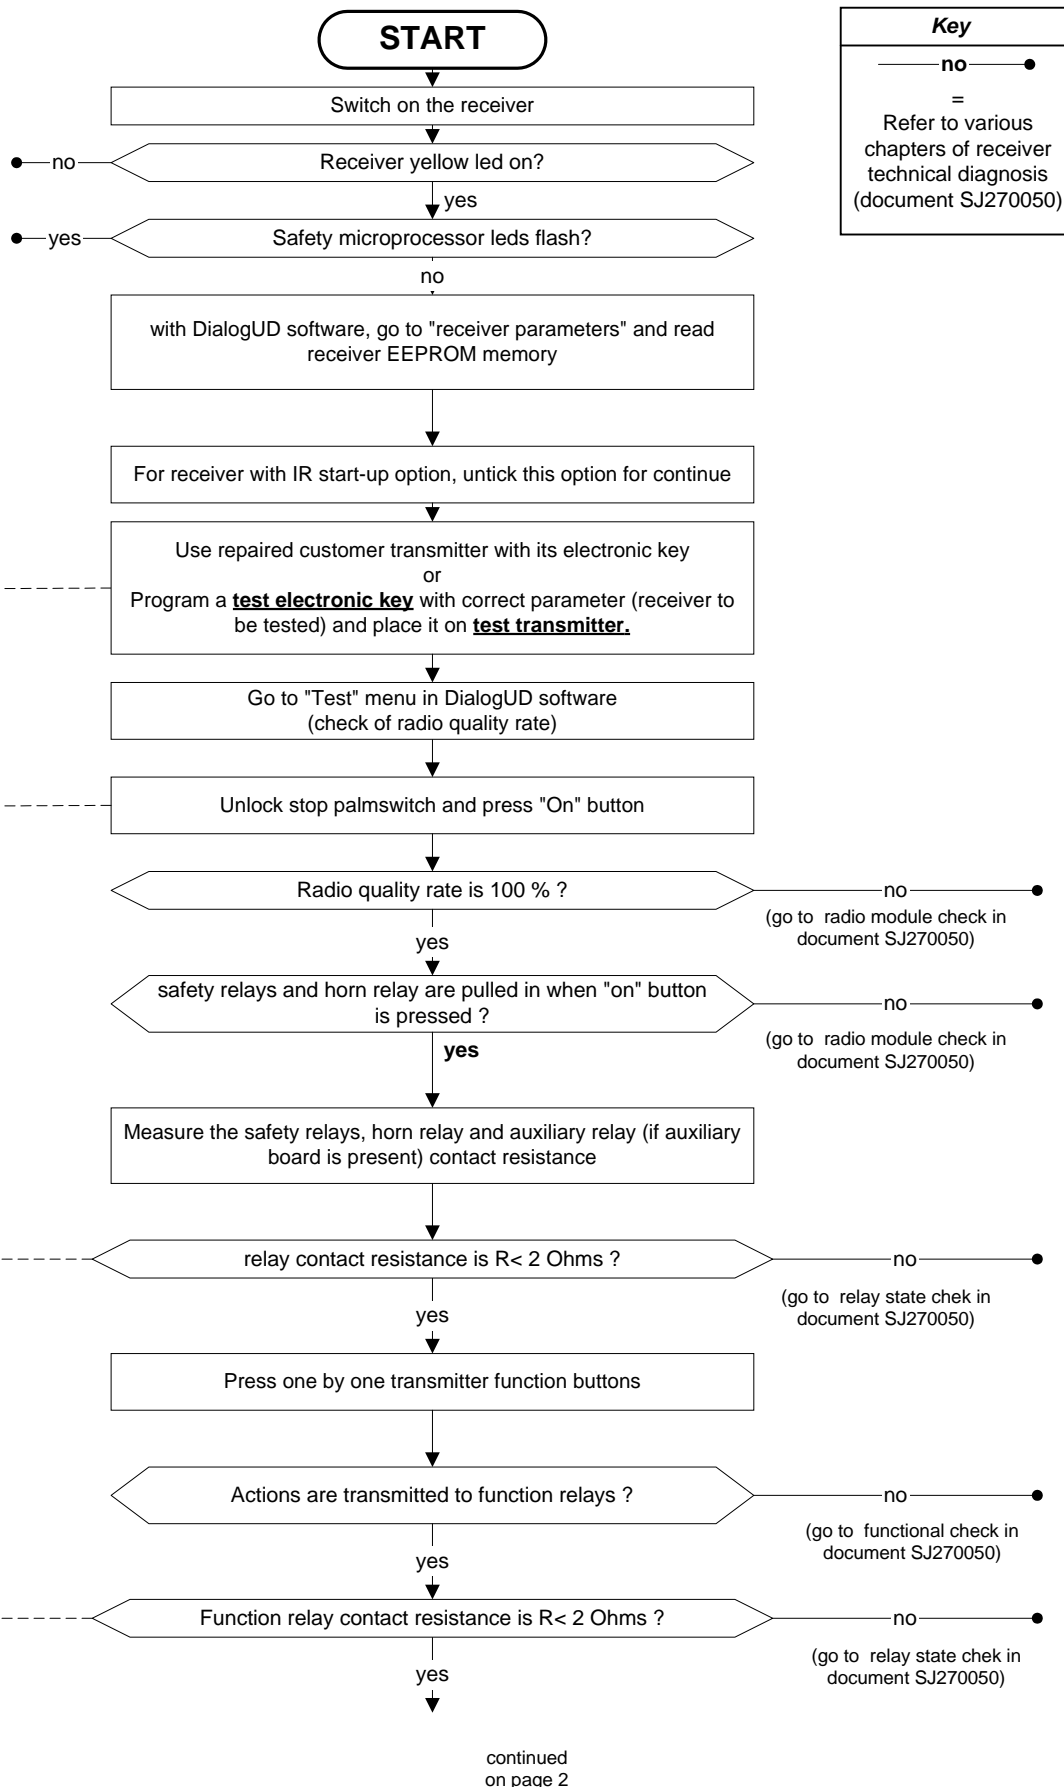

Index	Modif. No.	Modification	Name	Date	Approved by:		
02	T 727	Update due to new DialogUD 5.1 version	E.DECHAME	22.07.04	Tech:		Market:
<div><p>JAY électronique BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tel : +33.(0)4.76.41.44.00 Fax : +33.(0)4.76.41.44.44</p></div>		Quick test before intervention UDR	Format:	A4			
			Filename:	SJ270040-02-EN.P65			
			DOC REF.:	SJ270040.02		Page:	1 / 3
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.							

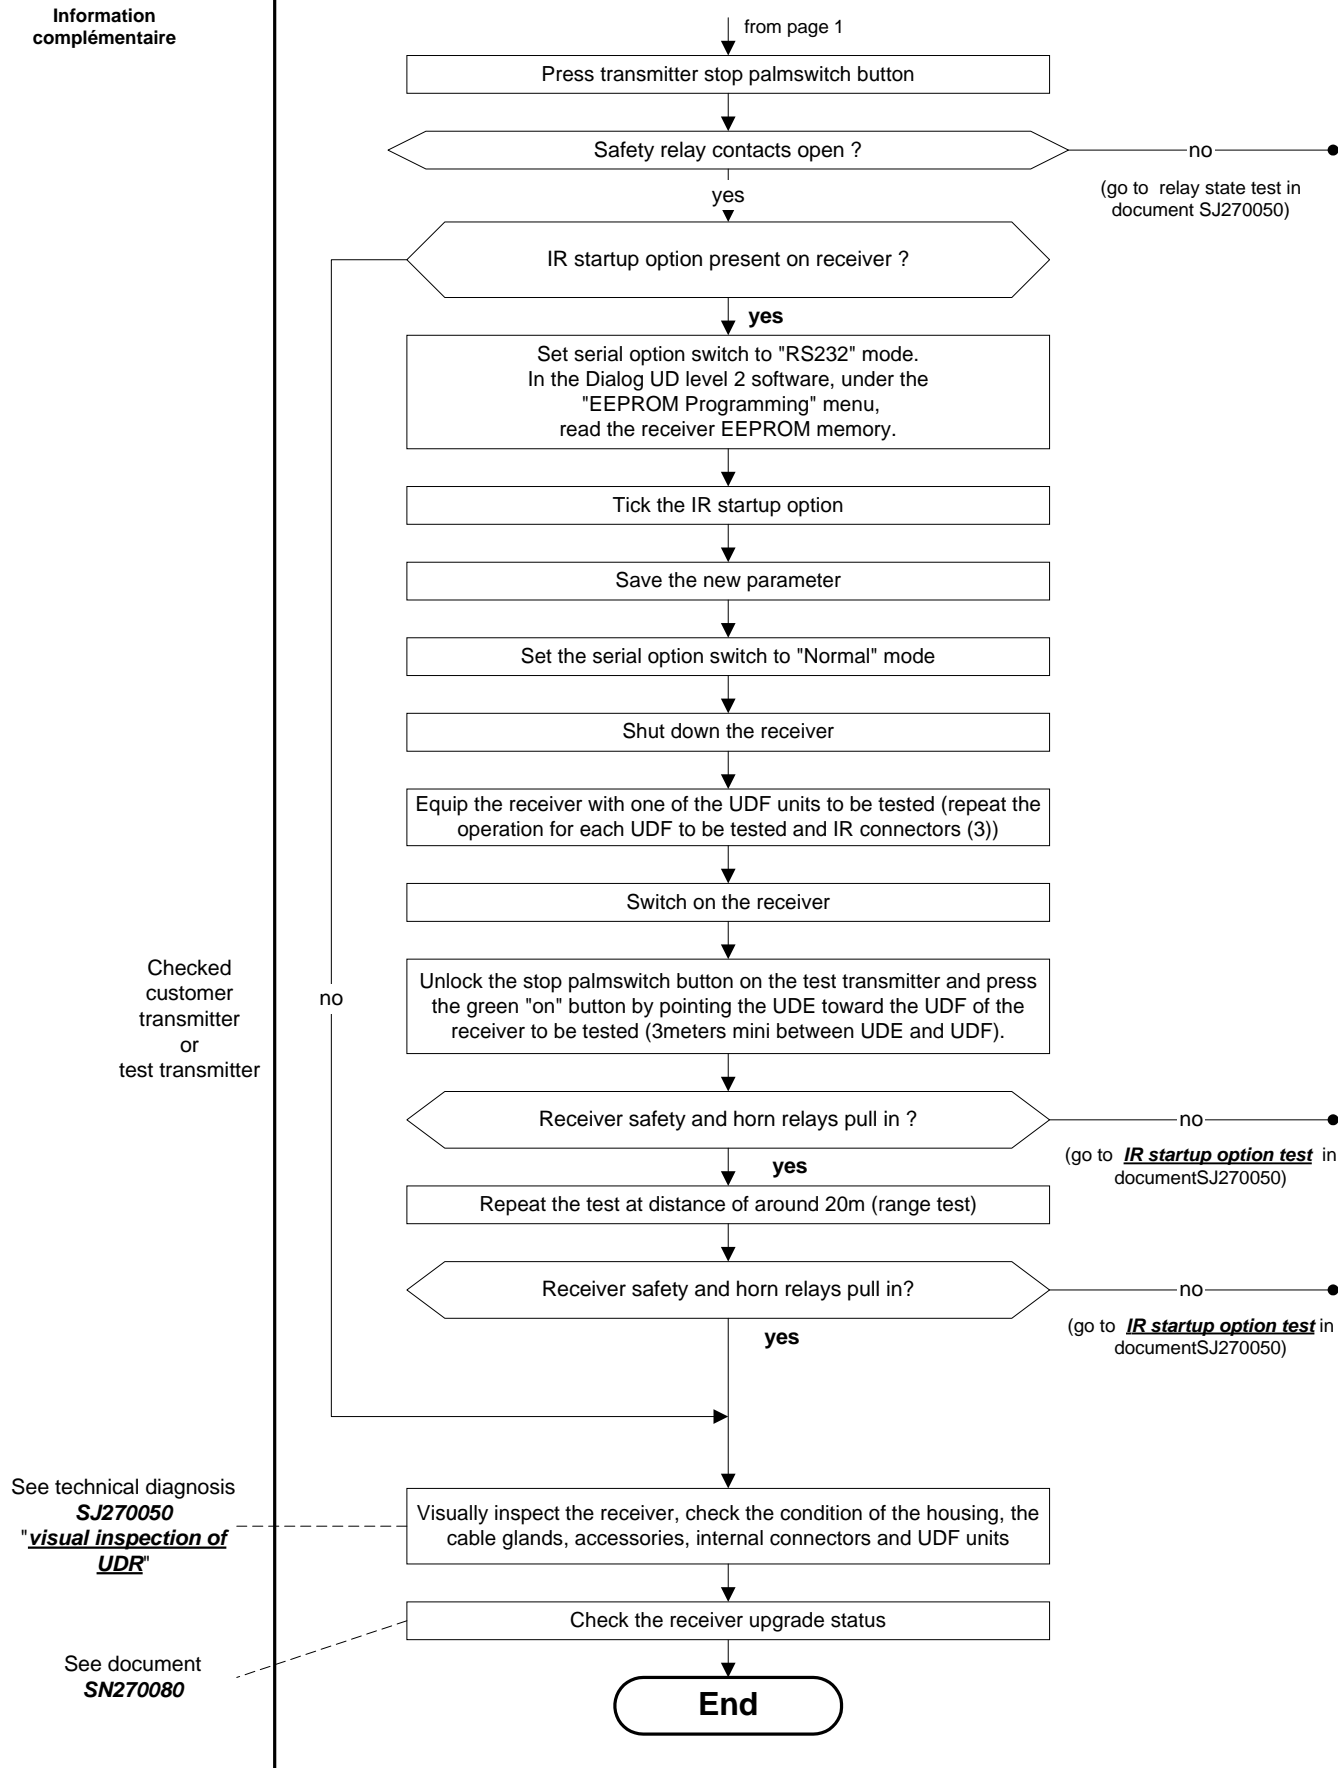


Error messages generated by microprocessor indicator lights

Safety Microproc. LED 1 - ORANGE -	Safety Microproc. LED 2 - GREEN -	Possible causes of fault	Corrective actions
Off (supplied but Yellow power indicator light also off)		- Fuses blown - Incorrect power supply wiring - Faulty transformer	- Check condition of fuses and fuse rating - Check power supply wiring according to receiver model - Replace motherboard
2 flashes		- Auxiliary board faulty	- Replace auxiliary board - Replace motherboard
3 flashes		- Safety relays faulty	- Replace motherboard
4 flashes 5 flashes 6 flashes 7 flashes		- Internal faults on memories and microprocessors	- Replace motherboard

Other messages generated by receiver motherboard indicator lights

LED name and color	Mode	Indication	Message	State
Safety Microproc.1 LED (ORANGE)	<i>Normal</i>	Indicates validity of identity code	Message not received	OFF
			Message received with correct identity code	OFF
			Message received with incorrect identity code	Flashes regularly
	<i>Serial link</i>	"RS232 mode"		ON
Safety Microproc.2 LED (GREEN)	<i>Normal</i>	Indicates radio reception quality	No radio reception	OFF
			Poor radio reception	Flashes
			Good radio reception	ON
	<i>Serial link</i>	"RS232 mode"		OFF
Horn relay LED (RED)	All	Horn relay state	not activated (OFF)	OFF
			activated (ON)	ON
Auxiliary relay LED (RED)	All	Auxiliary relay state on auxiliary board (option)	not activated (OFF)	OFF
			activated (ON)	ON
ON Power LED (YELLOW)	All	Indicates power supply	Receiver shut down	OFF
			Receiver powered up	ON
Safety relay LED (RED)	All	State of safety relays	not activated (OFF)	OFF
			activated (ON)	ON
Function relay LED (RED)	All	State of function relay N	not activated (OFF)	OFF
			activated (ON)	ON

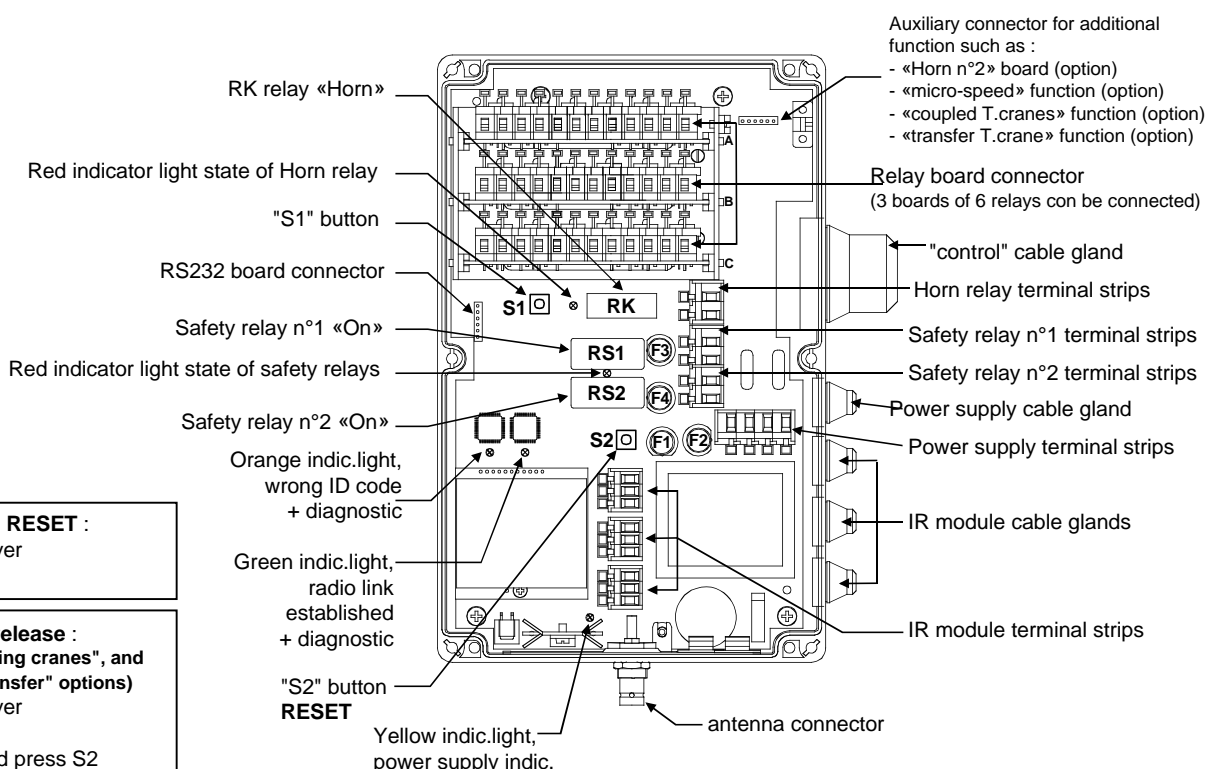


UDR motherboard RESET :

- 1 - Switch on receiver
- 2 - press S2 button

Receiver manual release : (for "Coupled travelling cranes", and "Travelling crane transfer" options)

- 1 - Switch on receiver
- 2 - press S1 button
- 3 - Maintain S1, and press S2
- 4 - release S1
- 5 - release S2

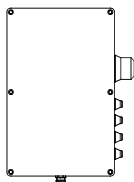

UDR TECHNICAL DIAGNOSIS

- for preparation of an estimate -

**PRODUCT
INTERVENTION
SHEET**
(TO BE COMPLETED)

Sub-assy to be
replaced

Tool

Additional
information

POZIDRIV
screwdriver
No. 2

See "Receiver
changes"
document
SN270080

-POZIDRIV
screwdriver
No. 2, No. 1
- 16mm box
spanner
-2.5 mm Allen
wrench
-flat nose pliers

Torx
screwdriver
No. 10

-POZIDRIV
screwdriver
No. 2, No. 1
-16mm box
spanner
-2.5mm Allen
wrench
-flat nose pliers

See motherboard
replacement
procedure
SN270100

START

Visual inspection of UDR

Open the receiver housing

Check the receiver version

Receiver complies with respect to technical changes
table?

no →

yes

Housing in good condition?

no →

yes

Cable glands in good condition?

no →

yes

If present, IR modules in good condition?

no →

yes

If present, plug-in connectors in good condition?

no →

yes

Antenna and extension in good condition

no →

yes

Receiver motherboard oxidised or modified by third party?

yes →

non

Spring terminal boards in good condition?

non →

yes

Continued on
page 2

Spare part or technical
upgrade accessory
(X99 fault code)
(P.M.)

**PR0125
PR0125 1**
Receiver housing
(P.M.)

**PR0127
UDWR11**
cable gland kits (P.M.)

**UDF 1 / 2
PR0133**
IR module (P.M.)

**UDWR13
UDWR14**
Connector (P.M.)


**VUB084-086
VUB105-125**
Antenna / Extension
(P.M.)

PR0124 4/A/B
Motherboard (P.M.)

PR0124 4/A/B
Motherboard (P.M.)

Symbols/abbreviations :

→: Continue Diagnosis
■: Stop Diagnosis
P.M. : Preventive Maintenance

Index	Modif. No.	Modification	Name	Date	Approved by:			
02	T 727	Update since DialogUD 5.1	E.DECHAME	22.07.04	Tech:		Market:	
 BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tel: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44		Receiver technical diagnosis UDR	Format:	A4				
			Filename:	SJ270050-02-EN.VSD				
			DOC REF.:	SJ 270050.02				Page:
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.								


This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.

sub-assy to be
replaced

PR0123
Receiver fuse kit

PR0123
Receiver fuse kit


PR0124 4/A/B
Receiver motherboard

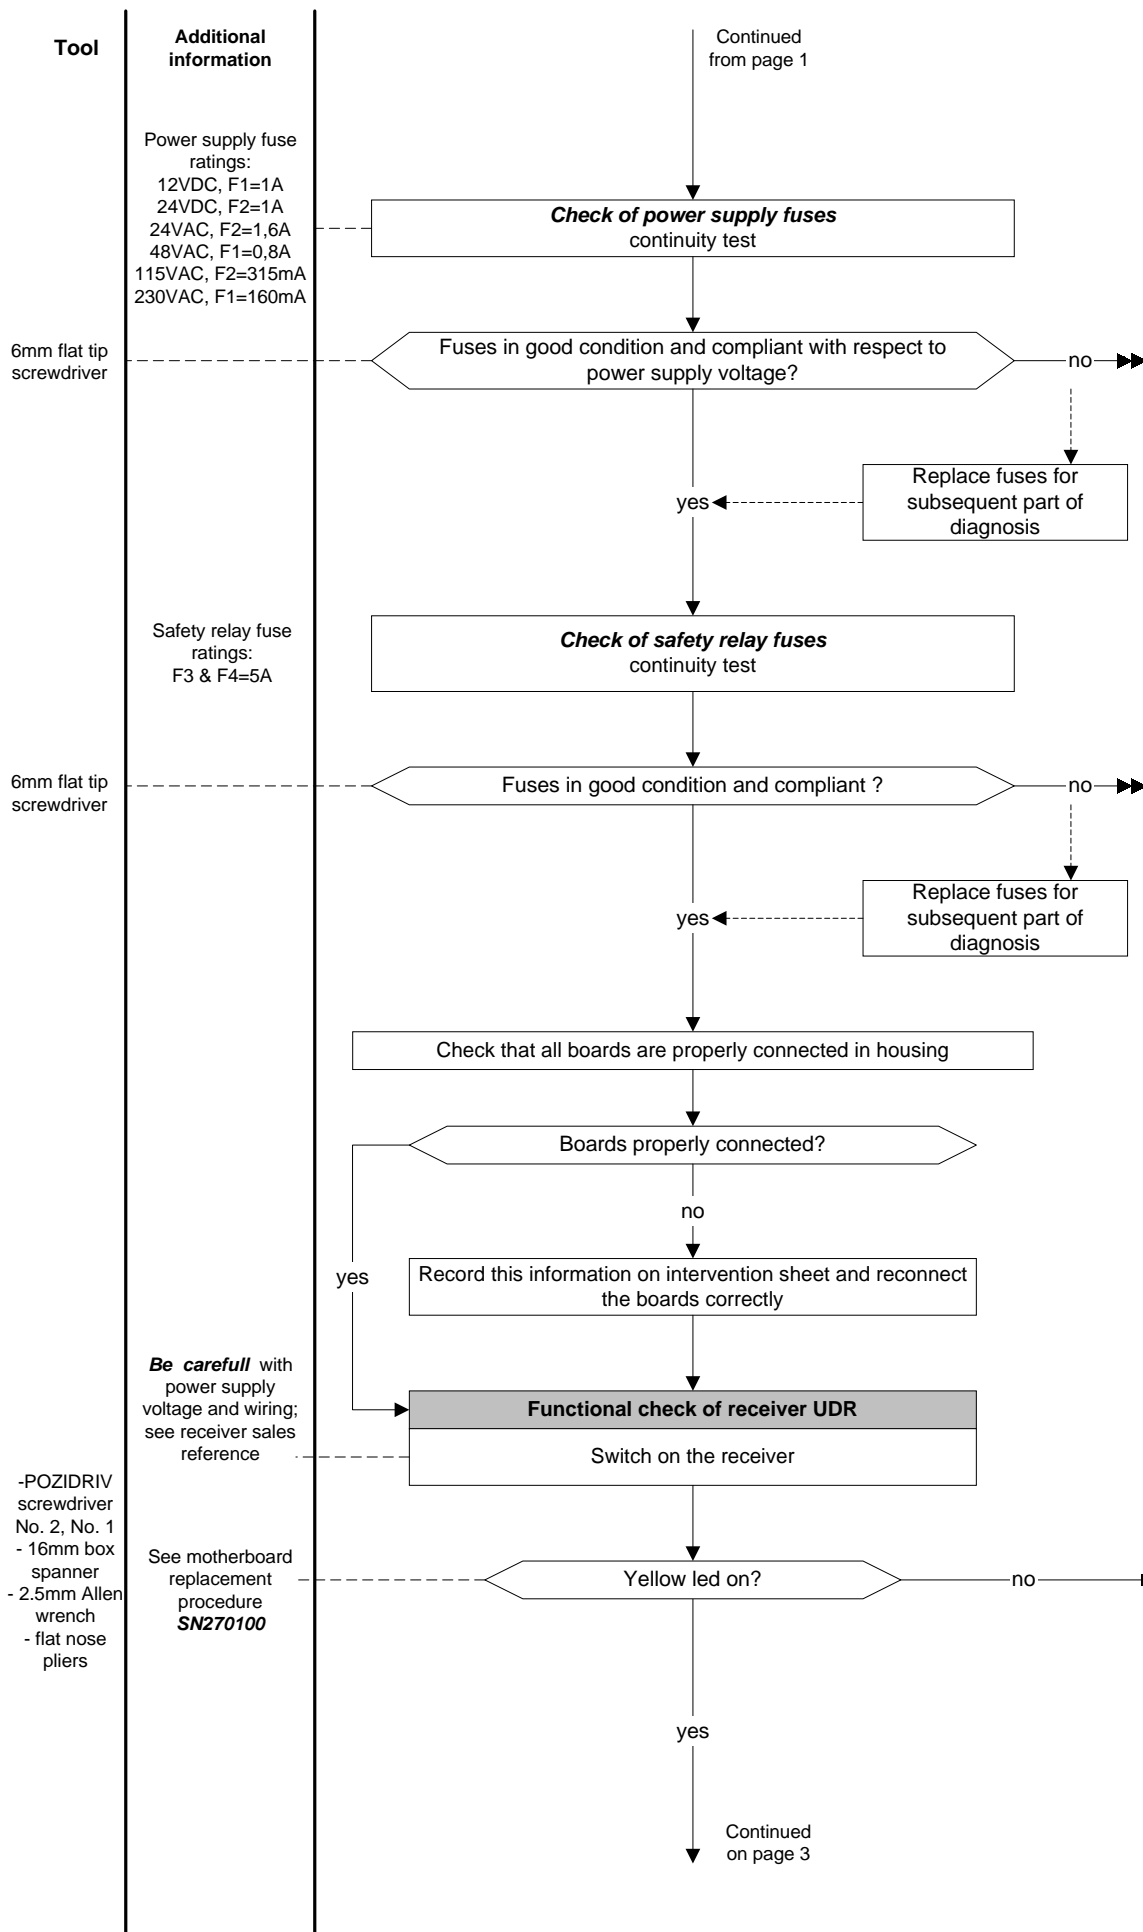

Symbols:

➡➡: Continuee Diagnosis
■: Stop Diagnosis

sub-assy to be
replaced

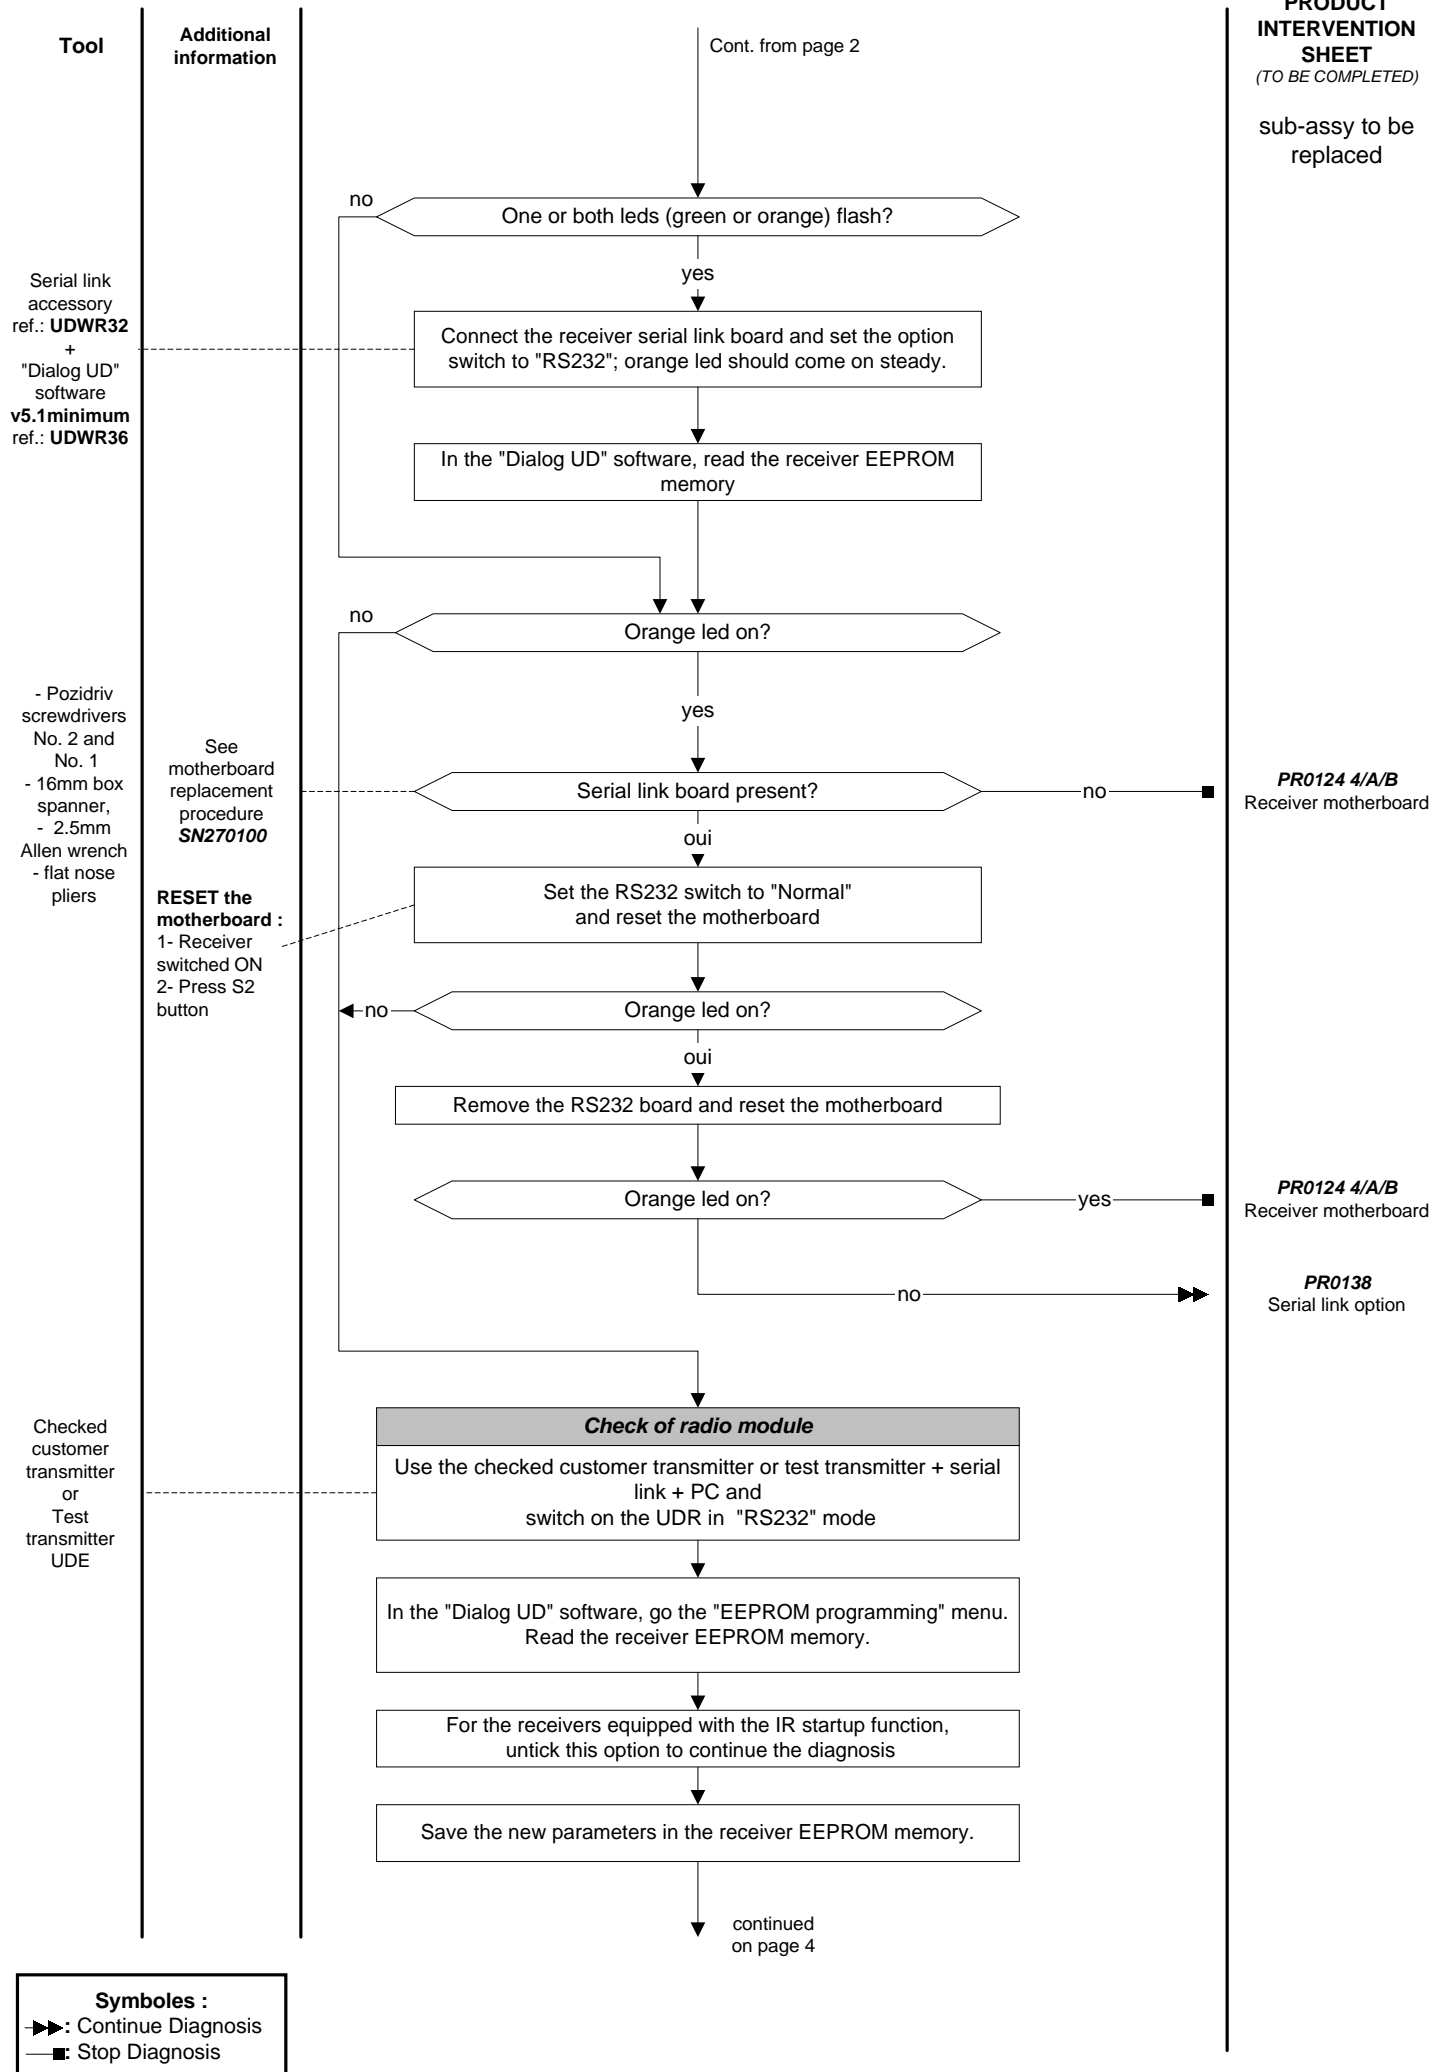

Symboles :

➡➡: Continue Diagnosis
■: Stop Diagnosis

Cont. from page
3

Set the serial option switch to "Normal" mode and go to the "Remote control UD" function in the "Dialog UD" software

Program the electronic key with receiver parameters (ID code, radio channel) and place it on transmitter

Go to "Test" menu in DialogUD software (check of radio quality rate)

Unlock the stop palmswitch button of the transmitter and press the "on" button

yes

Radio quality rate = 100 %

no

Lock the test transmitter stop
palmswitch buttonInstall the test radio module in place of
the radio module in the receiverUnlock the transmitter stop palmswitch
button and press the "on" buttonRadio quality rate = 100%
?

yes

PR0120 R or PR0208R
Receiver radio module

no

PR0124 4/A/B
Receiver motherboardDo you have the means to measure
the radio module characteristics

no

Radio module is
older than 5 years ?

yes

PR0120 R or PR0208R
Receiver radio module

no

Customer has
reported
transmission
cutouts ?

yes

PR0120 R or PR0208R
Receiver radio module

no

PR0120 R or PR0208R
Receiver radio moduleRadio module
performance is
satisfactory?

yes

Check of relay statesSafety and horn relays pull in
when "on" button of UDE is pressed?

no

PR0124 4/A/B
Receiver motherboard

yes

Measure the contact resistance of the safety relays, horn relay and
auxiliary relay (if auxiliary board is present)Relay contact resistance is $R < 2\Omega$?

no

PR0124 4/A/B
Receiver motherboard
UDWR35
Carte auxiliaire

yes

Continued
on page 5Test receiver
radio module
ref.: **PR0120R**- Pozidriv
screwdrivers
No. 2 and
No. 1
- 16mm box
spanner
- 2.5mm
Allen wrench
- flat nose
pliersSee receiver
radio module
replacement
procedure
SN270110See
motherboard
replacement
procedure
SN270100Jay
électronique
specific test
instrumentat.See receiver
radio module
replacement
procedure
SN270110Digital
multimeter**Symbols :**▶▶: Continue Diagnosis
■: Stop Diagnosis

**PRODUCT
INTERVENTION
SHEET**
(TO BE COMPLETED)


sub-assy to be replaced

PR0124 4/A/B
Receiver motherboard

PR0124 4/A/B
Motherboard

PR0122
Relay board

PR0122
Relay board

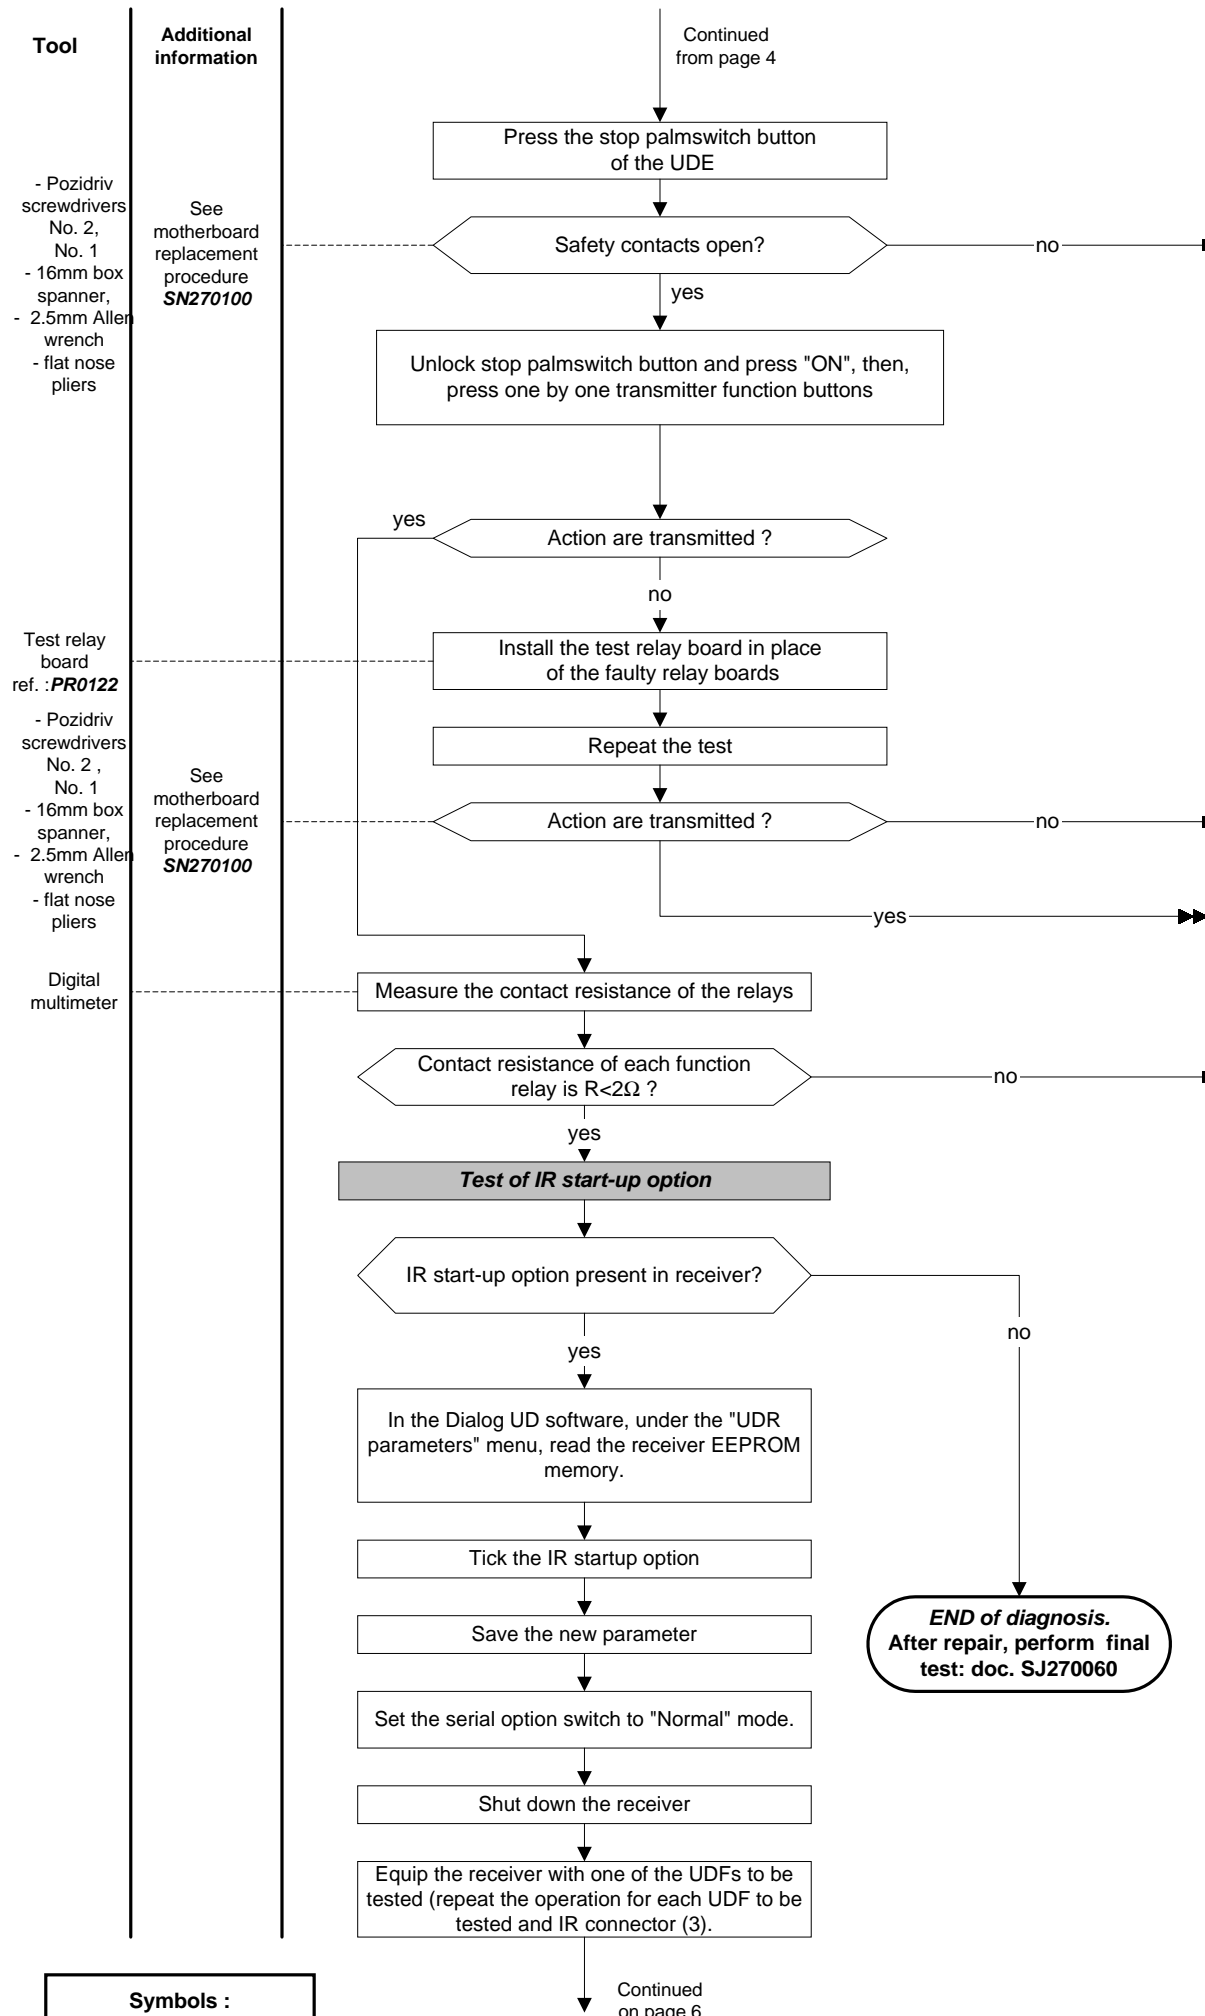

Symbols :

- ➡➡: Continue Diagnosis
- : Stop Diagnosis

**PRODUCT
INTERVENTION
SHEET**
(TO BE COMPLETED)

sub-assy to be replaced

PR0124 4/A/B
Motherboard

PR0134
UDF electronic board

PR0134
UDF electronic board

PR0133
Lens for IR module

Tool

**Additional
information**

- Pozidriv
screwdrivers
No. 2 ,
No. 1
- 16mm box
spanner,
- 2.5mm Allen
wrench
- flat nose
pliers
Torx
screwdriver
No. 10

See
motherboard
replacement
procedure
SN270100

See IR board
replacement
procedure
SN270095

Use lens of
test UDF

See IR board
replacement
procedure
SN270095

Torx
screwdriver
No. 10

Posidriv
screwdriver
No. 2

Continued
from page 5

Switch on the receiver

Unlock the stop palmswitch button of the transmitter
and press the green "on" button while pointing the
UDE toward the UDF of receiver to be tested (at a
minimum distance of 3m)

Receiver safety and horn relays
pull in and IR module led flashes?

no

Connect test UDF to receiver and
repeat the test

Receiver safety and
horn relays pull in and
IR module red led flashes?

no

yes

Repeat the test but at a distance of
20m between the UDE and the UDF

Receiver safety and
horn relays pull in and
IR module red led flashes?

no

Replace UDF lens and
repeat the test

Receiver safety and
horn relays pull in and
IR module red led flashes?

no


yes

yes

END of diagnostic.
After repair, perform final test :
doc. SJ270060


Symbols :

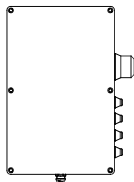

➡➡: Continue Diagnosis
■: Stop Diagnosis




Checked
customer
transmitter
or
test transmitter

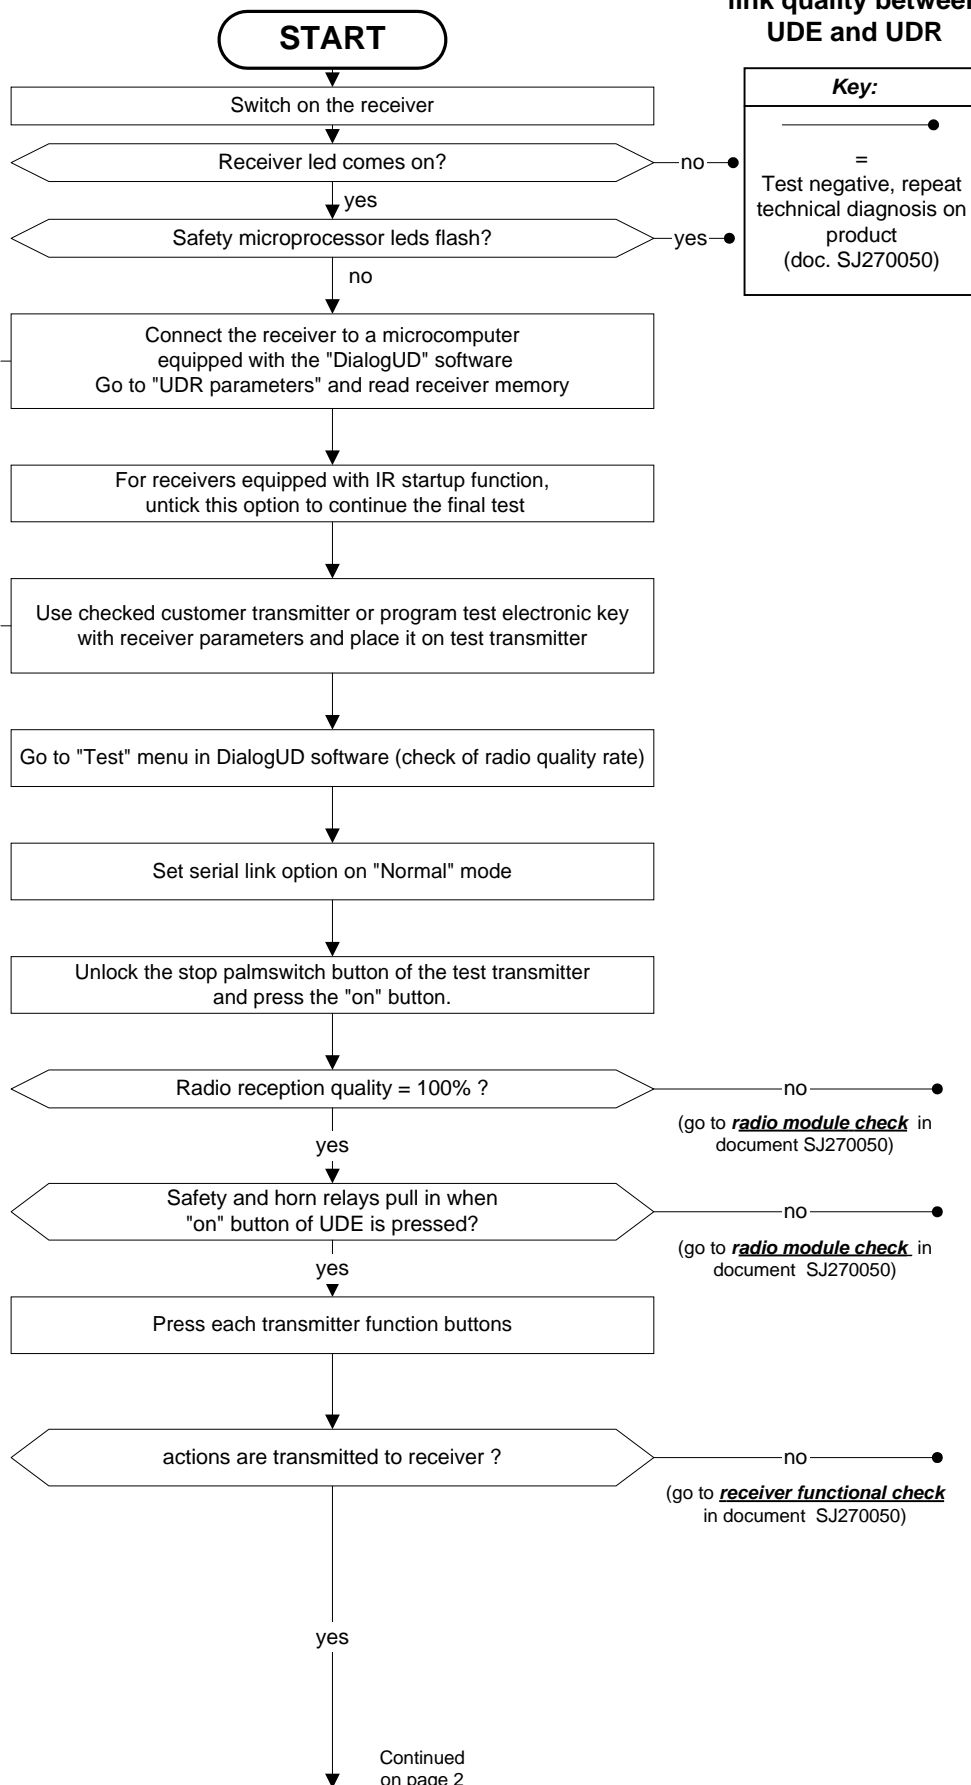NEW DialogUD 5.1
It allows to test radio
link quality between
UDE and UDR



Index	Modif. No.	Modification	Name	Date	Approved by:		
02	T 727	Update with DialogUD v5.1	E.DECHAME	24.06.04	Tech:		Market:
<div></div> <div>BPS - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tel: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</div>		Final test		Format:	A4		
		UDR		Filename:	SJ270060-02-EN.VSD		
		DOC REF.:	SJ 270060.02			Page:	1 / 2
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.							


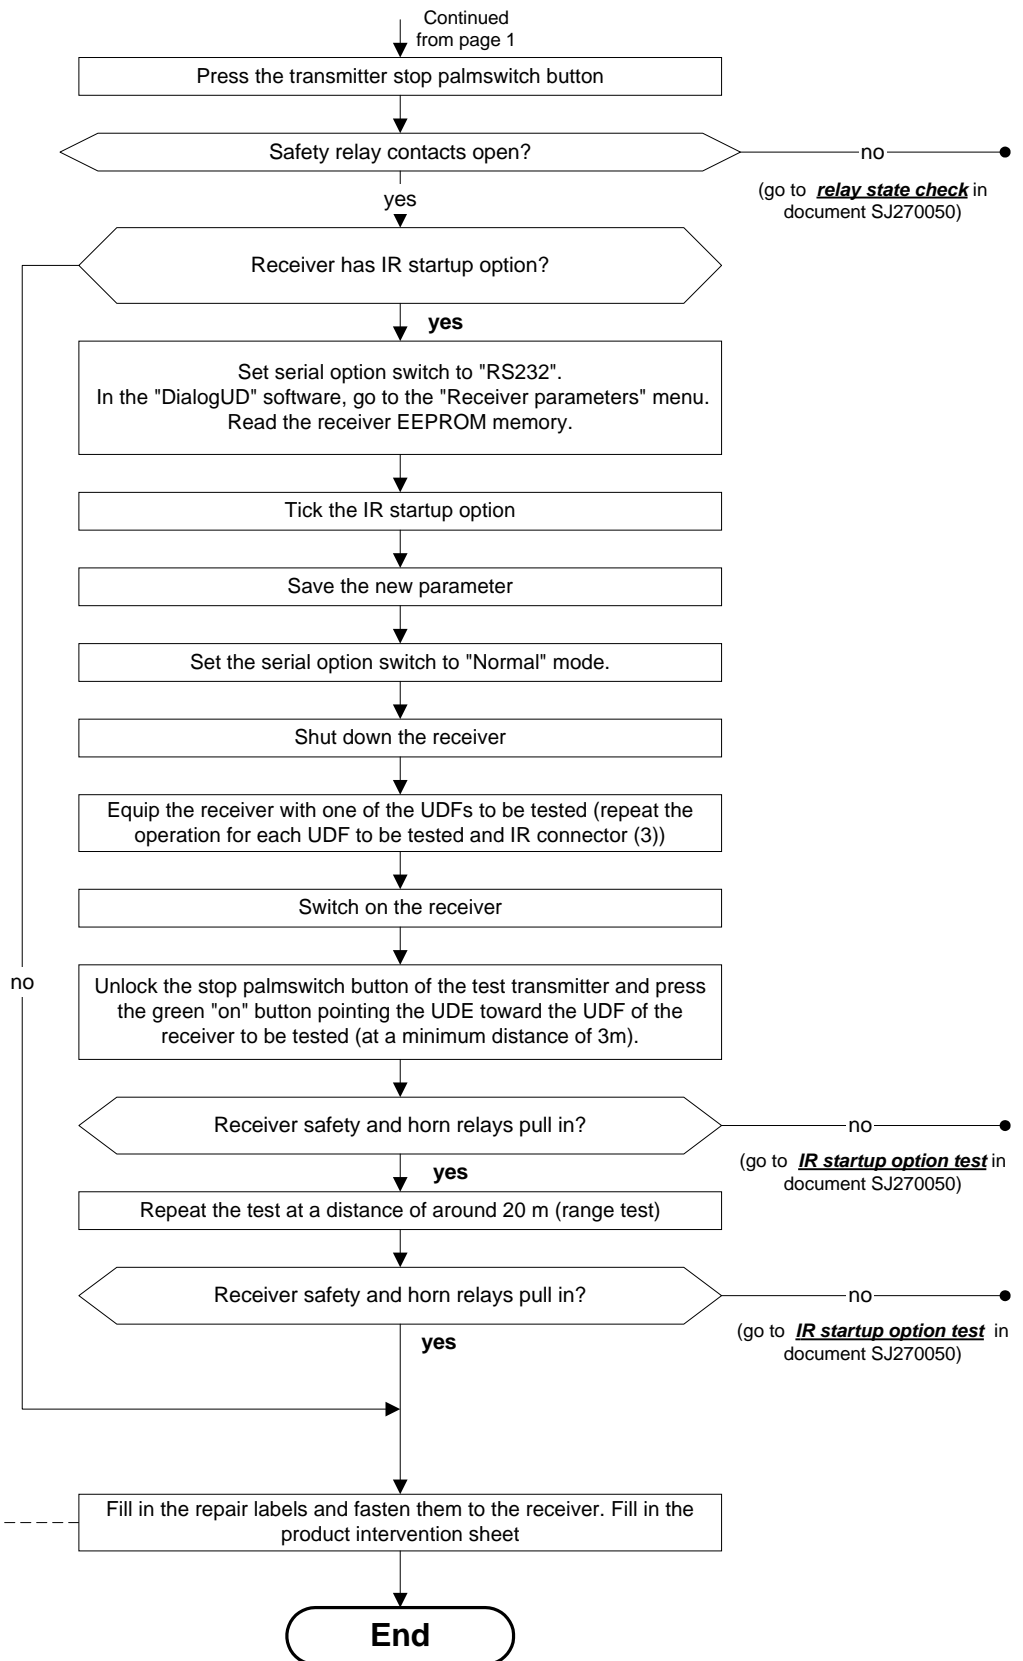


Changing the UDR receiver housing

Receiver housing :

References : **PR0125** Receiver housing without serial link option (cover+housing+cable gland+screws+1 pre-printed descriptive label)
PR0125 1 Receiver housing with serial link option (cover+manufactured housing+cable glands+screws+1 pre-printed descriptive label)

Tools : n°2, n°1 Pozidriv screwdriver, 16mm box spanner, flat noze pliers, spanners kit **PR0142**

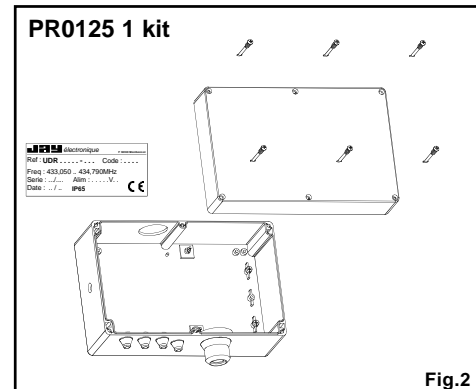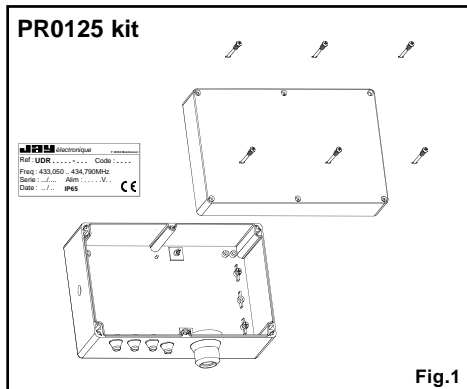


Disassembly:

- 1- Open the UDR housing using the No. 2 Pozidriv screwdriver by loosening the quarter-turn screws.
- 2- Disconnect the wires connected to the various receiver connectors taking care to carefully mark the wires.
- 3- Remove the n°A relay board and the auxiliary board if present to access the motherboard mounting screws.
- 4- **Housing with serial option only, otherwise : go to step 5**
 - 4.1- Using the No. 1 Pozidriv screwdriver, remove the two screws securing the serial link board
 - 4.2- Using spanner in **PR0142** kit to remove the nut securing the serial link interface to the housing.
 - 4.3- Remove the serial option from the receiver housing.
- 5- Unscrew the outer nut of the BNC antenna connector using the 16mm box spanner.
- 6- Remove the washer from the BNC connector and remove the connector from its housing.
- 7- Remove the four screws securing the motherboard.
- 8- Using the flat noze pliers, unclip the two white spacers on the housing.
- 9- Remove the motherboard from the housing.

Assembly:

- 1- Fit the new motherboard in the new housing by clipping the two spacers of the housing to the motherboard.
- 2- Secure the motherboard with the 4 mounting screws.
- 3- Engage the BNC connector in the housing with the connector flat aligned with the locator on the antenna plate.
- 4- Fit the washer on the BNC.
- 5- Secure the BNC connector with the nut using the 16mm box spanner.
- 6- Install relay board No. A and the auxiliary board if used.
- 7- **Housing with serial option only, otherwise : go to step 8**
 - 7.1- Run the serial option board through the hole of the housing provided for this purpose and through the clamping nut.
 - 7.2- Connect and secure the serial link board to the motherboard by its two mounting screws.
 - 7.3- Tighten the interface nut on the housing with spanner in **PR0142** kit.
- 8- Re-wire the customer wiring on the receiver if necessary.
- 9- Close the housing.
- 10- Fill in the pre-printed descriptive label and fasten it to location indicated in document **SN270120**

Index	Modif. No.	Modification	Name	Date	Approved by:			
02	T 727	Assembly/Disassembly procedures updated	E.DECHAME	05.07.04	Tech:		Market:	
 BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tel: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44		Changing the receiver housing UDR	Format:	A4				
			Filename:	SN270090-02-EN.P65				
			DOC REF.:	SN 270090.02	Page:	1 / 1		
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.								

Changing the UDF IR module electronic board


UDF IR electronic board :

Reference : PR0134

Tools : n°2 Pozidriv screwdriver, n°10 Torx screwdriver, Soldering iron


Parts list :

Item	Description	Quantity
A	UDF IR electronic board	1
B	Torx 10 screw	2

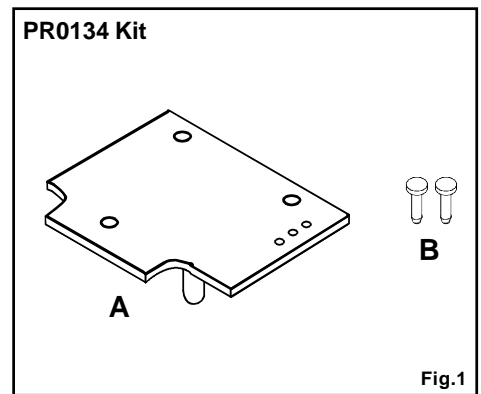




Disassembly :

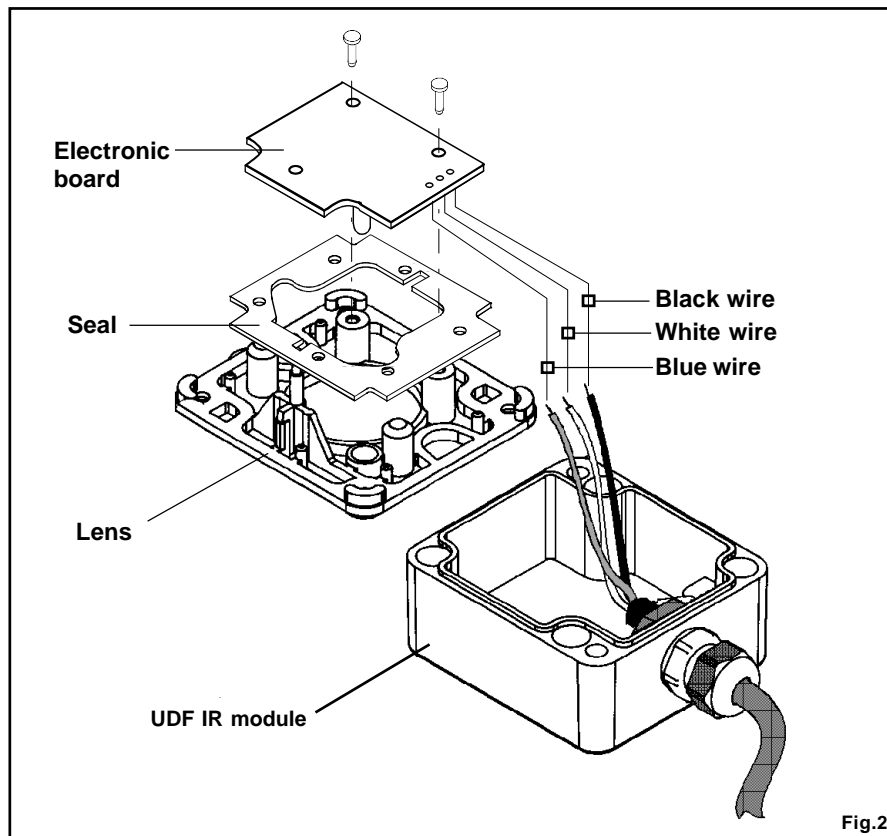- 1- Open the UDF housing using the no.2 Pozidriv screwdriver.
- 2- Remove screws from the UDF electronic board.
- 3- Unsolder UDR - UDF connection wires from the UDF electronic board.



Assembly :

- 1- Solder connection wires on electronic component side (pay attention to color and position see fig.2)
- 2- Secure the electronic board on lens with 2 torx no.10 screws.
- 3- Close UDF housing.

Index	Modif. No.	Modification	Name	Date	Approved by:			
01	T 727	Minor update	E.DECHAME	05.07.04	Tech:		Market:	
<div></div> <div>BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tel: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</div>		Changing the IR module electronic board UDF	Format:	A4				
			Filename:	SN270095-01-EN.P65				
			DOC REF.:	SN 270095.01				Page:

Changing the receiver motherboard


Receiver motherboard kits :

References : PR0124 A motherboard UDR 24-48VAC
PR0124 B motherboard UDR 115-230VAC
PR0124 4 motherboard UDR 12-24VDC

Tools : n°2 n°1 Pozidriv screwdrivers, 16mm box spanner,
electronic flat nose plier, 2.5mm Allen wrench, Spanner
kit PR0142

Parts list :

Item	Description	Quantity
A	Mounting screws	4
B	Pre-printed descriptive labels	2
C	UDR motherboard	1

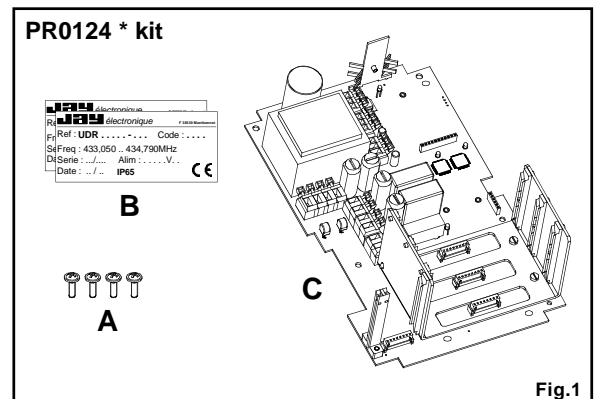



Note : Please refer to the instructions described in the document **SN270080** for motherboard / radio module pairing, according to UDR version number.

Disassembly:

- 1- Open the UDR housing using the No. 2 Pozidriv screwdriver by loosening the quarter-turn screws.
- 2- Disconnect the wires connected to the various receiver connectors taking care to mark the wires.
- 3- Remove the auxiliary board if present and relay boards
- 4- **Housing with serial option only, go to step 5. Otherwise:**
 - 4.1- Using the No. 1 Pozidriv screwdriver, remove the 2 screws securing the serial link board.
 - 4.2- Using the spanner from **PR0142** kit, remove the nut securing the serial link interface to the housing.
 - 4.3- Pull out the serial link board through the housing.
- 5- Remove the nut securing the BNC using the 16mm box spanner.
- 6- Remove the washer from the BNC and remove the BNC from its housing.
- 7- Remove the screw securing the receiver radio module.
- 8- Unplug the radio module and remove the assembly formed by the radio module + BNC connector from the motherboard.
- 9- Remove the 4 screws securing the motherboard.
- 10- Using the electronics flat noze pliers, unclip the two white spacers of the housing.
- 11- Remove the motherboard from the housing.
- 12- Remove the Allen screw from the antenna plate using the 2.5 mm Allen wrench.
- 13- Remove the antenna plate.

Assembly:

- 1- Fit the motherboard in the housing by clipping the 2 spacers of the housing to the motherboard.
- 2- Secure the motherboard with the 4 mounting screws.
- 3- Install the antenna plate on the motherboard and secure it with the Allen screw.
- 4- Carefully plug the radio module into the motherboard, running the antenna wire between the two IR connectors.
- 5- Secure the radio module with its mounting screw to the motherboard using the No. 1 Pozidriv screwdriver.
- 6- Engage the BNC connector in the housing with the connector flat aligned with the locator on the antenna plate.
- 7- Fit the washer on the BNC.
- 8- Secure the BNC with the nut using the 16mm box spanner.
- 9- Install the relay boards and the optional board if used.
- 10- **Receiver with serial option only, go to step 11. Otherwise:**
 - 10.1- Run the serial option board through the hole in the housing provided for this purpose and through the clamping nut.
 - 10.2- Connect and secure the serial link board to the motherboard by its two mounting screws.
 - 10.3- Tighten the interface nut on the housing with spanner from **PR0142** kit.
- 11- Re-wire the customer wiring to the receiver if necessary.
- 12- Fill in pre-printed descriptive labels and fasten them to locations indicated in document **SN270120**.
- 13- Close the housing.

Index	Modif. No.	Modification	Name	Date	Approved by:			
02	T 727	Descr.labels added, note about mobile / radio module pairing	E.DECHAME	06.07.04	Tech:		Market:	
<div><p>BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tel: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</p></div>		Changing the receiver motherboard UDR	Format:	A4				
			Filename:	SN270100-02-EN.P65				
			DOC REF.:	SN 270100-02				Page:

Changing the UDR receiver radio module

Receiver radio module :

References : **PR0120 R** Radio module for UDR version A001 to B002 included
PR0208 R Radio module for UDR version B003 and higher

Tools : n°2 and n°1 Pozidriv screwdrivers, 16mm box spanner .

Parts list :

Item	Description	Quantity
A	Mounting screw	1
B	Receiver radio module	1
C	Spacer	1
D	BNC washer	1
E	BNC nut	1

PR0120 R
 or
PR0208 R


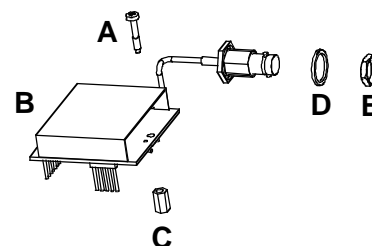


Fig.1

Note : Please refer to the instructions described in the document **SN270080** for motherboard / radio module pairing, according to UDR version number.

Disassembly:

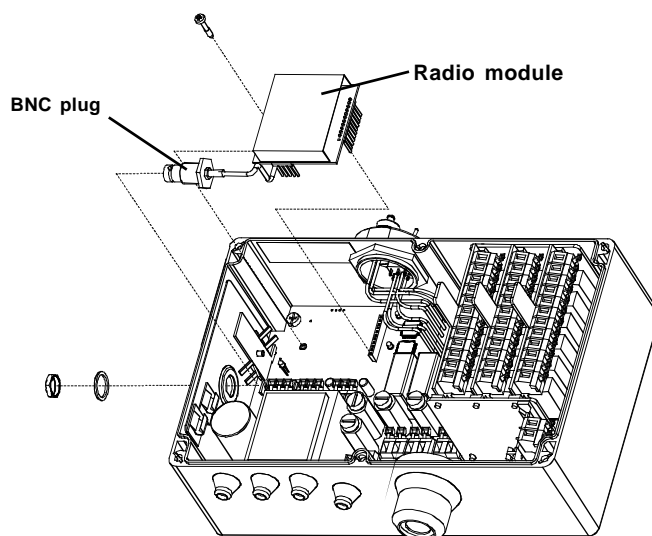


- 1- Open the UDR housing using the No. 2 Pozidriv screwdriver by loosening the quarter-turn screws.
- 2- Unscrew the outer nut on the BNC using the 16mm box spanner.
- 3- Remove the washer from the BNC and remove the BNC from its housing.
- 4- Remove the screw securing the receiver radio module with n°1 Pozidriv screwdriver.
- 5- Unplug the radio module and remove the assembly from the motherboard.



(UDR represented with serial link option and auxiliary board)

Assembly:

- 1- Carefully connect the new radio module to the motherboard (see fig.2).
- 2- Secure the radio module with its mounting screw to the motherboard using the No. 1 Pozidriv screwdriver.
- 3- Engage the BNC connector in the housing with the connector flat aligned with the locator on the antenna plate.
- 4- Fit the washer on the BNC.
- 5- Secure the BNC connector with its nut using the 16mm box spanner.
- 6- Close the receiver housing.

Index	Modif. No.	Modification	Name	Date	Approved by:			
02	T 727	Note about mobo / radio module pairing	E.DECHAME	06.07.04	Tech:		Market:	
<div></div> <p>BP5 - 176, rue Lavoisier MONTBONNOT - St MARTIN - 38334 St ISMIER CEDEX Tel: +33.(0)4.76.41.44.00 Fax: +33.(0)4.76.41.44.44</p>		Changing the receiver radio module UDR	Format:	A4				
		Filename:	SN270110-02-EN.P65					
		DOC REF.:	SN 270110.02				Page:	1 / 1
This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.								

This document is the property of Jay Electronique. Reproduction or disclosure prohibited without written authorization.

UDE transmitter

Grey key identification sheet

KEEP THIS DOCUMENT

Read and keep this document in a safe location.

It contains important information concerning the key which you have just received

For operation of your radio remote control, refer to the UD installation and user manual.

An identification No. is engraved on the side of the electronic key.


This key contains all the parameters of your transmitter, ensuring correct communication with the associated receiver (Frequency channel, identification code, dead man time ...)

Please indicate this identification No. when ordering a new identical key.

Please identify your electronic key using the label supplied with the key.

Fill in the identification of the equipment controlled by this key.

UDE transmitter electronic key

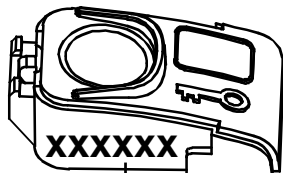

(6-digit number engraved on
electronic key)

Electronic key parameter label : (to be stuck by the repairman)

Equipment : (to be filled in by the customer)

